



Rear Bumper

Removal


1. Raise the vehicle on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the electrical connectors.

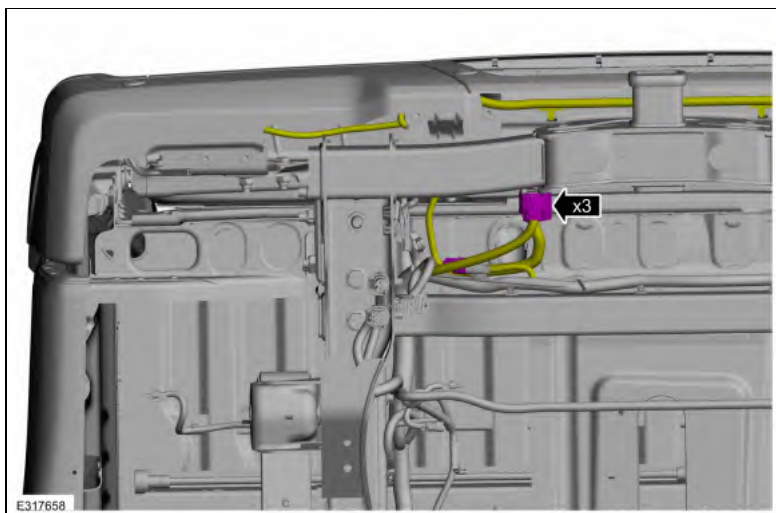

3. Remove the rear bumper center bracket bolts.
Torque: 22 lb.ft (30 Nm)

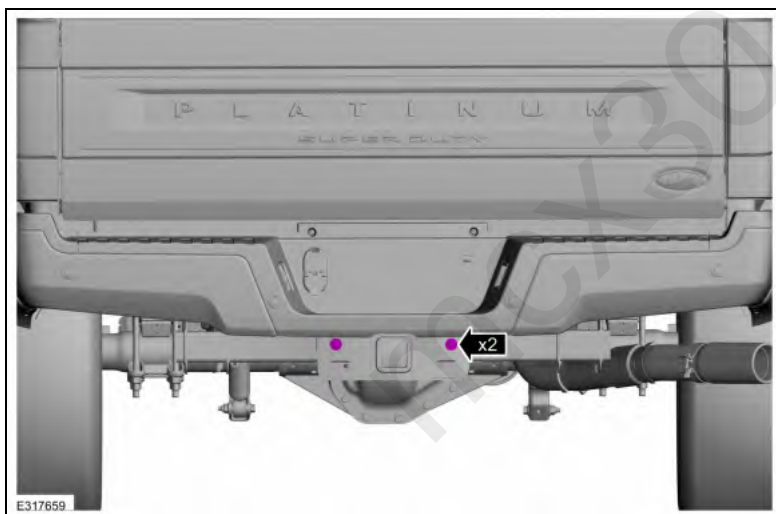

4. With the help of an assistant.
Remove the nuts and the rear bumper assembly.
Torque: 111 lb.ft (150 Nm)

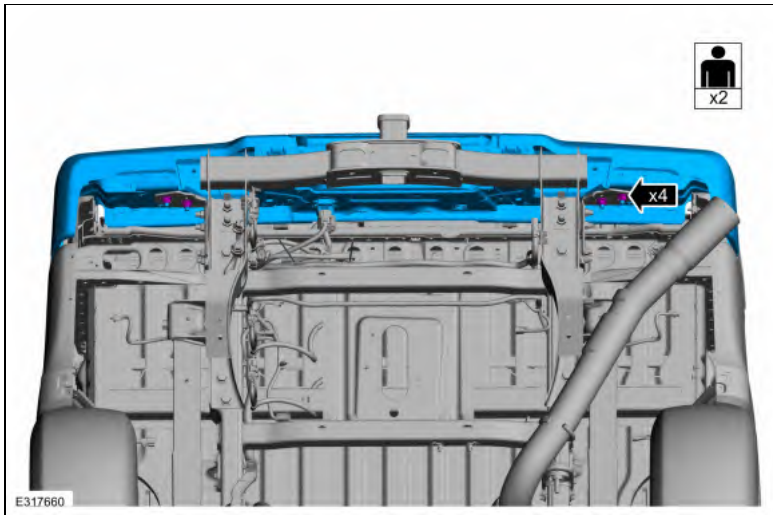

Installation

- 1. To install, reverse the removal procedure.

mcx30.com