


Front Bumper


DISASSEMBLY

NOTE: The disassembly procedure may contain assembly details.


1. Remove the front bumper.
Refer to: Front Bumper (501-19 Bumpers, Removal and Installation).
2. **NOTE:** The location and number of wiring harness retainers may vary based on vehicle application.
If equipped.
Detach the wiring harness retainers and remove the engine block heater wiring harness.

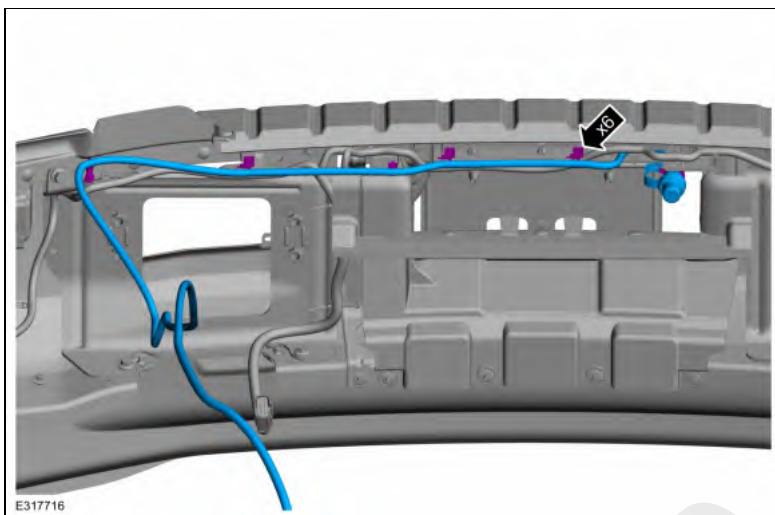


3. Remove the push pins and the side air deflectors.

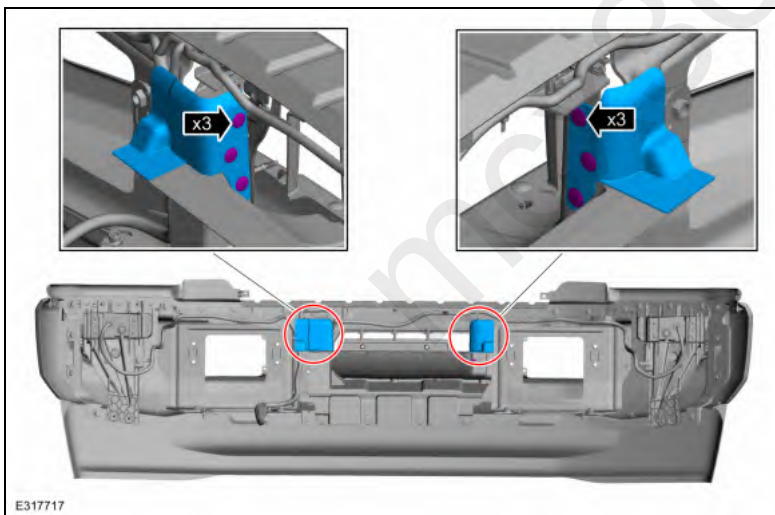

4.
 - Disconnect the foglamp electrical connectors.
 - Detach the wiring harness retainers and remove the front bumper wiring harness.

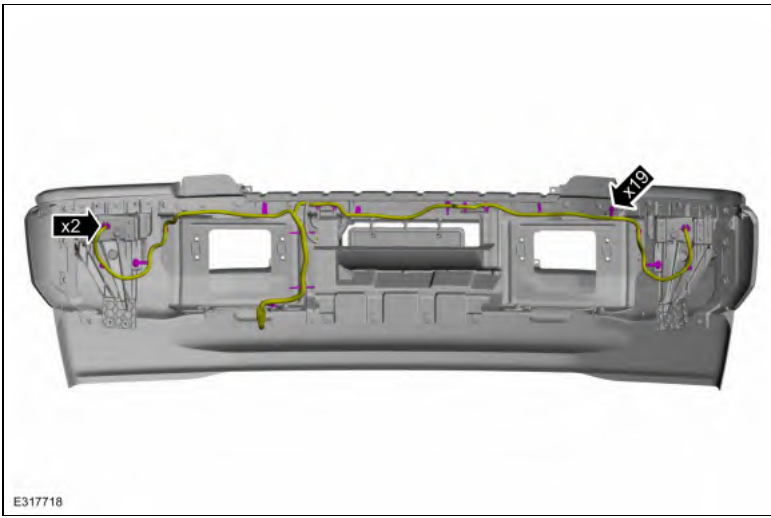


5. Remove the screws and the center support.

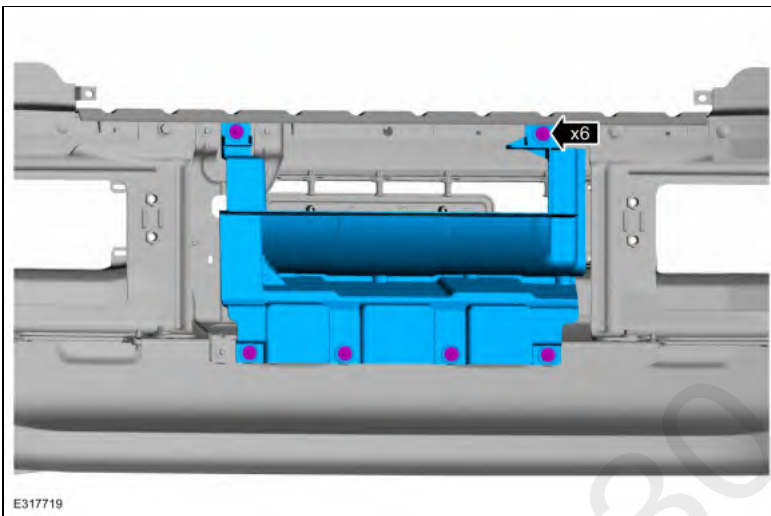


6. If equipped.
Remove the screws and the CCM bracket.
Torque: 42 lb.in (4.8 Nm)


mcx39.com

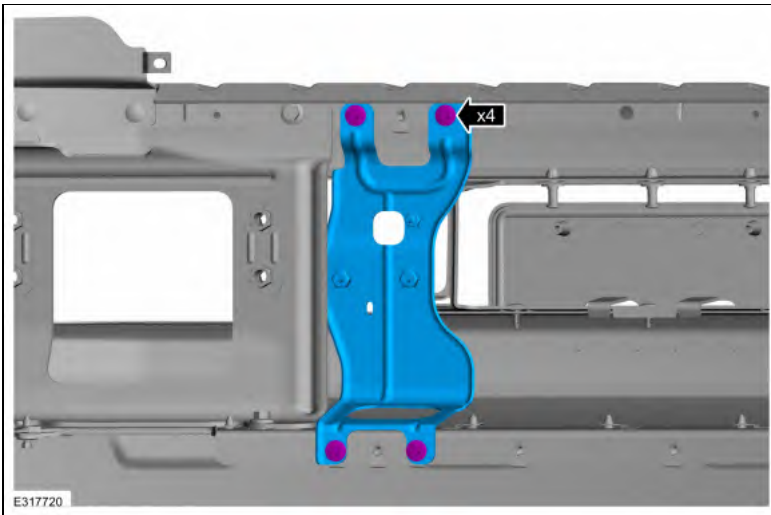


7. On both sides.
Remove the trim pins and the upper bumper seal.

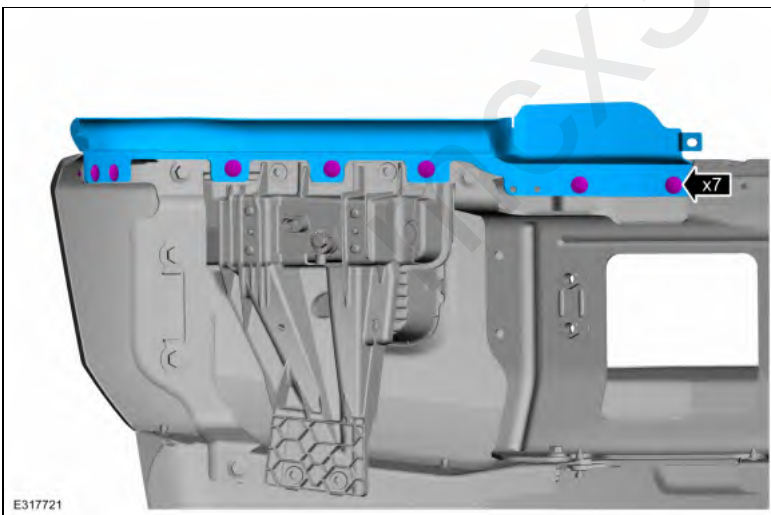


8. On both sides.
Remove the bolts and the fog lamp bracket assembly.
Torque: 53 lb.in (6 Nm)

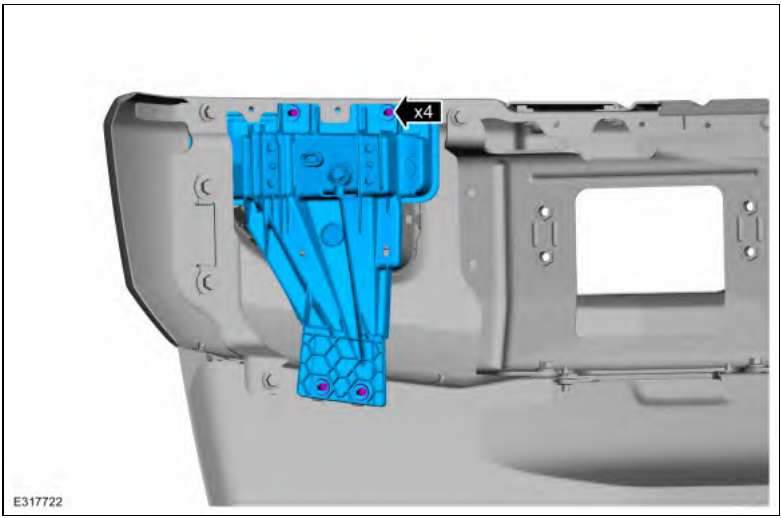


9. On both sides.
Remove the bolts and the outer bracket.
Torque: 18 lb.ft (25 Nm)

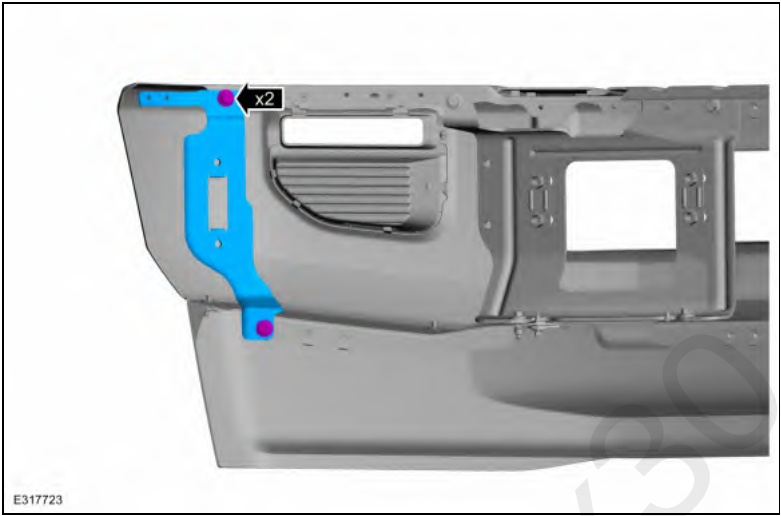


10. On both sides.
Remove the bolts and the front bumper bracket.
Torque: 18 lb.ft (25 Nm)

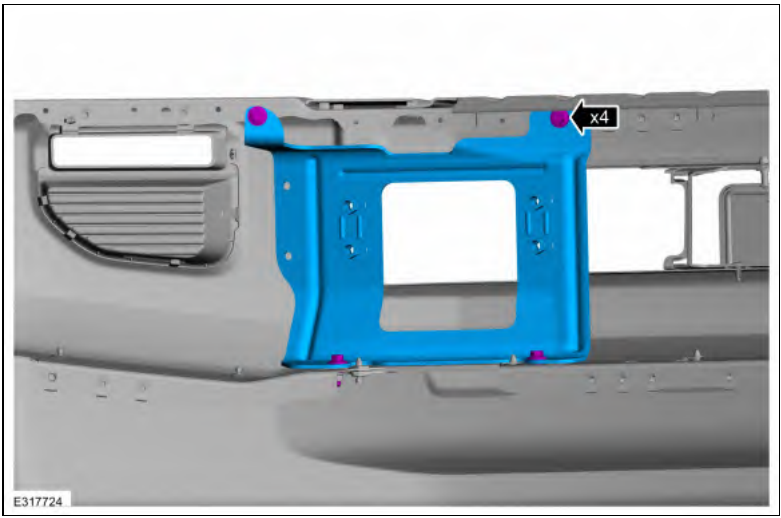


11. If equipped.
Release the tabs and remove the license plate bracket.

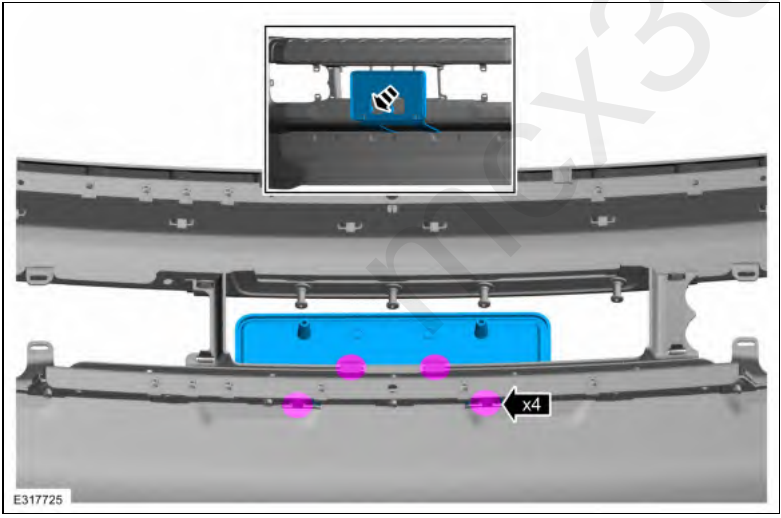


12. Remove the push pins and the front bumper grill.

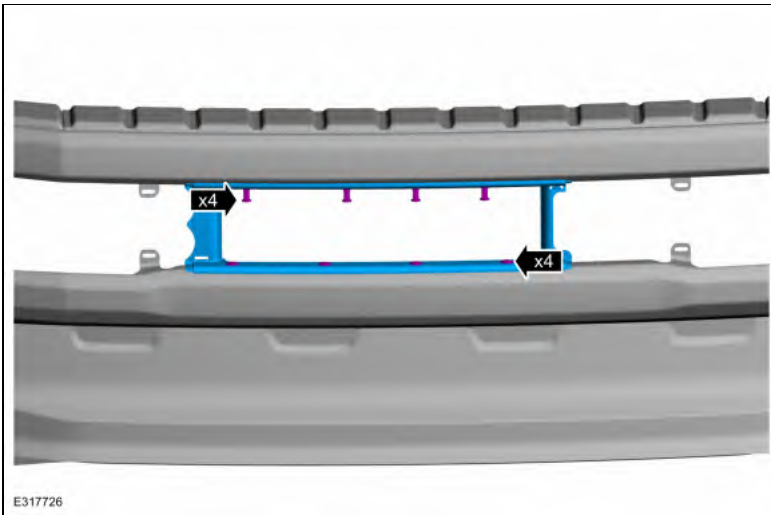


13. On both sides.
Remove the clips, release the tabs and remove the foglamp bezel.

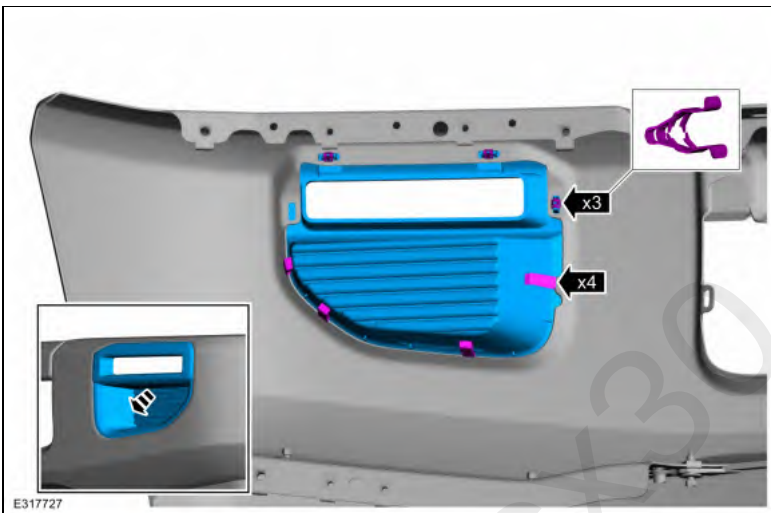

14. Release the tabs and remove the front step plate.

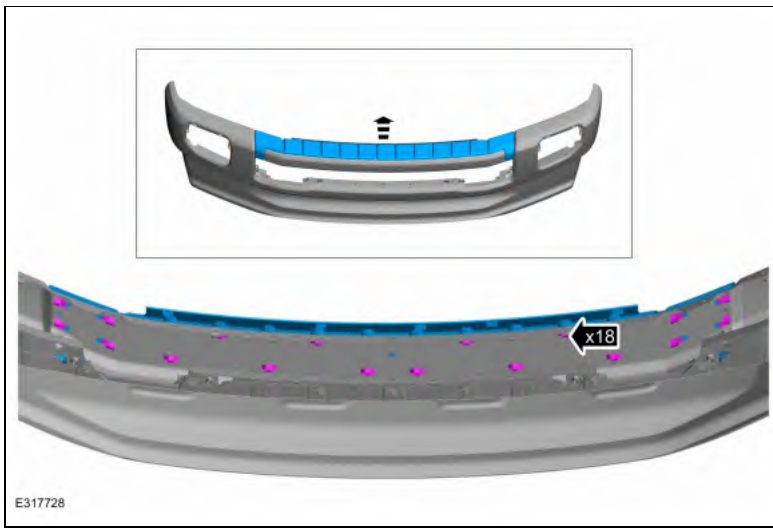

15. Remove the screws and the front bumper lower valence panel.

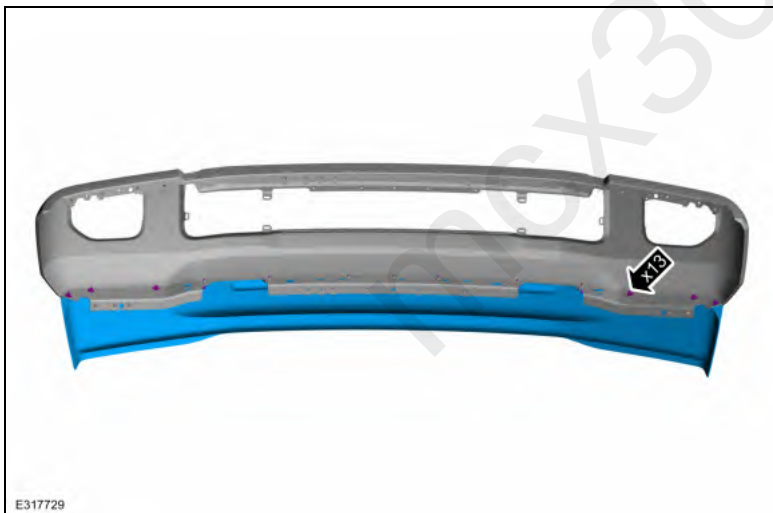

ASSEMBLY

1. To assemble, reverse the disassembly procedure.
2. Adjust the fog lamp.
Refer to: Front Fog Lamp Adjustment (417-01 Exterior Lighting, General Procedures).

