

Front Center Seatbelt Buckle - Crew Cab/Super Cab

Removal

NOTE: Removal steps in this procedure may contain installation details.

 
1. Remove the front center seat.
Refer to: Front Center Seat (501-10A Front Seats, Removal and Installation).
2.
Lift the seat cushion.
 1. Release the seat cushion latch.
 2. Lift the seat cushion.



3. Remove the cup holder.




4. Remove the screws and the seat storage tray.




5. Lower the seat cushion.




6. Release the seat latch and fold the seat backrest down.

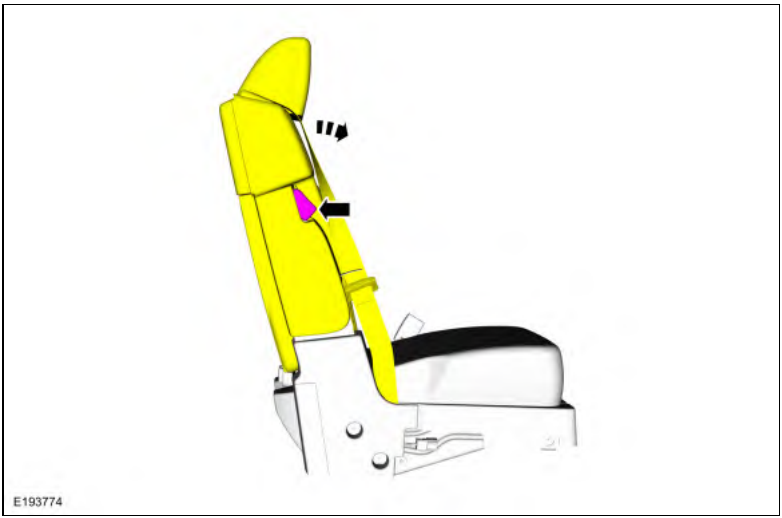


7. Remove the rear cup holder assembly.
1. Release the rear cup holder assembly retainers.
 2. Disconnect the auxiliary power point electrical connector.

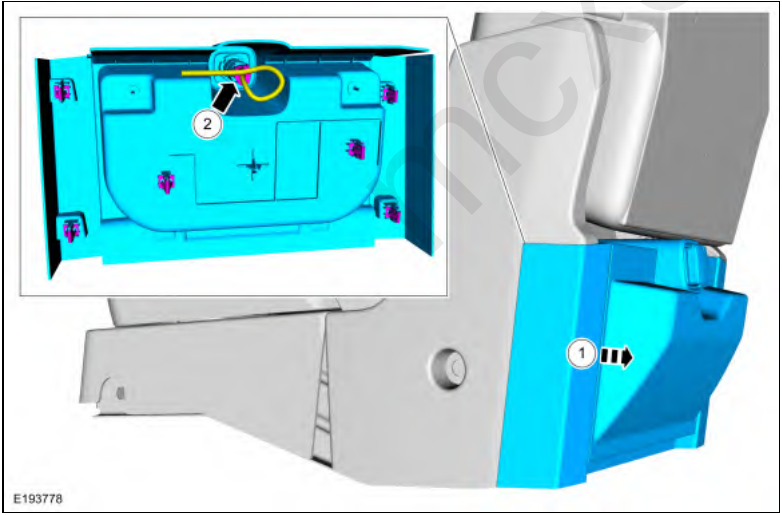

8. Remove the screws, release the retaining clips and remove the LH side shield.

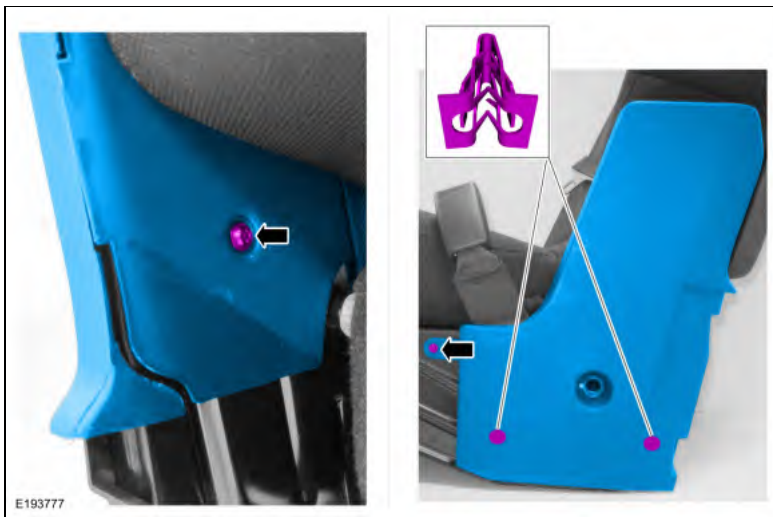

9. Remove the bolt and the seatbelt buckle.
Torque: 30 lb.ft (40 Nm)

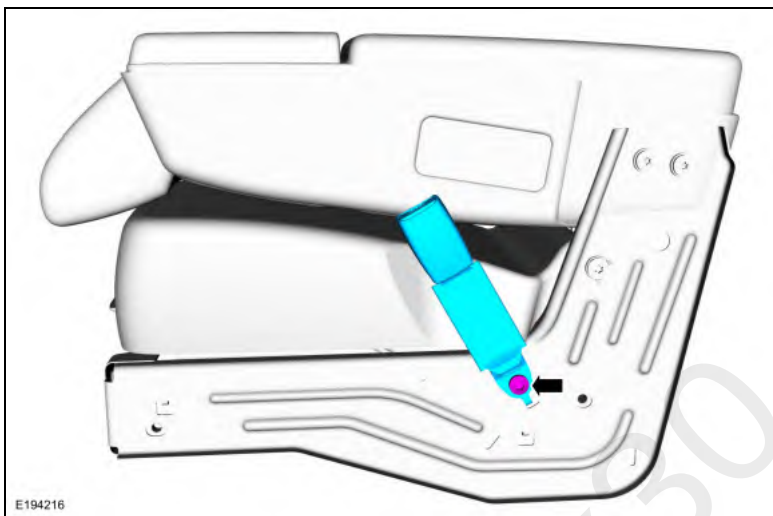

Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Check the seatbelt system for correct operation.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).