

Front Center Seatbelt Retractor - Regular Cab


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Press the locking tab and disconnect the seatbelt from the detachable seatbelt anchor.



2. Remove the load space trim panel.
Refer to: Loadspace Trim Panel - Regular Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Remove the bolts and position the seatbelt guide aside.
Torque: 30 lb.ft (40 Nm)

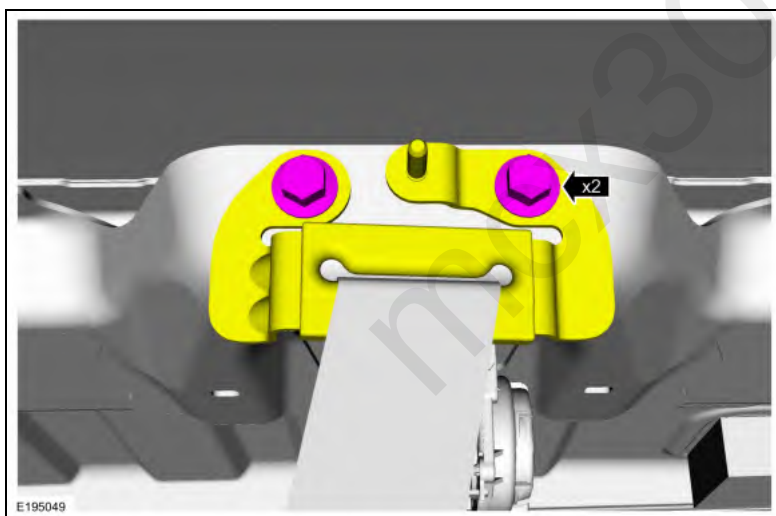

4. Remove the bolt and the seatbelt retractor.
Torque: 30 lb.ft (40 Nm)

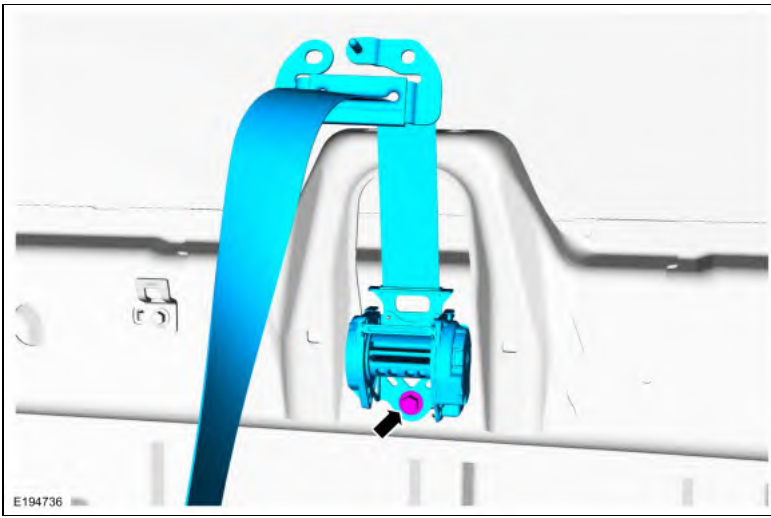

Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

- 1. To install, reverse the removal procedure.
- 2. Check the seatbelt system for correct operation.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).

mcx30.com