

Front Center Seatbelt Retractor - Crew Cab/Super Cab


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the front center seat.
Refer to: Front Center Seat (501-10A Front Seats, Removal and Installation).
2. Remove the front center seat backrest.
Refer to: Front Center Seat Backrest - Crew Cab/Super Cab (501-10A Front Seats, Removal and Installation).
3. Remove the front center seat backrest cover.
Refer to: Front Center Seat Backrest Cover - Crew Cab/Super Cab (501-10A Front Seats, Removal and Installation).
4. Remove the backrest foam while feeding the seatbelt through the foam opening.



5. Remove the screws and the backrest/armrest bracket while feeding the seatbelt through the bracket opening.

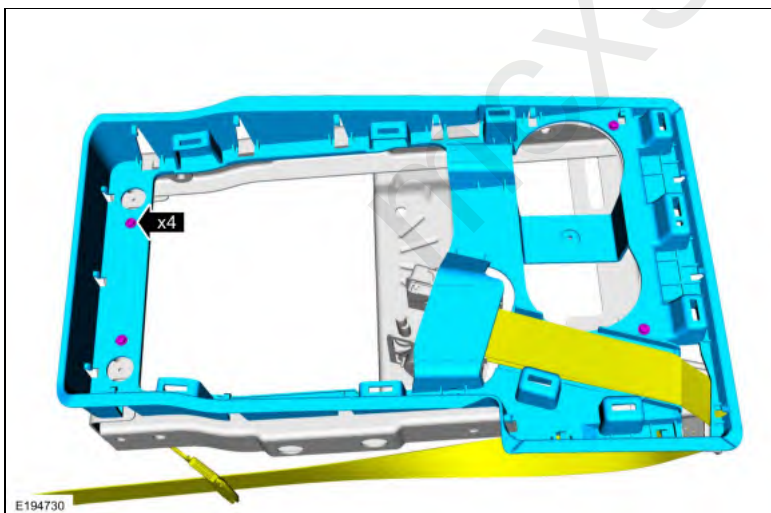

6. Remove the bolt and the seatbelt retractor.
Torque: 30 lb.ft (40 Nm)

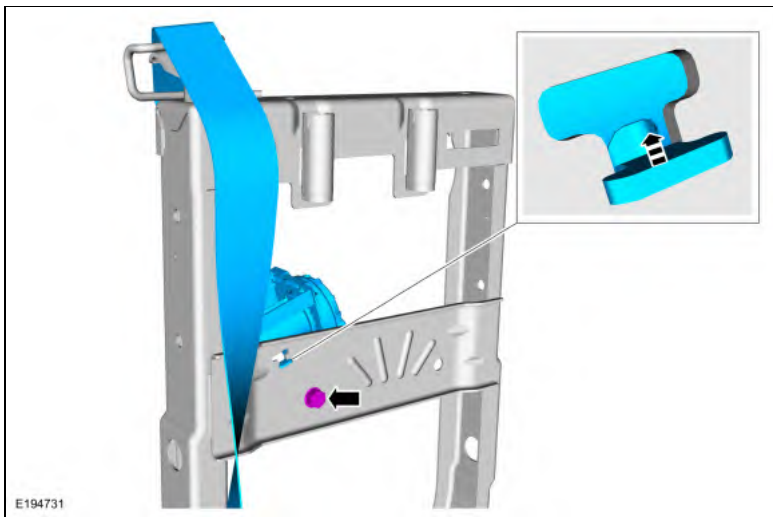

Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Check the seatbelt system for correct operation.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).

mcx30.com