


Front Seatbelt Buckle

Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: Driver seat shown, passenger seat similar.

1. Remove the front seat.
Refer to: Front Seat (501-10A Front Seats, Removal and Installation).
2. Remove the seatbelt buckle.
 1. Release the wiring harness retainers.
 2. Disconnect the electrical connector.
 3. Remove the bolt and the seatbelt buckle.
Torque: 30 lb.ft (40 Nm)
 4. Lift the elastic strap over the seatbelt buckle.

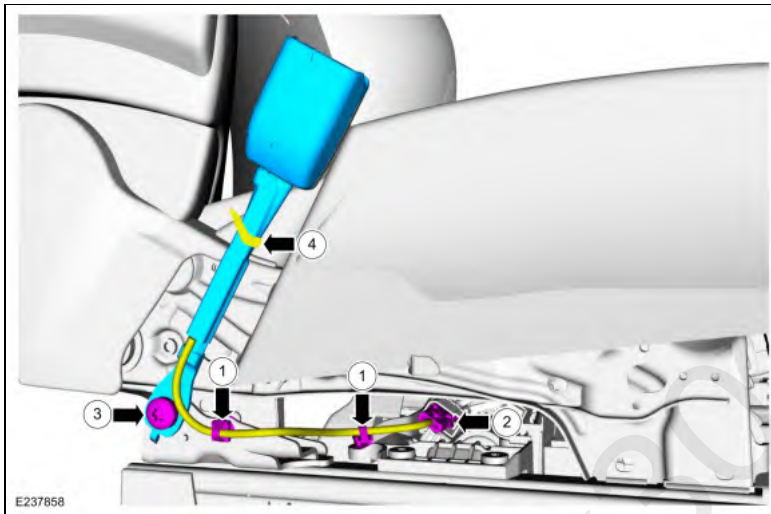

Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Check the seatbelt system for correct operation.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).