


Rear Center Seatbelt Retractor

Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: Crew Cab shown, Super Cab similar.


1. Remove the load space trim panel.
Refer to: Loadspace Trim Panel - Crew Cab/Super Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. If equipped.
Remove the subwoofer speaker.
Refer to: Subwoofer Speaker (415-00 Information and Entertainment System - General Information, Removal and Installation).
3. Position the rear center seatbelt anchor aside.
 1. Remove the nut.
Torque: 59 lb.ft (80 Nm)
 2. Remove the pin-type retainer.
 3. Position the rear center seatbelt anchor aside.
 4. Disconnect the electrical connector.

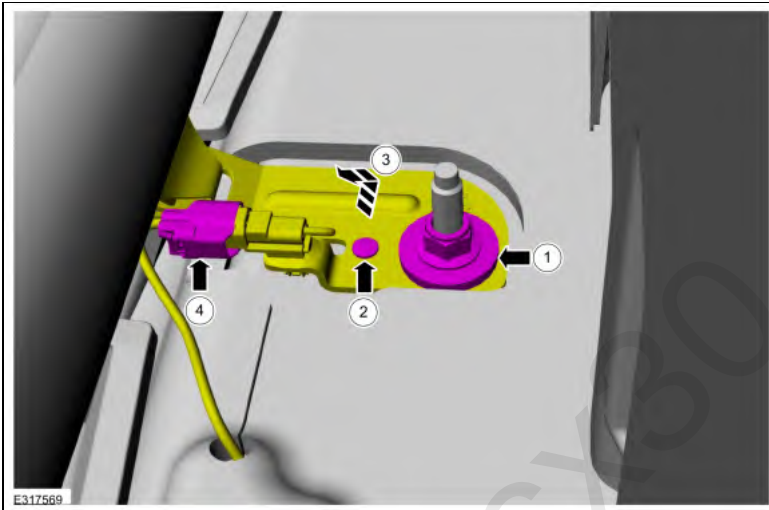


4. Lift the rear seat backrest up.




5. Pull the rear center seatbelt/buckle through the seat cushion.

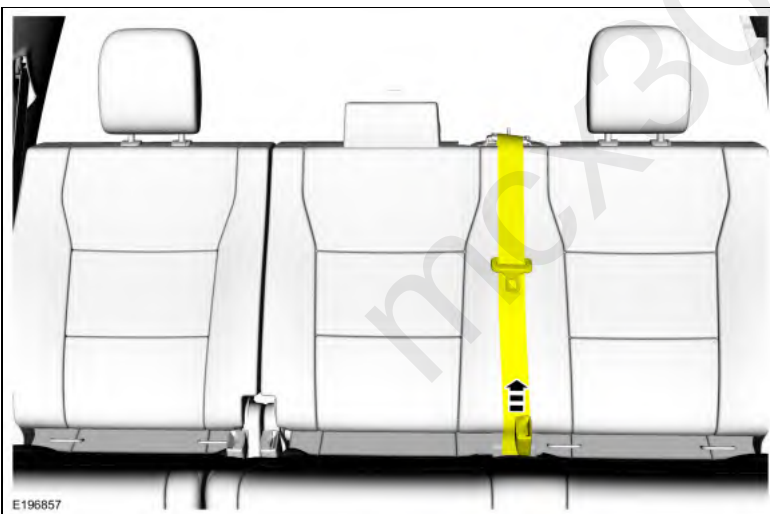

6. Remove the bolts and position the seatbelt guide aside.
Torque: 30 lb.ft (40 Nm)

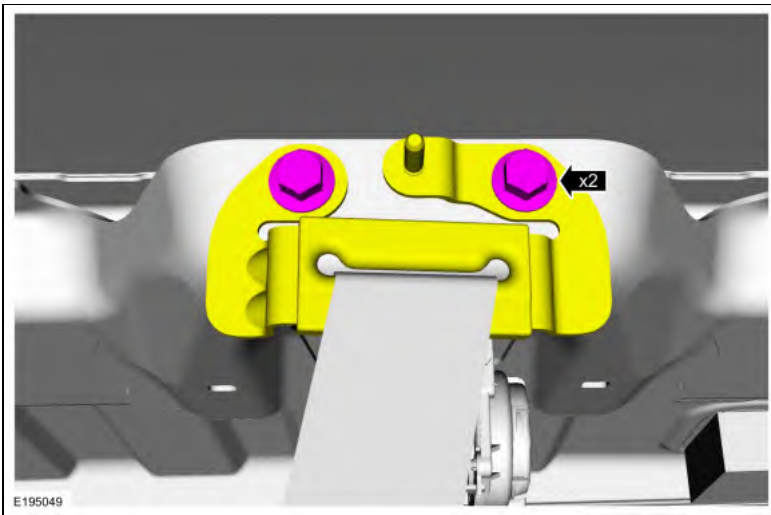

7. Remove the bolt and the seatbelt retractor.
Torque: 30 lb.ft (40 Nm)

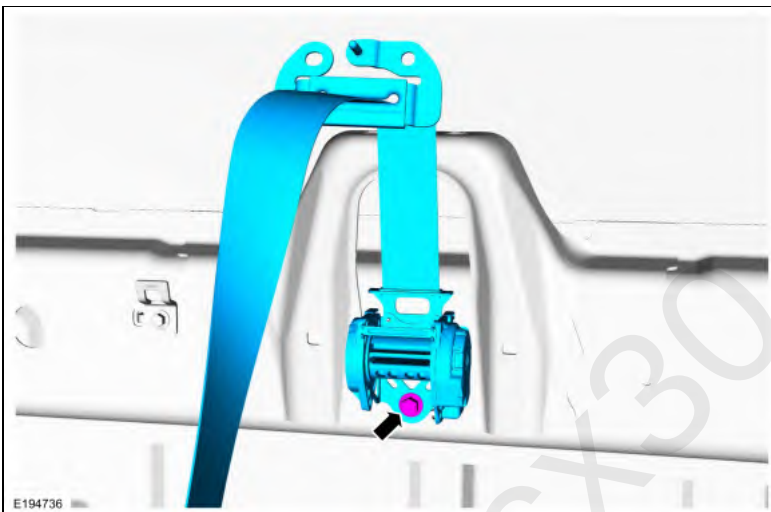

Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Check the seatbelt system for correct operation.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).