


Rear Seatbelt Buckle RH

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: Crew Cab shown, Super Cab similar.

1. Remove the RH rear seat
Refer to: Rear Seat RH - Super Cab (501-10B Rear Seats, Removal and Installation).
Refer to: Rear Seat RH - Crew Cab (501-10B Rear Seats, Removal and Installation).
2. Detach the RH rear seatbelt buckle electrical connector.

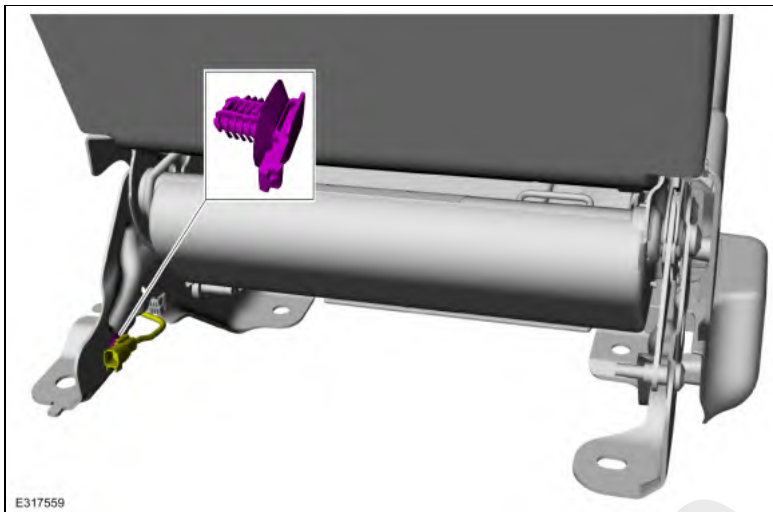

3. Remove the RH rear seatbelt buckle.
 1. Detach the RH rear seatbelt buckle wiring harness retainer.
 2. Remove the bolt.
Torque: 30 lb.ft (40 Nm)

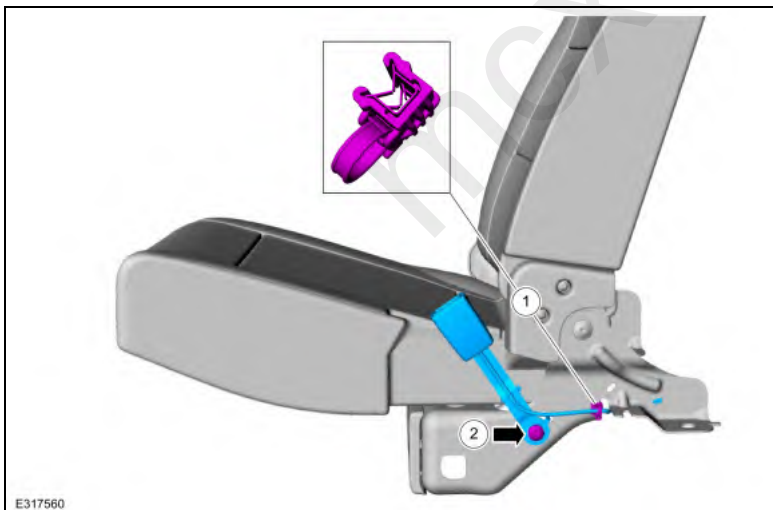

Installation

1. To install, reverse the removal procedure.
2. Check the seatbelt system for correct operation.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).

