

Rear Seatbelt Retractor and Pretensioner

Removal

⚠ **WARNING:** The following procedure prescribes critical repair steps required for correct restraint system operation during a crash. Follow all notes and steps carefully. Failure to follow step instructions may result in incorrect operation of the restraint system and increases the risk of serious personal injury or death in a crash.

NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH (left-hand) shown, RH (right-hand) similar.

1. ⚠ **WARNING:** Before beginning any service procedure in this manual, refer to health and safety warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

Refer to: Pyrotechnic Device Health and Safety Precautions (100-00 General Information, Description and Operation).

2. Depower the SRS.

Refer to: Supplemental Restraint System (SRS) Depowering (501-20B Supplemental Restraint System, General Procedures).

Super cab

3. Remove the B-pillar trim panel.

Refer to: B-Pillar Trim Panel - Super Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).

Crew cab

4. Remove the C-pillar trim panel.

Refer to: C-Pillar Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).

All

5. Remove the bolt and position the rear seatbelt retractor and pretensioner D-ring aside.

Torque: 30 lb.ft (40 Nm)




6. Remove the rear seatbelt retractor and pretensioner.

1. Remove the bolt.

Torque: 30 lb.ft (40 Nm)

2. Position the rear seatbelt retractor and pretensioner up and out.
3. Disconnect the electrical connector.

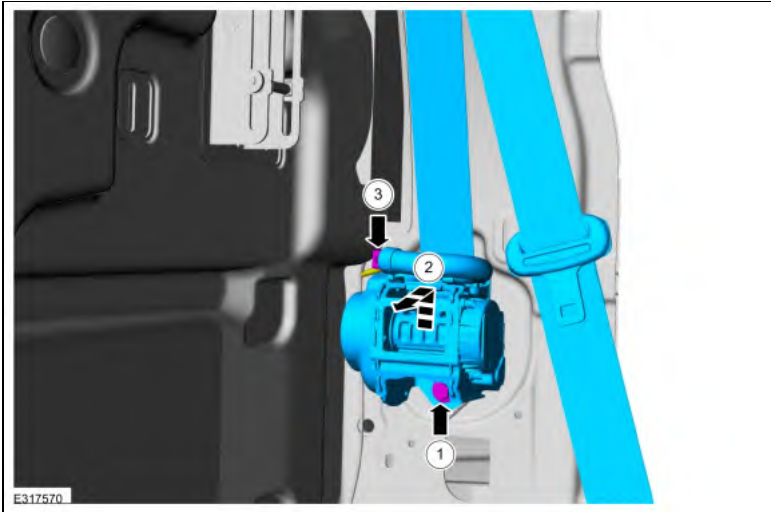

Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Repower the SRS.
Refer to: Supplemental Restraint System (SRS) Repowering (501-20B Supplemental Restraint System, General Procedures).
3. Check the seatbelt system for correct operation.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).