

Seatbelt Shoulder Height Adjuster - Regular Cab


Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH shown, RH similar.

1. Remove the B-pillar upper trim panel.
Refer to: B-Pillar Trim Panel - Regular Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. **NOTICE: Do not use excessive force pulling the seatbelt shoulder height adjuster release latch when the D-ring cover has been removed. Failure to follow this instruction may cause the release latch to be dislodged from the height adjuster assembly.**


Pull the release latch and slide the height adjuster down.

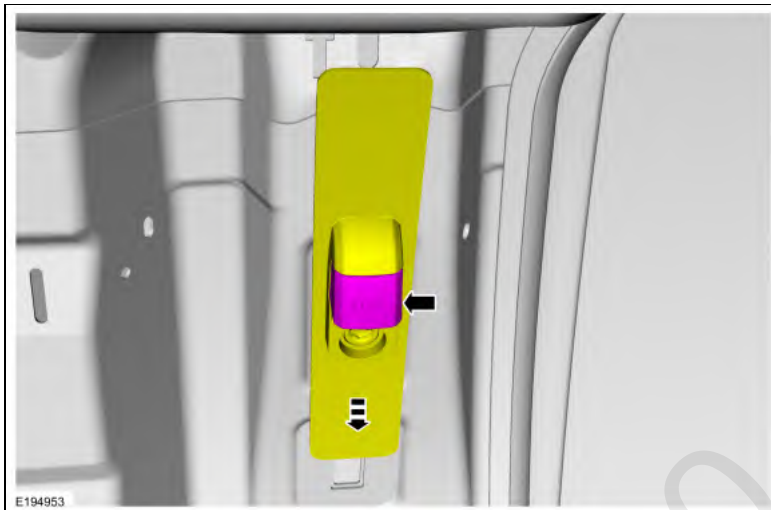

3. Position the height adjuster.
 1. Remove the bolt.
Torque: 30 lb.ft (40 Nm)
 2. Rotate the height adjuster.

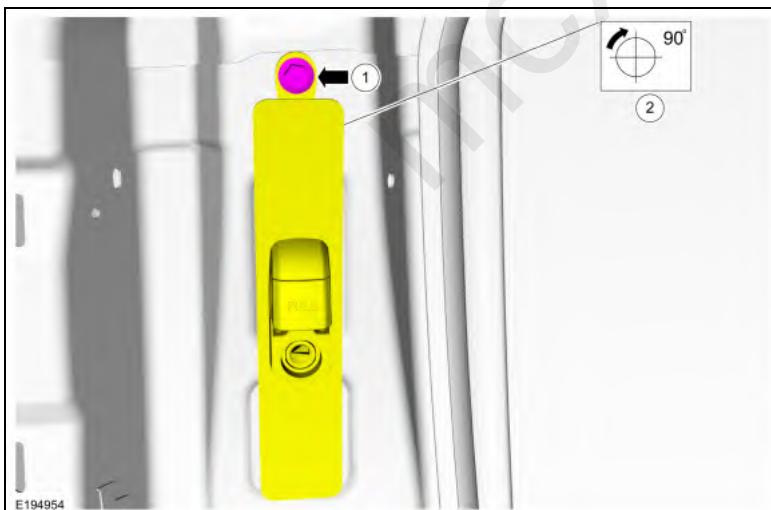

4. Detach the lower tab and remove the height adjuster.

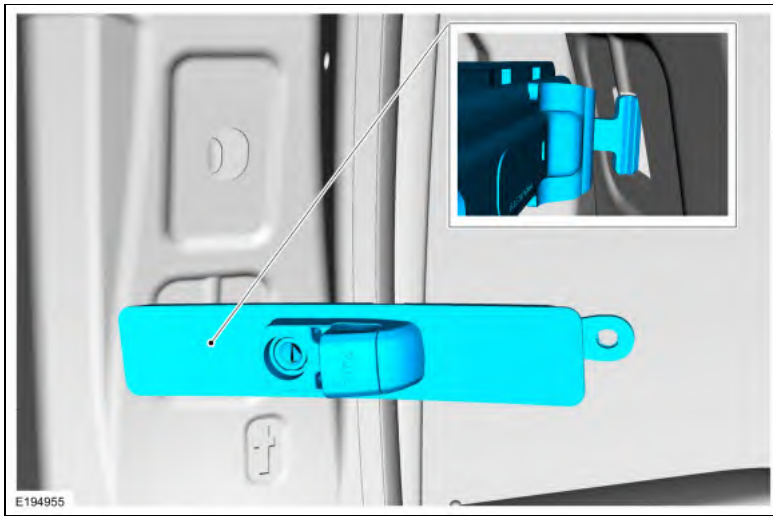

Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Check the seatbelt system for correct operation.
Refer to: Seatbelt Systems (501-20A Seatbelt Systems, Diagnosis and Testing).

mcx30.com