




Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS) - Component Location

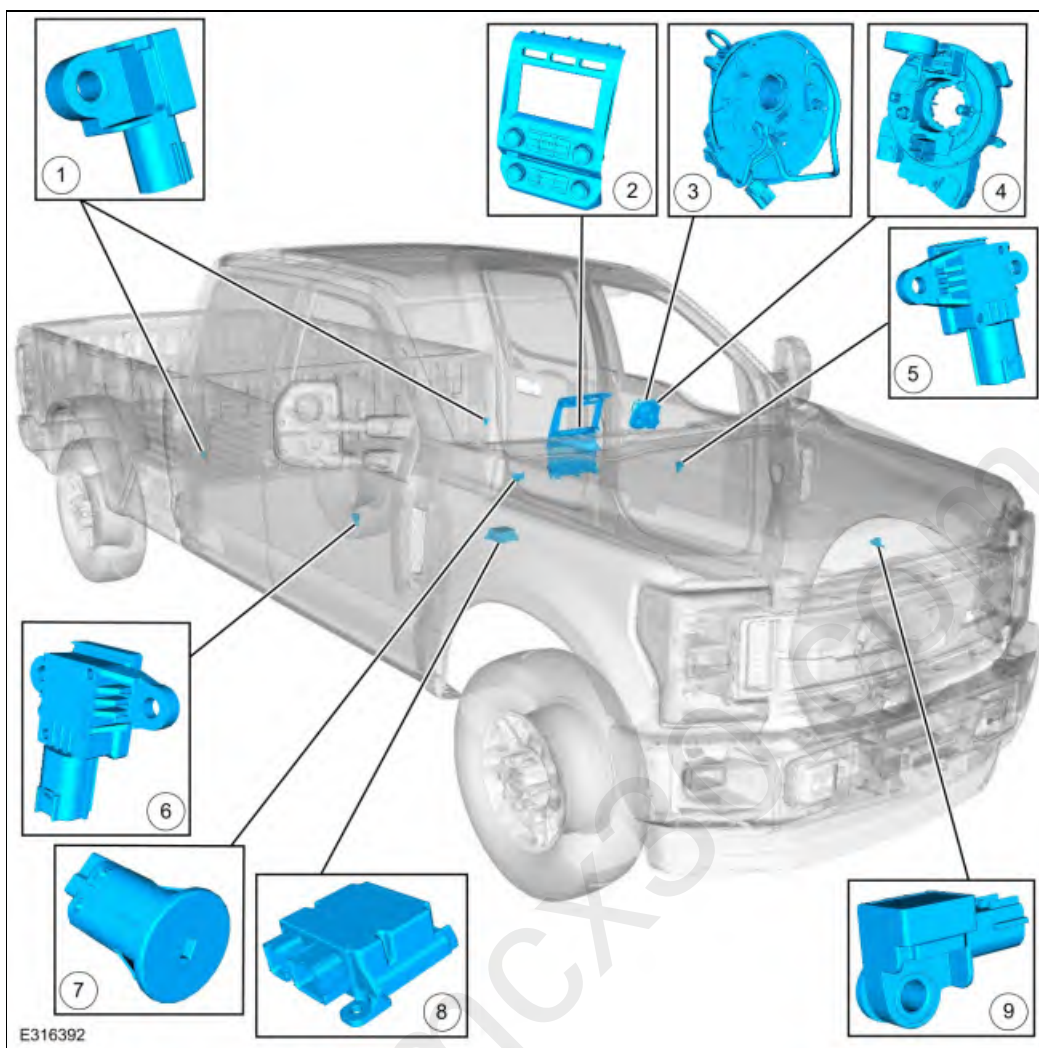

Item	Description
1	Driver and passenger B-pillar side impact sensors (Super Cab) / driver and passenger C-pillar side impact sensors (Crew Cab)
2	FCIM (includes PAD indicator)
3	Clockspring (vehicles with Adaptive Steering)
4	Clockspring (vehicles without Adaptive Steering)
5	Driver front door side impact sensor
6	Passenger front door side impact sensor
7	PAD switch
8	RCM
9	Front impact severity sensor

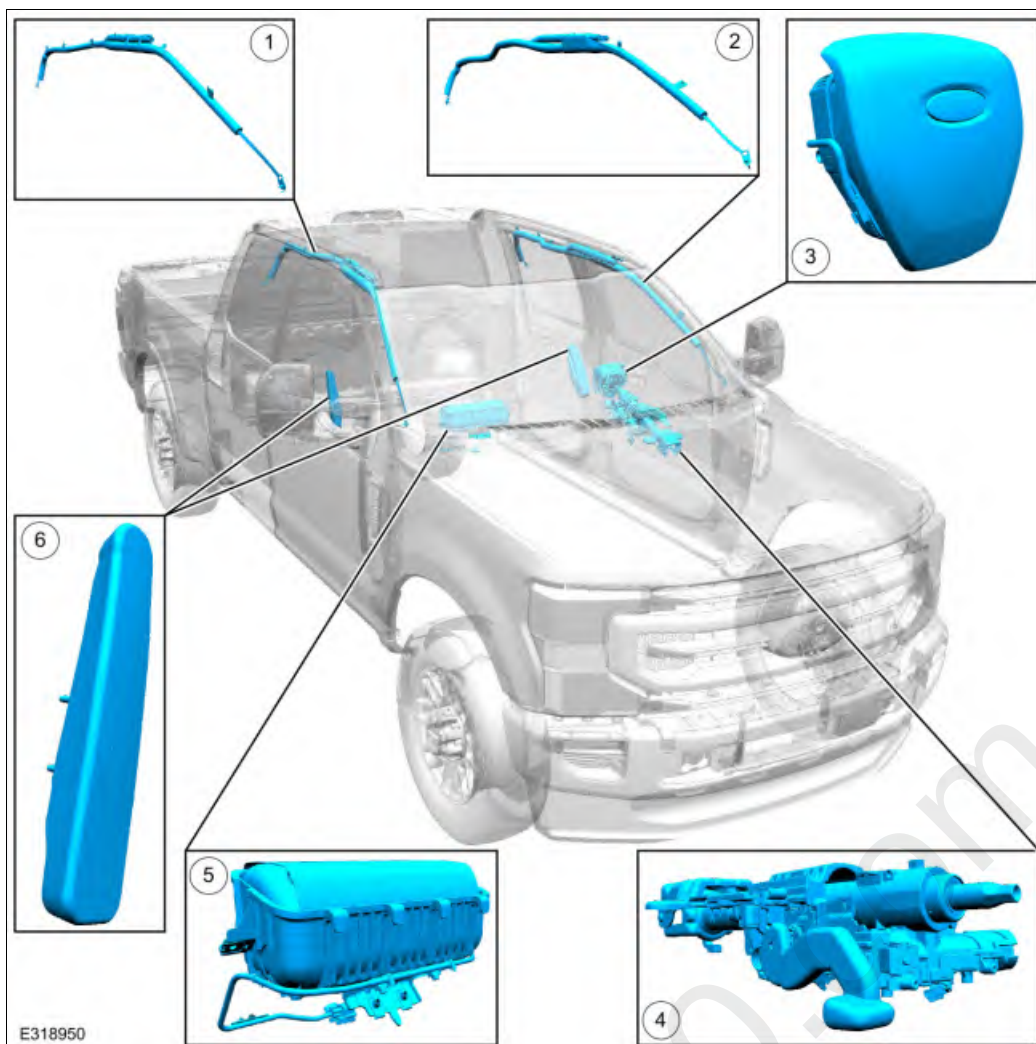

Item	Description
1	Passenger side air curtain
2	Driver side air curtain
3	Driver airbag
4	Deployable steering column
5	Passenger airbag
6	Driver and passenger side airbag

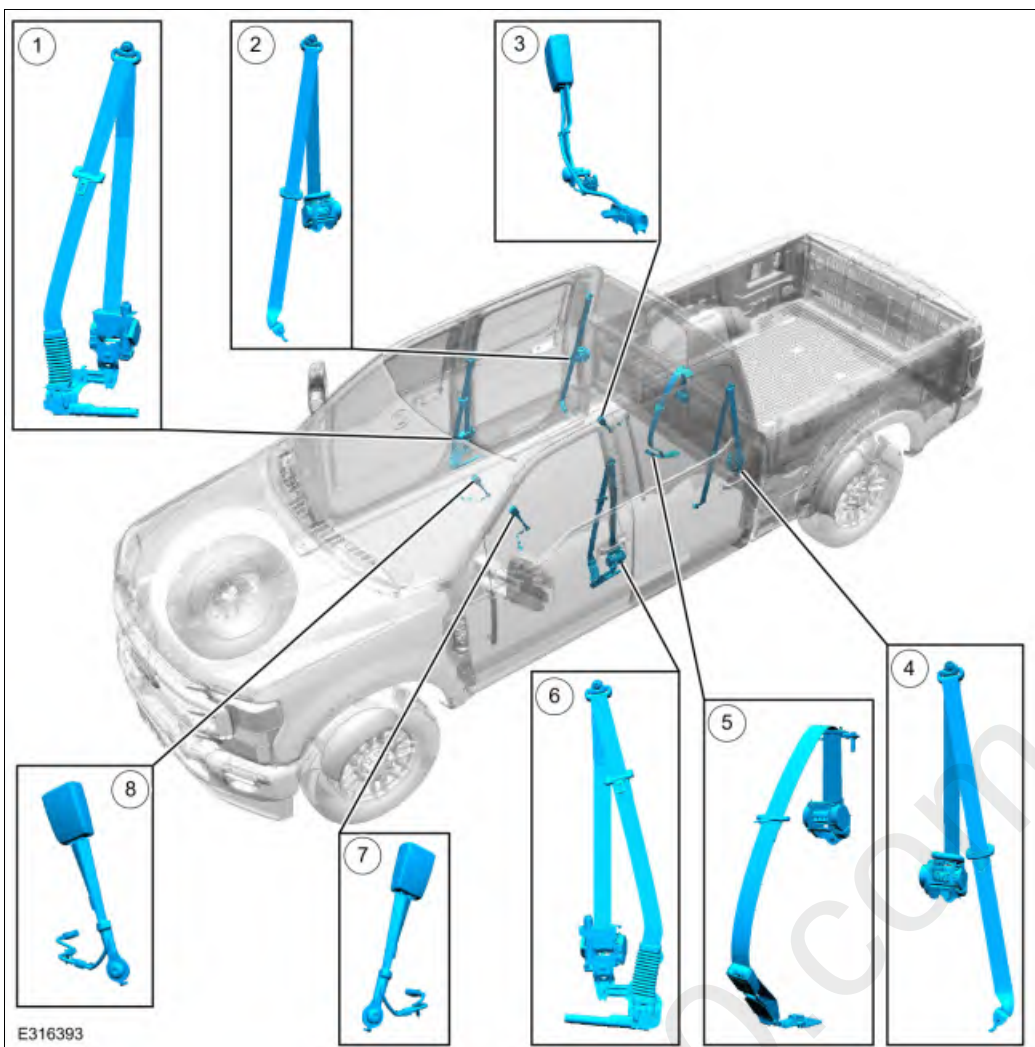

Item	Description
1	Front passenger seatbelt retractor (includes retractor pretensioner and anchor pretensioner) (Crew Cab shown, other body styles similar)
2	Passenger side rear outer seatbelt retractor and pretensioner (Crew Cab shown, SuperCab similar)
3	Passenger side rear outer seatbelt buckle assembly (Crew Cab shown, SuperCab similar) (includes buckle sensor)
4	Driver side rear outer seatbelt retractor and pretensioner (Crew Cab shown, SuperCab similar)
5	Driver side rear outer seatbelt buckle assembly (Crew Cab shown, SuperCab similar) (includes seatbelt buckle, buckle sensor and rear center seatbelt retractor)
6	Driver seatbelt retractor (includes retractor pretensioner and anchor pretensioner) (Crew Cab shown, other body styles similar)
7	Driver seatbelt buckle (includes buckle sensor)
8	Front passenger seatbelt buckle (includes buckle sensor)

