

## Pickup Box Floor Panel

### Removal

1. Remove the pickup box front panel.  
Refer to: Pickup Box Front Panel (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
2. On both sides.  
Remove the pickup box outer side panel.  
Refer to: Pickup Box Outer Side Panel (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
3. On both sides.  
Remove the pickup box corner reinforcement.  
Refer to: Pickup Box Corner Reinforcement (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
4. On both sides.  
Remove the pickup box inner side panel.  
Refer to: Pickup Box Inner Side Panel (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
5. On both sides.  
Remove the rear wheelhouse.  
Refer to: Rear Wheelhouse (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

### Installation

1. On both sides.  
Install the pickup box inner side panel.  
Refer to: Pickup Box Inner Side Panel (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
  2. Install the pickup box front panel.  
Refer to: Pickup Box Front Panel (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
  3. On both sides.  
Install the rear wheelhouse.  
Refer to: Rear Wheelhouse (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
  4. On both sides.  
Install the pickup box corner reinforcement.  
Refer to: Pickup Box Corner Reinforcement (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
  5. On both sides.  
Install the pickup box outer side panel.  
Refer to: Pickup Box Outer Side Panel (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
  6. Install the pickup box.  
Refer to: Pickup Bed (501-04 Pickup Bed and Platform Body, Removal and Installation).
-

