


Front Crossmember

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the nuts.
Torque: 46 lb.ft (63 Nm)

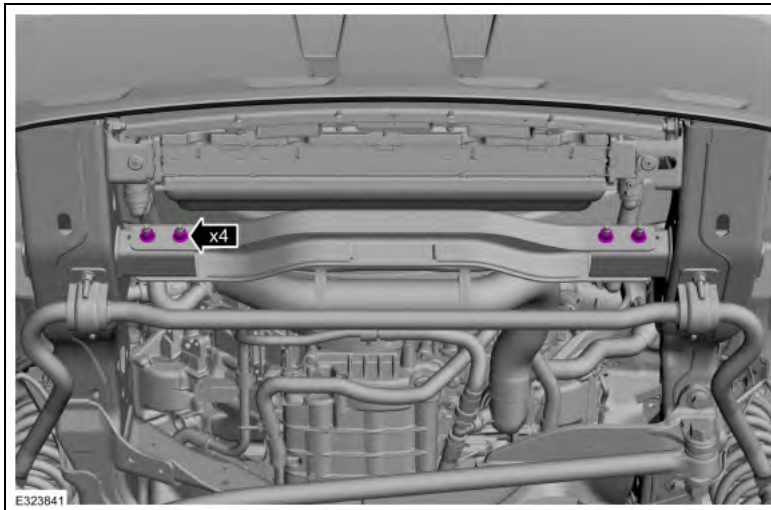

3. **NOTE:** Note the position of the component before removal.

NOTE: Make sure that the component is installed to the position noted before removal.

Remove the bolts and the front crossmember. For installation purposes the bolt threads should be facing towards the front of the vehicle.

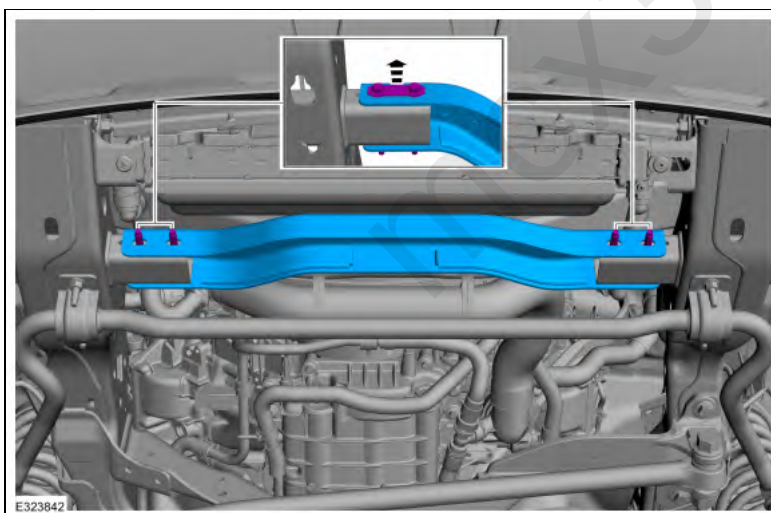

Installation

1. To install, reverse the removal procedure.

