

No Diagnostic Trouble Codes (DTCs) Present Symptom Chart Index

System/Symptom		Oasis Number	Chart Number
Driveability			
Starting Concerns	Hard Start/Long Crank/Erratic Start/Erratic Crank	-	2
	No crank	-	22
	No start (engine cranks)	-	3
Unique Idle Concerns	Slow return to idle	-	4
	Rolling idle	-	1
	Fast idle	-	5
	Low/Slow idle	-	6
Driveability - Performance While Driving Concerns			
Stalls/Quits	Idle/Acceleration/Cruise	-	1
	Deceleration	-	6
	Stall after start	-	1
Runs Rough		-	1
Misses		-	1
Buck/Jerk		-	1
Hesitation/Stumble		-	1
Surge		-	1
Backfires		-	7
Lack/Loss Of Power		-	8
Spark Knock		-	9
Additional Driveability Concerns			
Diesels/Runs On		-	5
Poor Fuel Economy		-	10
Emissions Compliance		-	11
Electrical			
Warning Indicators	Malfunction indicator lamp (MIL)	-	12
	Transmission control indicator lamp (TCIL)	-	12
	Power take off (PTO)	-	12
	Temperature warning indicator or gauge (for vehicles equipped with a cylinder head temperature (CHT) sensor only)	-	12
	Check fuel cap	-	12
	Powertrain malfunction indicator (wrench)	-	12
Instrumentation	Tachometer inoperative	-	14
	Speedometer/odometer inoperative	-	14

	System/Symptom	Oasis Number	Chart Number
	Boost gauge indicates higher than normal boost	-	14
	Fuel gauge inoperative	-	14
Engine			
Oil System Concerns	High oil consumption	-	15
	Leaks	-	15
Cooling System Concerns	Electric cooling fan does not operate (low, high or variable speed)	-	16
	Cooling fan clutch does not operate	-	16
	Electric cooling fan always runs	-	17
Exhaust System Concerns	Visible smoke	-	18
	Odor (sulfur or rotten egg smell)	-	21
Fuel System Concerns		-	19
Engine Noise (under hood)		-	20
Driveline			
Automatic Transmission (A/T) Shift Concerns	Upshift	-	13
	Downshift	-	13
	Engagement	-	13
Power Take Off (PTO)			
PTO Concerns		-	12