

Axle Shaft

Removal and Installation

NOTE: *The axle shaft seal needs to be replaced when replacing the axle shaft.*

1. Replace the axle shaft seal.
Refer to: Axle Shaft Seal (205-03 Front Drive Axle/Differential, Removal and Installation).
-

mcx30.com