

Brake Caliper - F-250/F-350


Removal

NOTICE: Make sure that all openings are sealed.


NOTICE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the wheel and tire.
Refer to: Wheel and Tire - Vehicles With: Single Rear Wheels (204-04A Wheels and Tires, Removal and Installation).
Refer to: Wheel and Tire - Vehicles With: Dual Rear Wheels (204-04A Wheels and Tires, Removal and Installation).
2. Remove the bolt and disconnect the brake hose. Discard the washers.
Torque: 35 lb.ft (48 Nm)

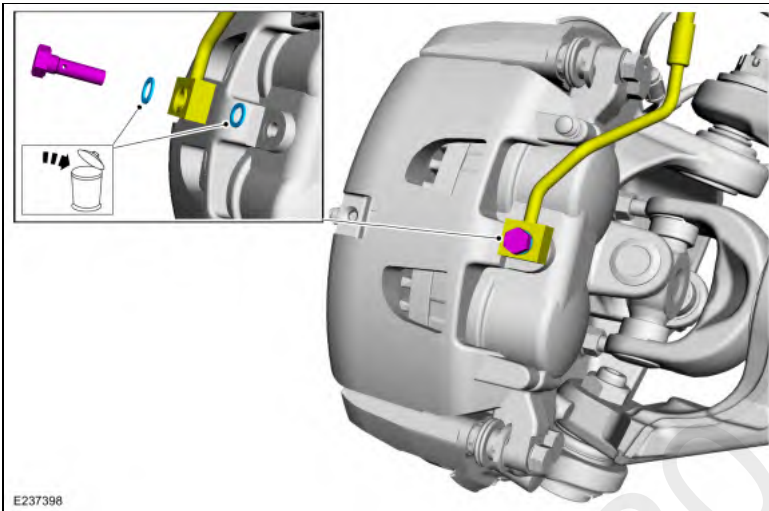

3. Remove the bolts and the brake caliper.
Torque: 55 lb.ft (74 Nm)

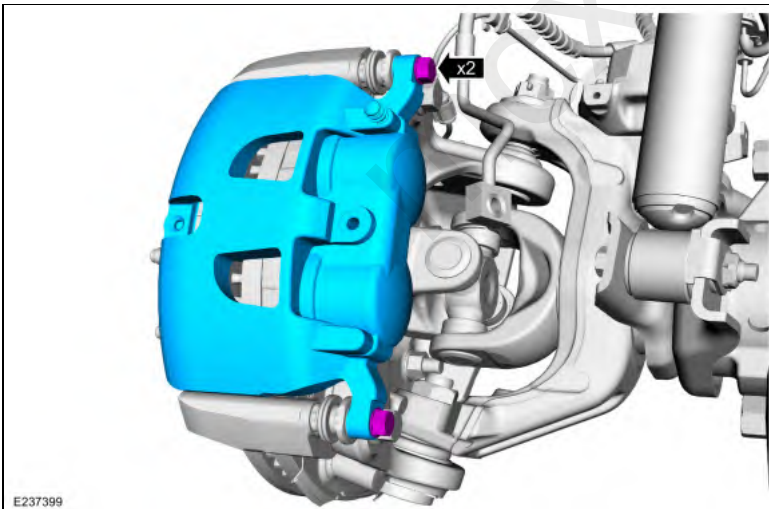

Installation

1. To install, reverse the removal procedure.
2. Bleed the brake system.
Refer to: Brake System Pressure Bleeding (206-00 Brake System - General Information, General Procedures).

