

Brake Disc Shield

Removal


NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1. Remove the brake disc.
Refer to: Brake Disc (206-03 Front Disc Brake, Removal and Installation).


Vehicles with twin I-beam axle

2. Remove the bolts and the brake disc shield.
Torque: 133 lb.in (15 Nm)

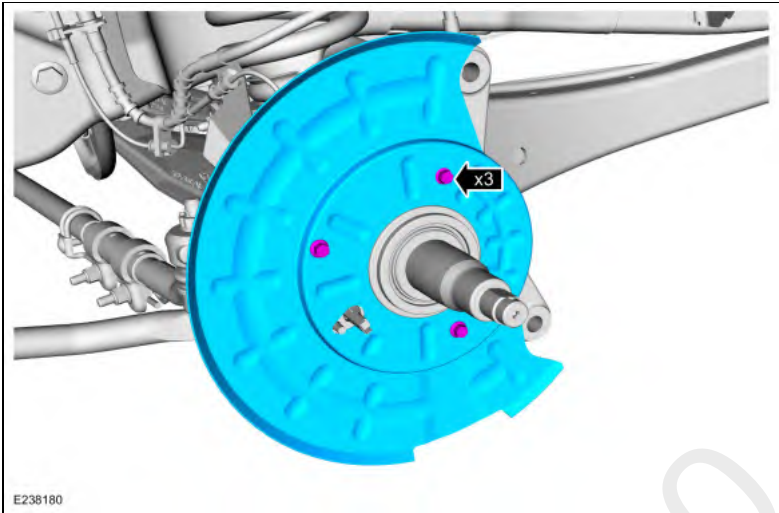

Vehicles with monobeam axle

3. Remove the bolts and the brake disc shield.
Torque: 133 lb.in (15 Nm)

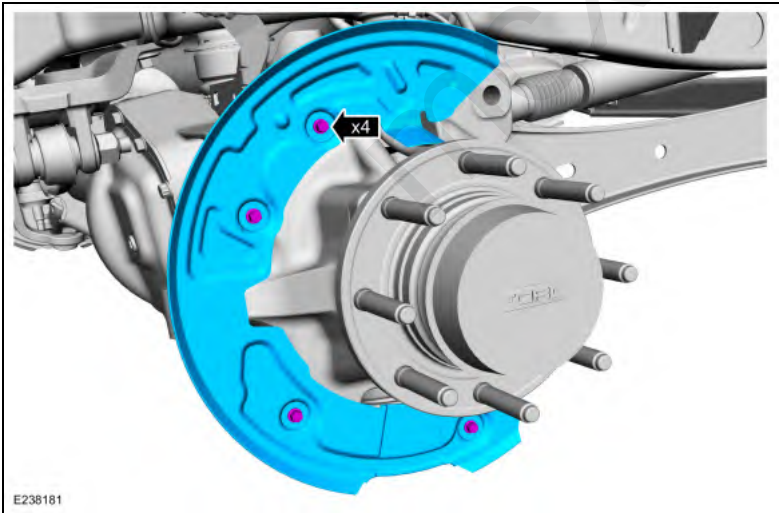

Installation

1. To install, reverse the removal procedure.

