

Front Brake Flexible Hose

Removal


NOTICE: Make sure that all openings are sealed.

NOTICE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.

NOTE: Removal steps in this procedure may contain installation details.


All vehicles

1. Remove the wheel and tire.
Refer to: Wheel and Tire - Vehicles With: Single Rear Wheels (204-04A Wheels and Tires, Removal and Installation).
Refer to: Wheel and Tire - Vehicles With: Dual Rear Wheels (204-04A Wheels and Tires, Removal and Installation).
2. Remove the bolt and disconnect the brake hose. Discard the washers.
Torque: 35 lb.ft (48 Nm)

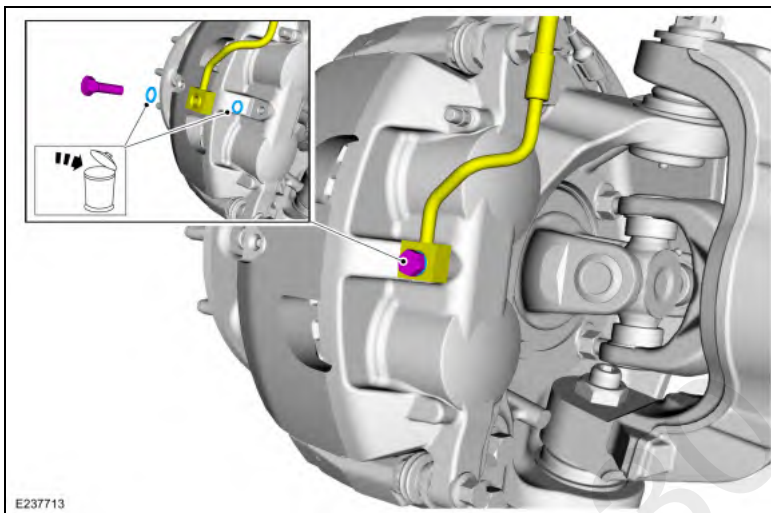


Vehicles with mono-beam axle

3. Detach the wheel speed sensor harness retainers.

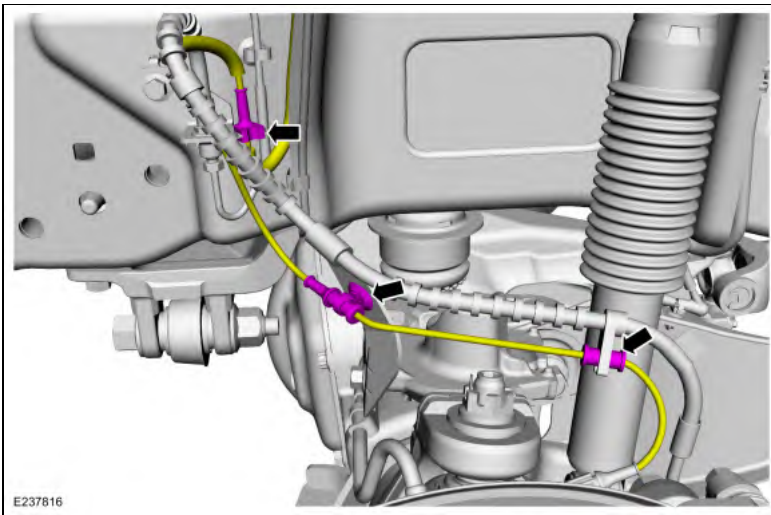


- 4.
1. Detach the vacuum hose retainer.
 2. Separate the vacuum hose.
 3. Remove the bolt and position the brake hose bracket aside.
- Torque: 177 lb.in (20 Nm)*

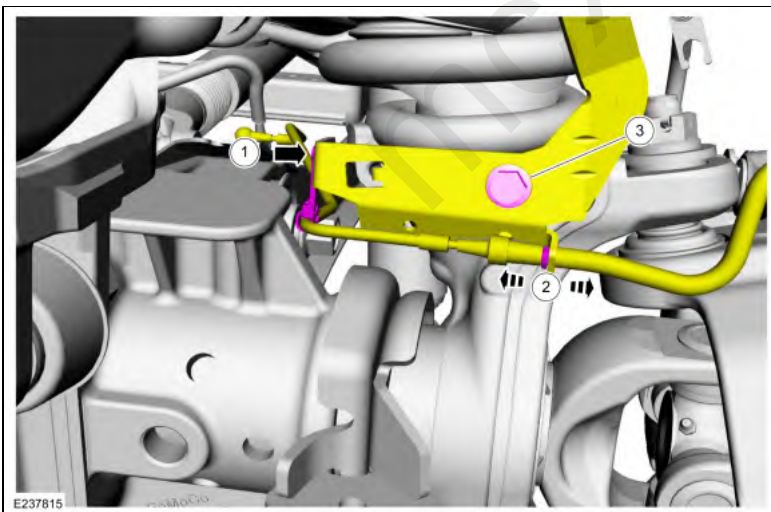


Vehicles with twin I-Beam axle

- 5.
1. Detach the wheel speed sensor harness retainers.
 2. Remove and discard the sway bar link upper nut and bolt.
- Torque: 85 lb.ft (115 Nm)*

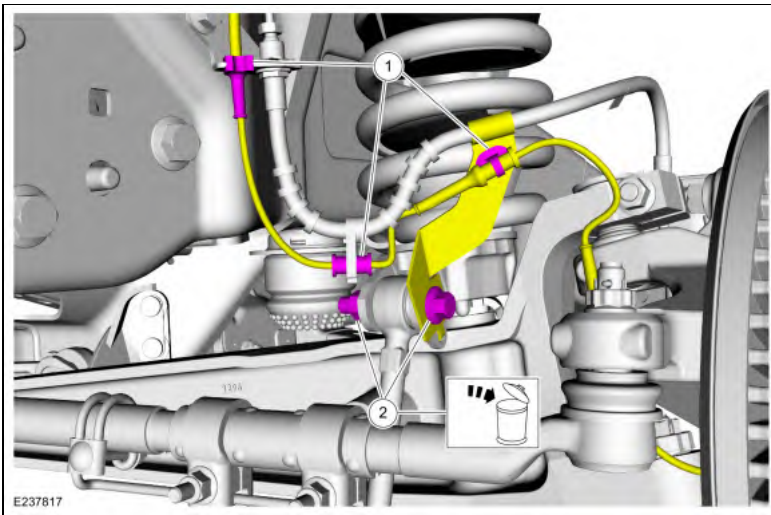

All vehicles

6.
 1. Disconnect the brake tube fitting
Torque: 18 lb.ft (25 Nm)
 2. Remove the bolt and the front brake flexible hose.
Torque: 30 lb.ft (40 Nm)

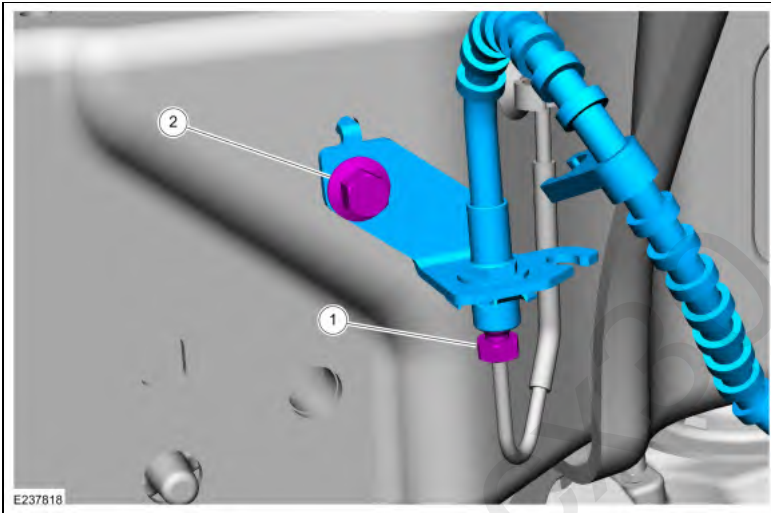

Installation

1. To install, reverse the removal procedure.
2. Bleed the brake system.
Refer to: Brake System Pressure Bleeding (206-00 Brake System - General Information, General Procedures).