

Brake Caliper Support Bracket

Removal

NOTE: Removal steps in this procedure may contain installation details.

All vehicles


1. Remove the parking brake shoes.
Refer to: Parking Brake Shoes (206-05 Parking Brake and Actuation, Removal and Installation).

Vehicles with single rear wheels (SRW)


2. Remove the wheel hub.
Refer to: Wheel Hub (205-02E Wheel Hubs and Bearings - Full Floating Axle - Vehicles With: Ford 10.5 Inch Ring Gear, Removal and Installation).
Refer to: Wheel Hub (205-02E Wheel Hubs and Bearings - Full Floating Axle - Vehicles With: Ford 10.5 Inch Ring Gear, Removal and Installation).

All vehicles

3. Disconnect the parking brake cable from the parking brake shoe actuator lever.

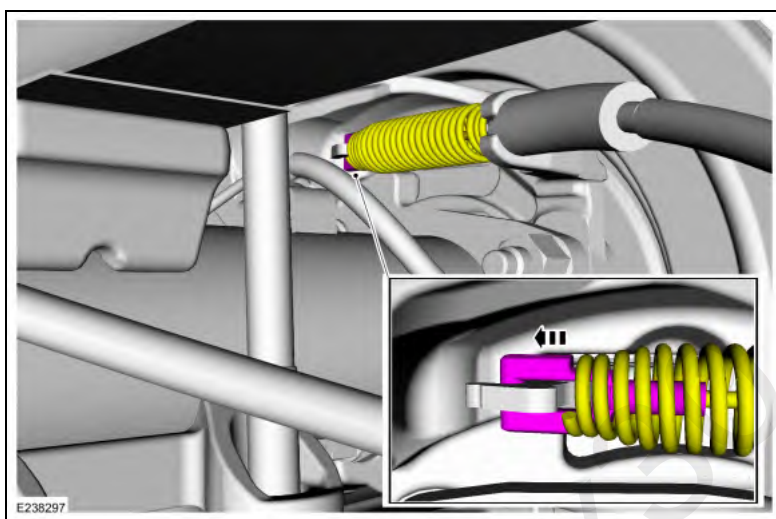


4. Disconnect the parking brake cable from the support bracket.

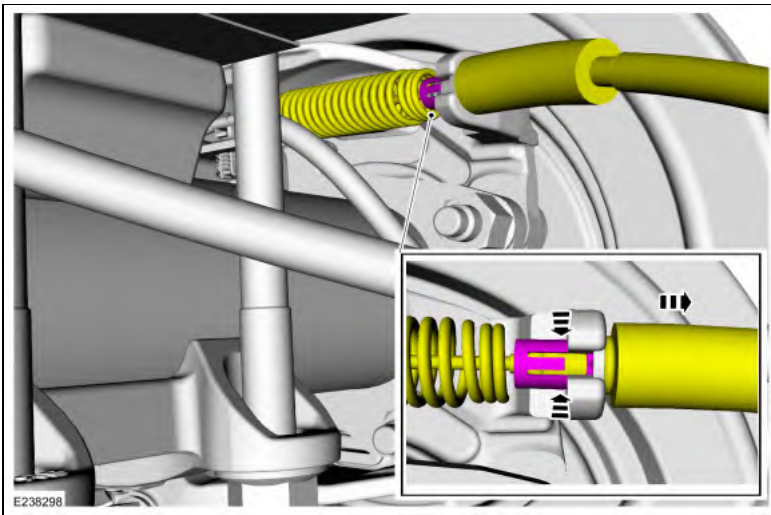


F250, F350

- Remove the bolt and position the wheel speed sensor aside.
Torque: 177 lb.in (20 Nm)

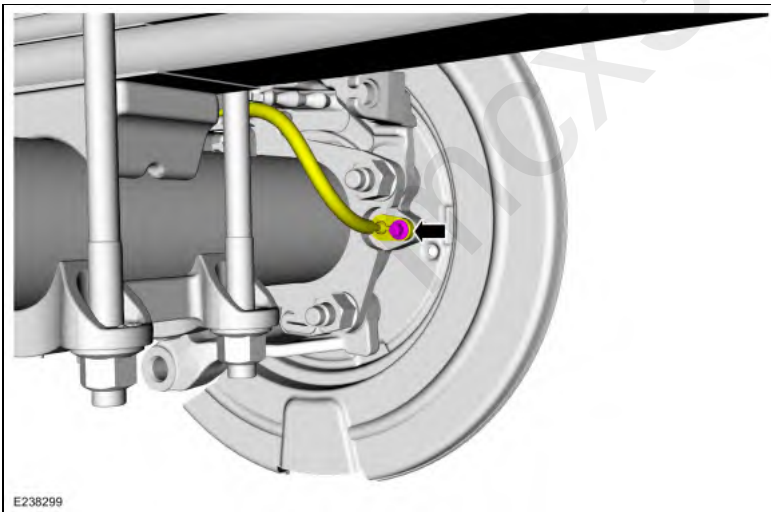


- Remove the nuts and the brake caliper support bracket.
Torque: 101 lb.ft (137 Nm)

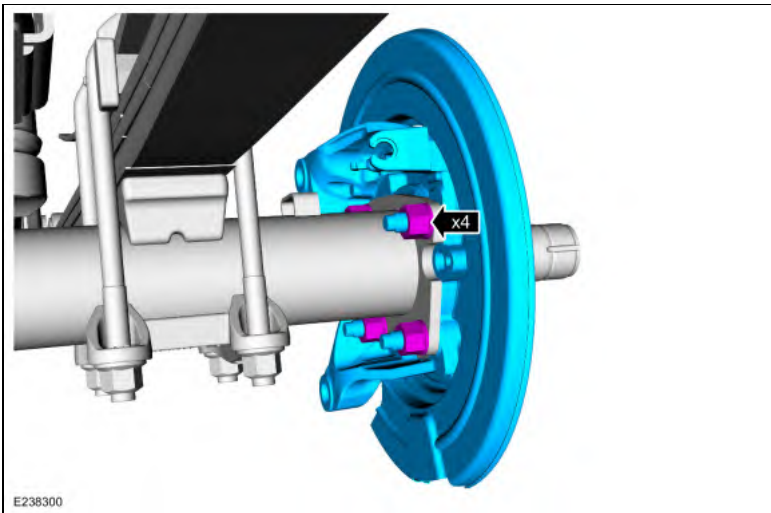

F450, F550

7. Remove the nuts and the brake caliper support bracket.
Torque: 101 lb.ft (137 Nm)

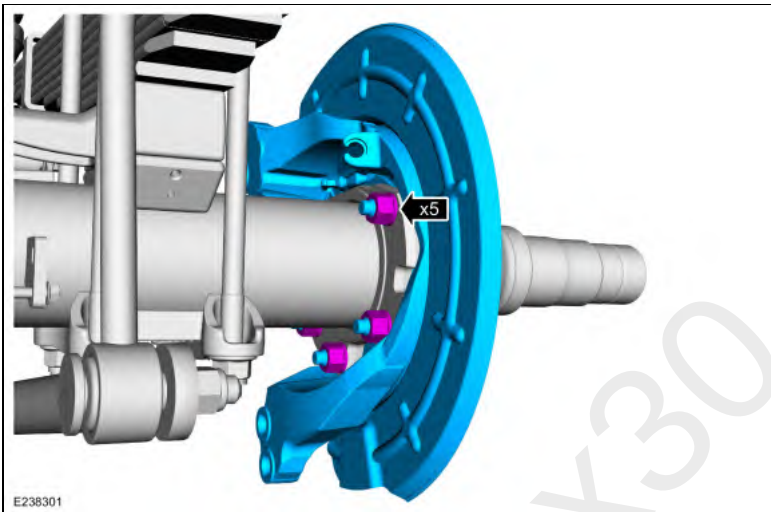

Installation

1. To install, reverse the removal procedure.