


Rear Brake Inner Flexible Hose

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: Typical brake inner flexible hoses shown.


1. Detach the wheel speed sensor wiring harness retainers and position aside.

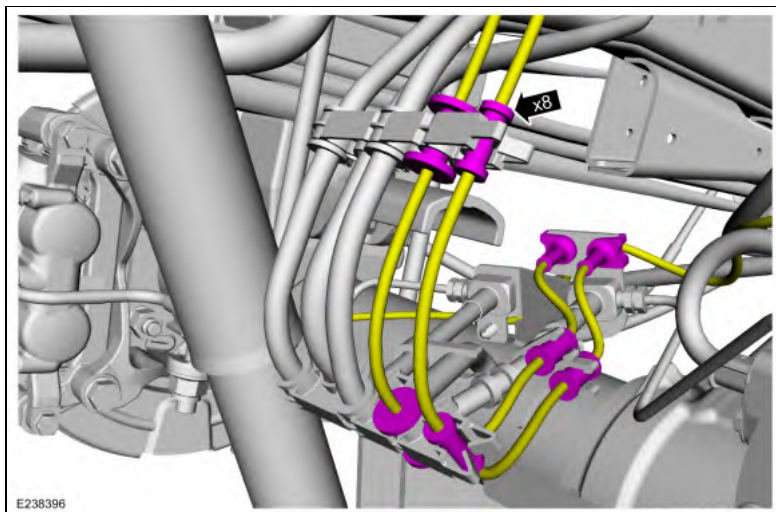


2. Disconnect the axle vent hose, detach the retainers and position the vent tube aside.

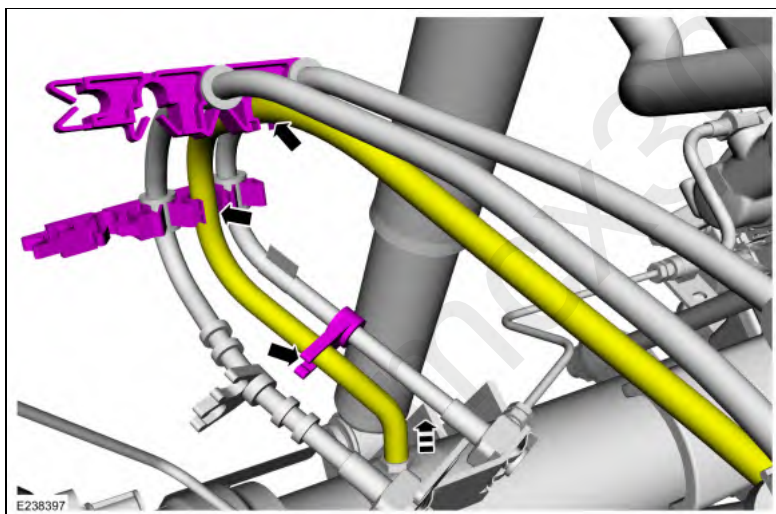


3. Detach the wiring harness retainers and position the wiring aside.

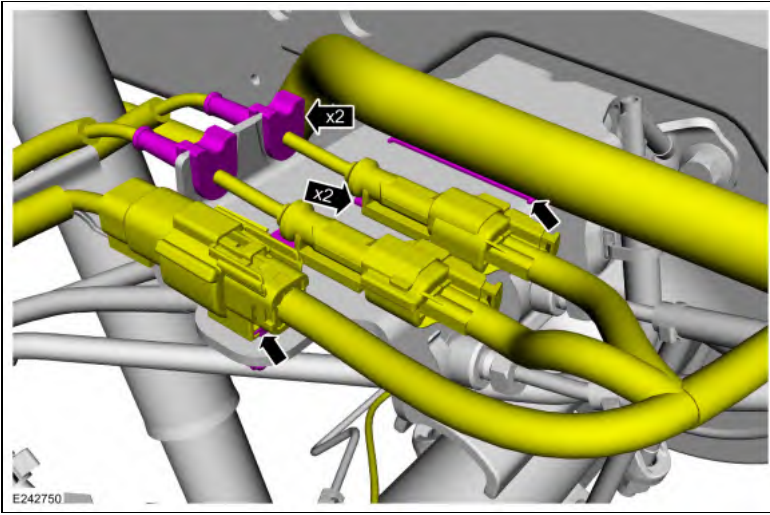

- 4.
1. Detach the axle vent hose retainer.
 2. Disconnect the brake tube fittings.
Torque: 177 lb.in (20 Nm)
 3. Remove the brake hose bracket bolts and position the bracket and brake hoses aside.
Torque: 21 lb.ft (28 Nm)

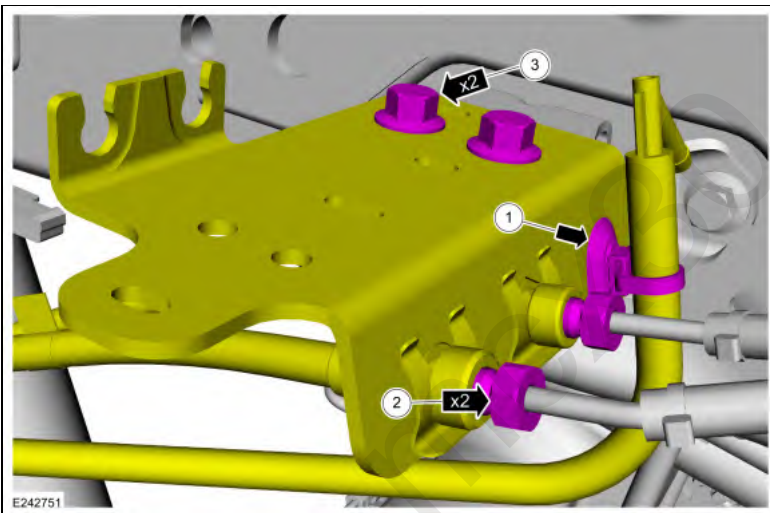

- 5.
1. Disconnect the brake tube fittings.
Torque: 177 lb.in (20 Nm)
 2. Remove the axle vent and the brake inner flexible hose assembly.
Torque: 159 lb.in (18 Nm)

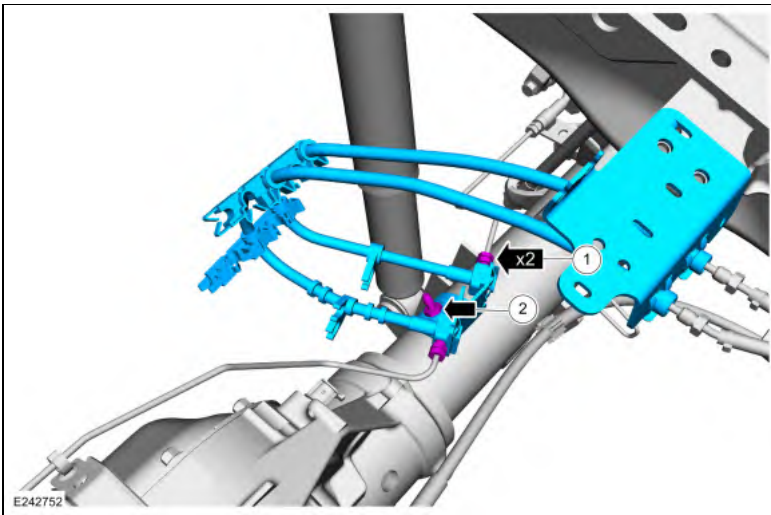

Installation

- 1. To install, reverse the removal procedure.
- 2. Bleed the brake system
Refer to: Brake System Pressure Bleeding (206-00 Brake System - General Information, General Procedures).