

Parking Brake Cable Tension Release


Pressure release

1. **NOTE:** Make sure the parking brake control is in the released position.

With the vehicle in NEUTRAL, position it on a hoist.

Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).

2.
 1. With an assistant, release the parking brake cable tension by pulling down on the intermediate cable at the cable-to-cable union until the parking brake control sector rotates to its stop.
 2. Insert a 4 mm (0.15 in) x 150 mm (5.9 in) retainer pin.

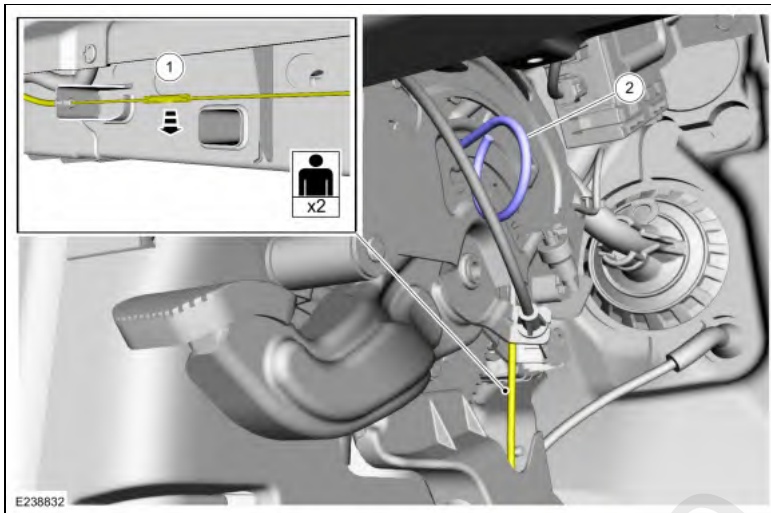

3. To reload the tension on the parking brake cable, follow the release procedure in reverse.