

Parking Brake Shoes

Materials

Name	Specification
Motorcraft® Silicone Brake Caliper Grease and Dielectric Compound XG-3-A	ESE-M1C171-A
Motorcraft® Metal Brake Parts Cleaner PM-4-A, PM-4-B	-


Removal

NOTE: Vehicle with single rear wheels (SRW) shown. The wheel hub is removed from illustrations for clarity. It is not necessary to remove the wheel hub.


1. Release the parking brake cable tension.
Refer to: Parking Brake Cable Tension Release (206-05 Parking Brake and Actuation, General Procedures).
2. Remove the brake disc.
Refer to: Brake Disc (206-04 Rear Disc Brake, Removal and Installation).
3.

1. Remove the parking brake shoe adjuster.


2. Remove the spring.

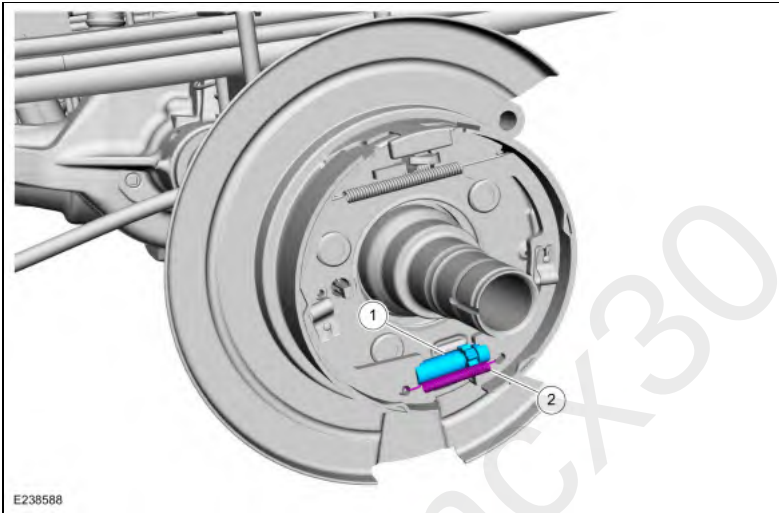


4. Remove the spring.

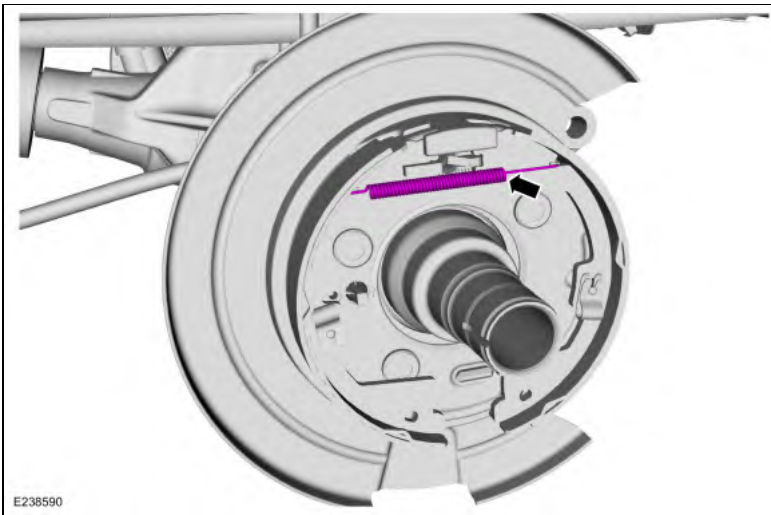


5. Remove the parking brake shoe hold down springs and pins.

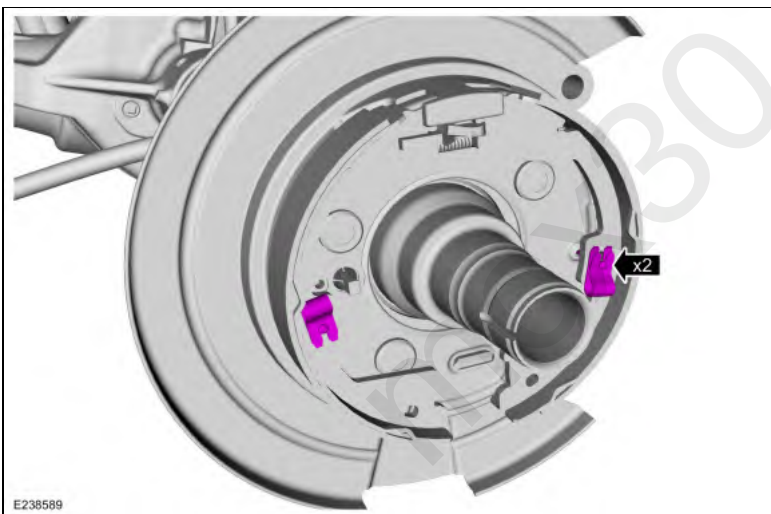


6. Remove the spring and the parking brake shoes.

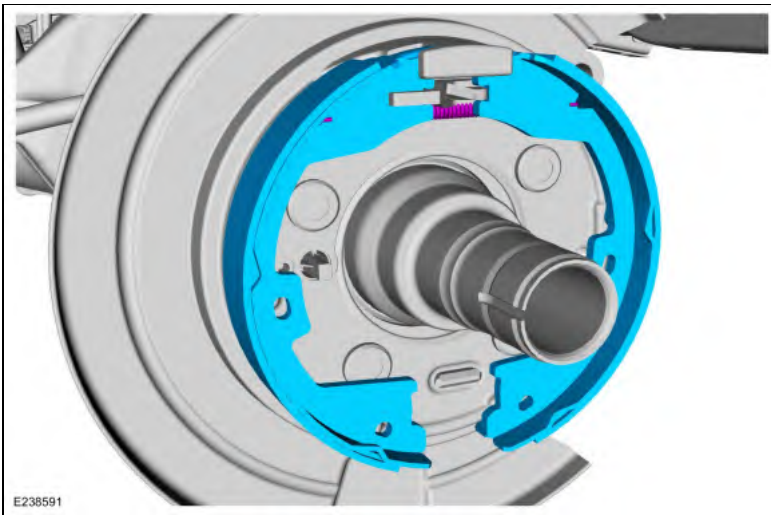

7. Using wire brush and the specified cleaner, clean the parking brake shoe contact points.
Material: Motorcraft® Metal Brake Parts Cleaner / PM-4-A, PM-4-B

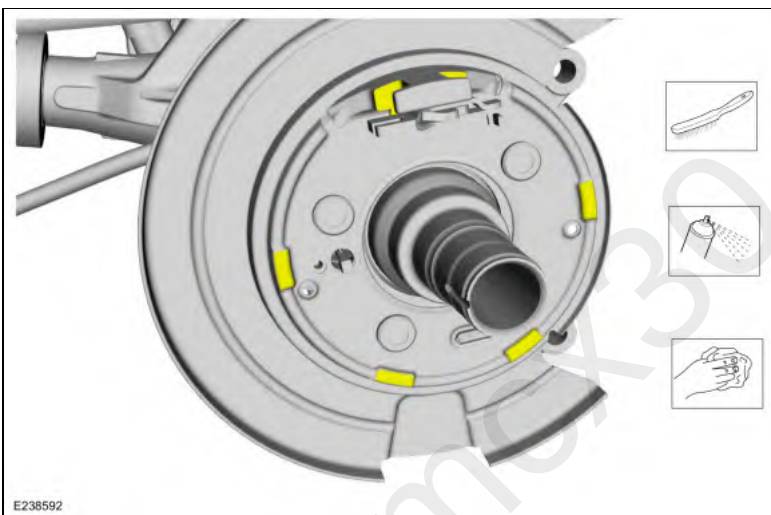

8. Using specified grease, lubricate the parking brake shoe contact points.
Material: Motorcraft® Silicone Brake Caliper Grease and Dielectric Compound / XG-3-A (ESE-M1C171-A)

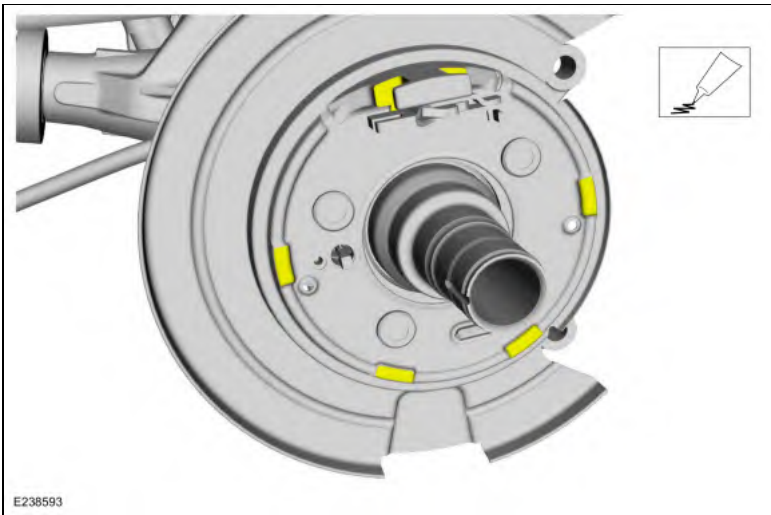

Installation

1. **NOTE:** *Completely retract the parking brake shoe adjuster before installation.*
To install, reverse the removal procedure.
2. Adjust the parking brake shoes.
Refer to: Parking Brake Shoe Adjustment (206-05 Parking Brake and Actuation, General Procedures).