

## Brake Master Cylinder - Vehicles With: Hydro-Boost,ç


### Removal

**NOTE:** Removal steps in this procedure may contain installation details.


1. If equipped with a secondary battery, remove the secondary battery tray.

Refer to: Battery Tray (414-01 Battery, Mounting and Cables, Removal and Installation).


2. Disconnect the brake fluid level sensor electrical connector and detach the wiring harness retainers.

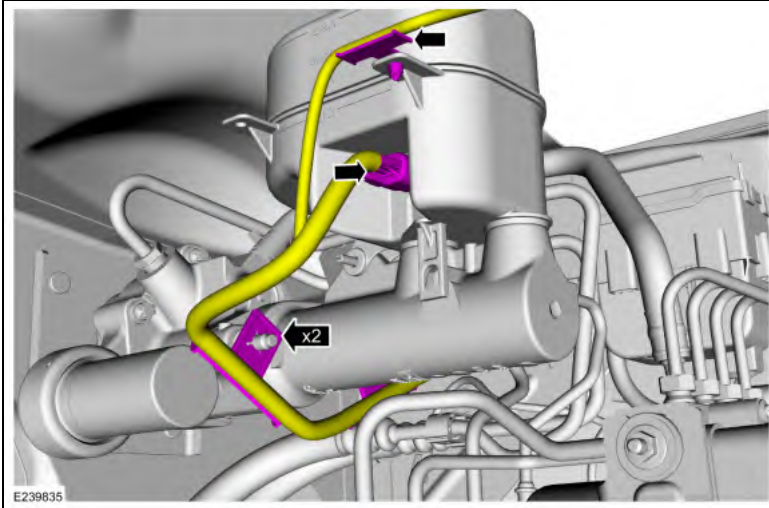


3. Remove the bolt and position the power steering lines and bracket aside.  
*Torque: 177 lb.in (20 Nm)*

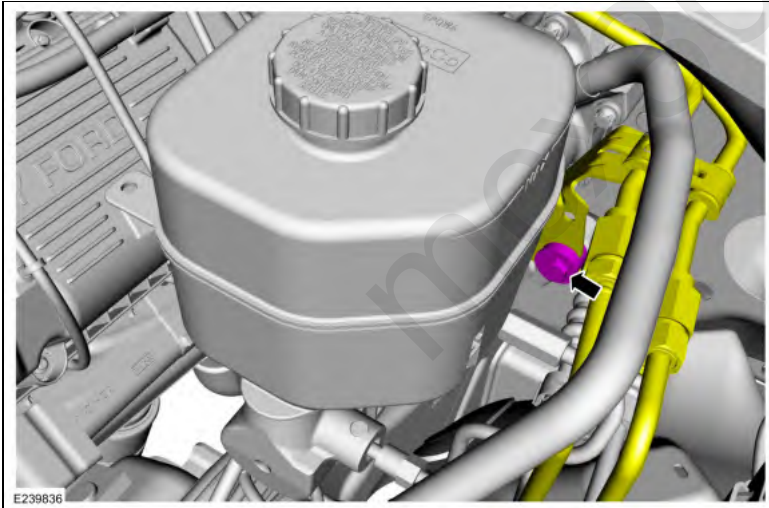

4.
  1. Disconnect the primary brake tube fitting.  
*Torque: 22 lb.ft (30 Nm)*
  2. Disconnect the secondary brake tube fitting.  
*Torque: 16 lb.ft (22 Nm)*

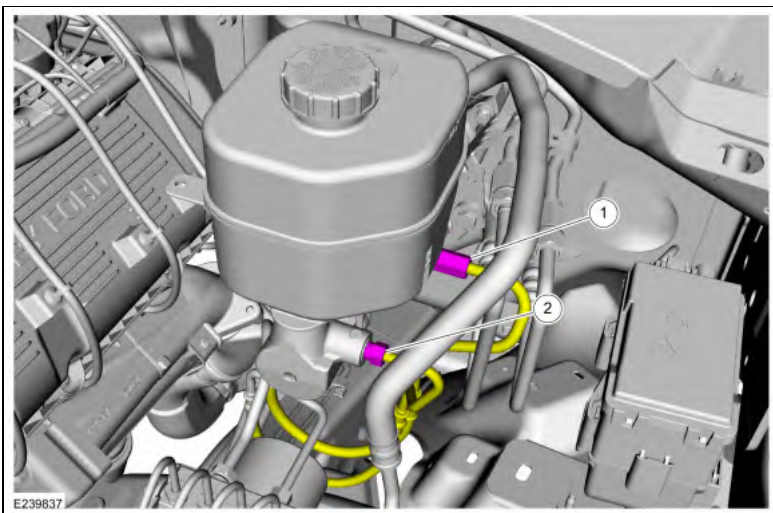

5. Remove the nuts and the brake master cylinder.  
Torque: 22 lb.ft (30 Nm)

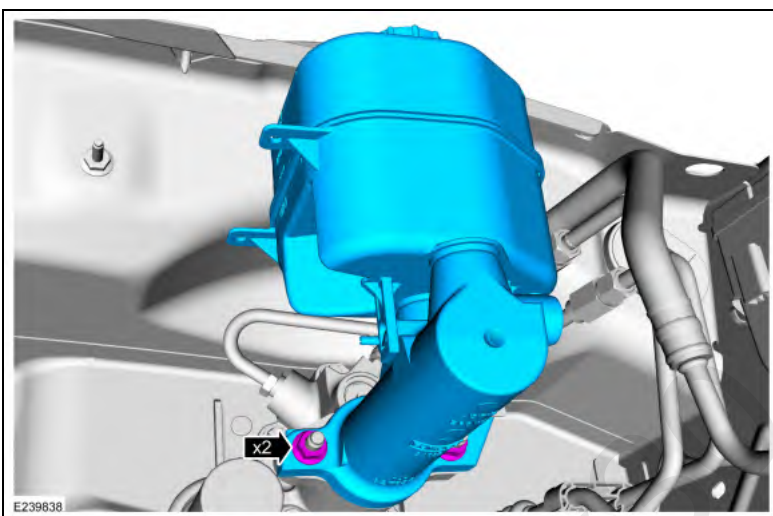

#### Installation

1. To install, reverse the removal procedure.
2.
  - If installing a new brake master cylinder, bleed the master cylinder.  
Refer to: Component Bleeding (206-00 Brake System - General Information, General Procedures).
  - If the brake master cylinder was removed to access other components, bleed the brake system.  
Refer to: Brake System Pressure Bleeding (206-00 Brake System - General Information, General Procedures).