

Brake Pedal and Bracket

Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: Adjustable brake pedal with Hydro-Boost®, if shown.


Vehicles equipped with adjustable pedals

1. **NOTICE:** The brake pedal and the accelerator pedal must be in the same position when installing a new cable or a new pedal. The pedals must be all the way forward or all the way rearward or damage to components may occur.

Move the pedals to the full forward (away from the driver) position.


All vehicles

2. Detach the clips and lower the steering column opening trim cover.

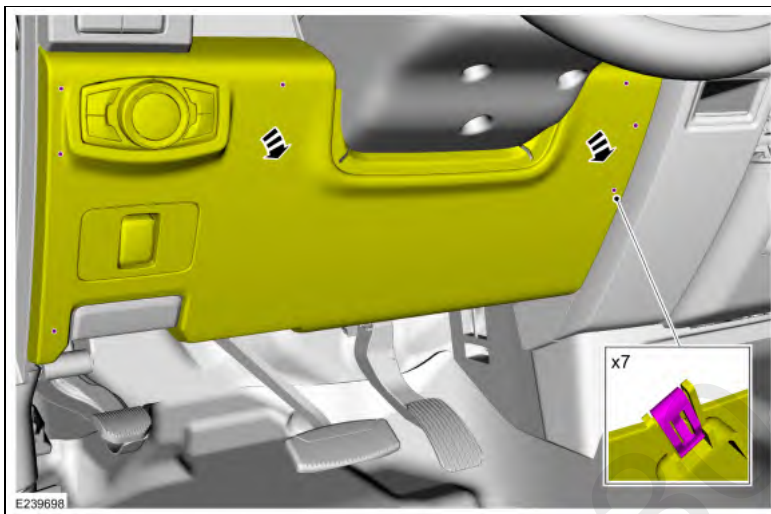


3. **NOTE:** Vehicles with push-button start and adjustable pedals shown.

Disconnect the electrical connectors and detach the wiring harness retainers.

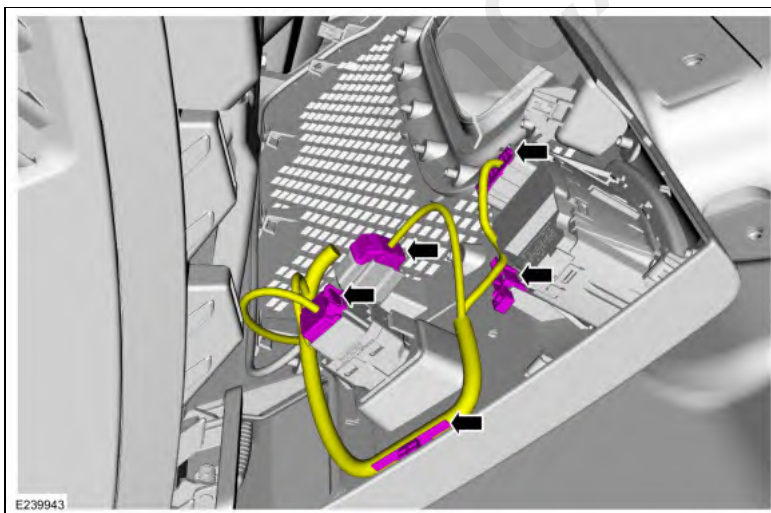


4.
 - Remove the bolts and the steering column opening trim panel reinforcement.
Torque: 22 lb.in (2.5 Nm)
 - Remove the tabs and remove the steering column opening trim panel.

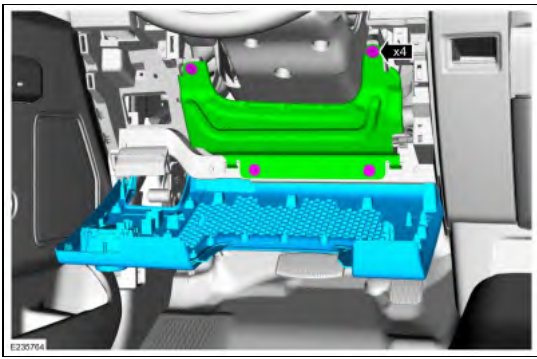


Vehicles equipped with adjustable pedals

5. Disconnect the adjustable pedal motor drive cable, detach the retainer and position the cable aside.

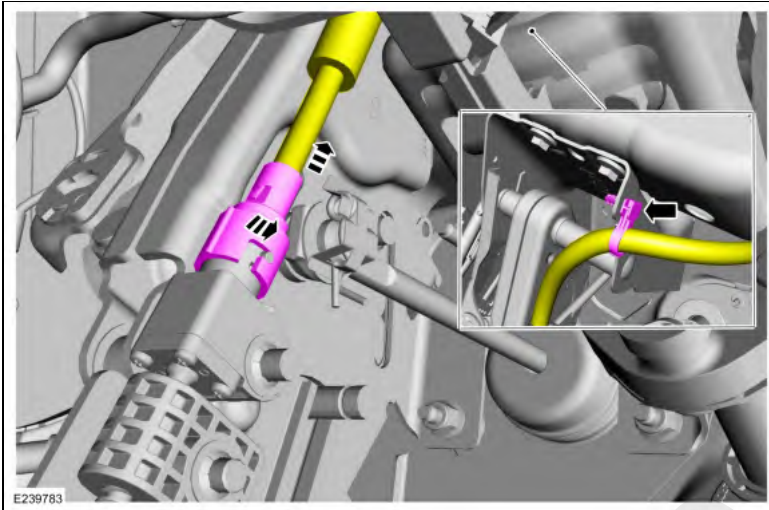

All vehicles



6.
 1. Detach the harness retainer.
 2. Remove the bolts and position the trailer to lighting module aside.
Torque: 106 lb.in (12 Nm)

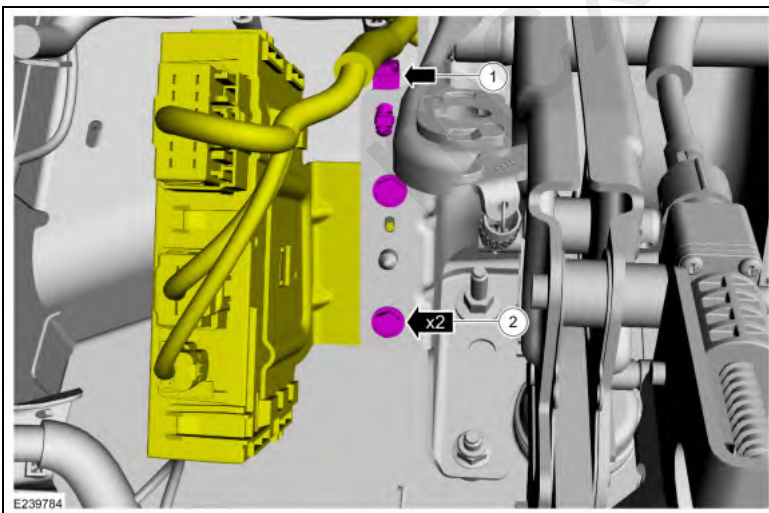



7. **NOTICE: Do not service the brake pedal without first removing the stoplamp switch. Remove this switch with the brake pedal in the at-rest position. Attempting to remove the switch when the plunger is extended (during pedal apply) results in damage to the switch.**

Remove the stoplamp switch.
Refer to: Stoplamp Switch (417-01 Exterior Lighting, Removal and Installation).

 
8. Remove the clip.

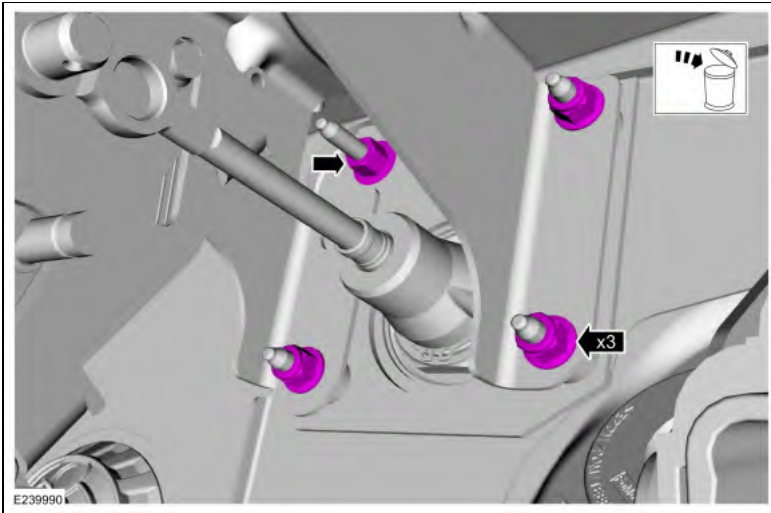

 12. Remove the upper brake pedal bracket bolts.
Torque: 18 lb.ft (25 Nm)

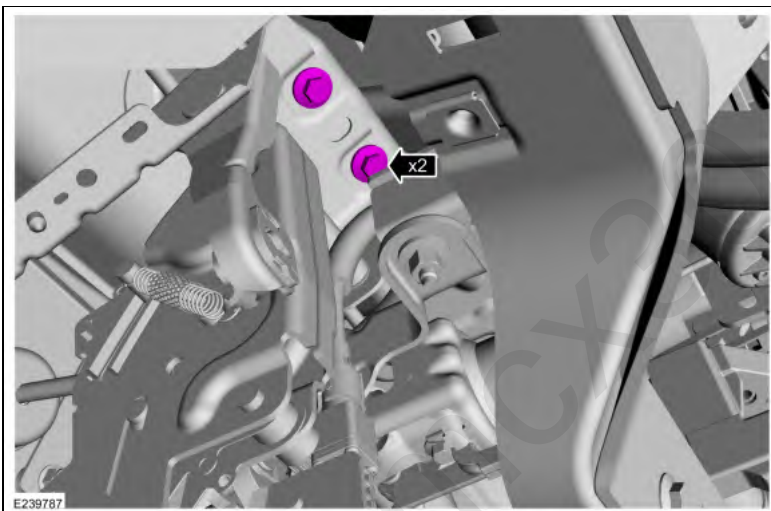

13.
 1. Have an assistant pull the brake booster and master cylinder away from the cowl.
 2. Remove the brake pedal and bracket.

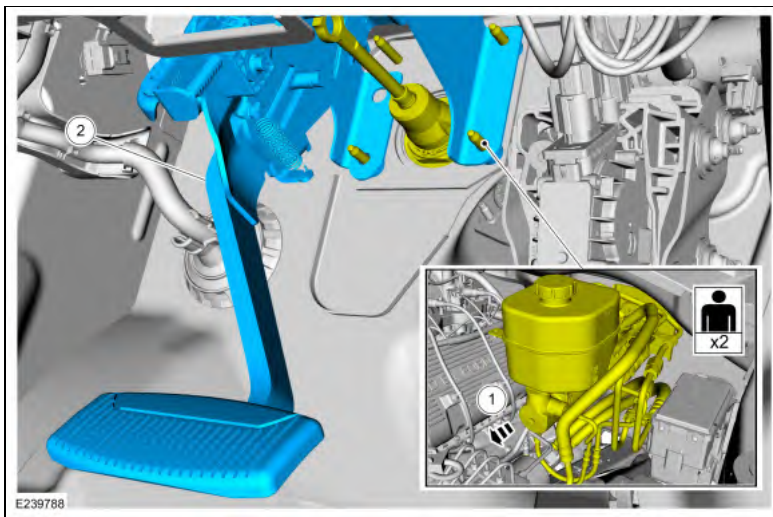

Installation

All vehicles

1. **NOTICE:** Do not press, pull or otherwise move the brake pedal while installing the stoplamp switch. Install this switch with the booster push rod attached to the brake pedal and with the brake pedal in the at-rest position. Installing this switch with the pedal in any other position results in incorrect adjustment and damages the switch.

To install, reverse the removal procedure.

Vehicles equipped with adjustable pedals

2. Index the pedal assemblies.
Refer to: Adjustable Pedal Indexing (206-06 Hydraulic Brake Actuation, General Procedures).