

Anti-Lock Brake System (ABS) Module


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** The PMI process must begin with the current ABS module installed. If the current ABS module does not respond to the diagnostic scan tool, the tool may prompt for As-Built Data as part of the repair.


Using a diagnostic scan tool, begin the PMI process for the ABS module following the on-screen instructions.

2. If equipped with a secondary battery.
Remove the LH fender splash shield.
Refer to: Fender Splash Shield (501-02 Front End Body Panels, Removal and Installation).
3. Disconnect the ABS module electrical connector.

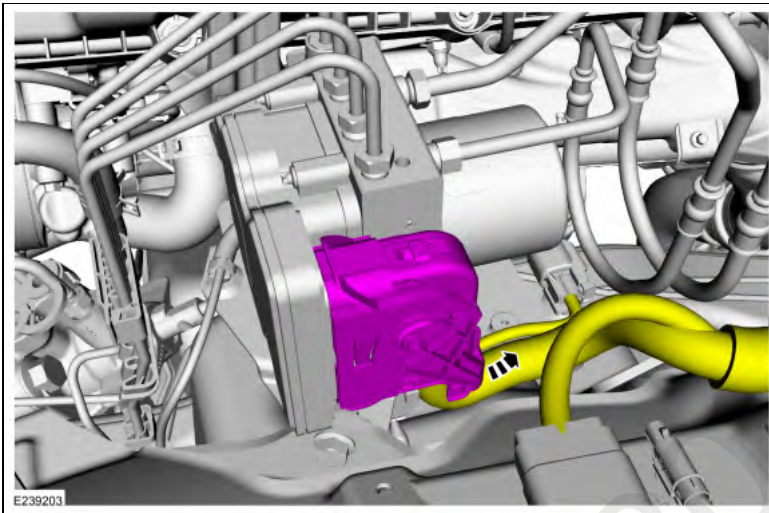

4. **NOTICE:** Make sure the HCU and ABS module are clean and free of any brake fluid or foreign material before separating the components. Do not allow any brake fluid or foreign material to enter the mating side of the ABS module or component damage can occur.

Remove the screws and the ABS module. Discard the screws.
Torque: 27 lb.in (3 Nm)

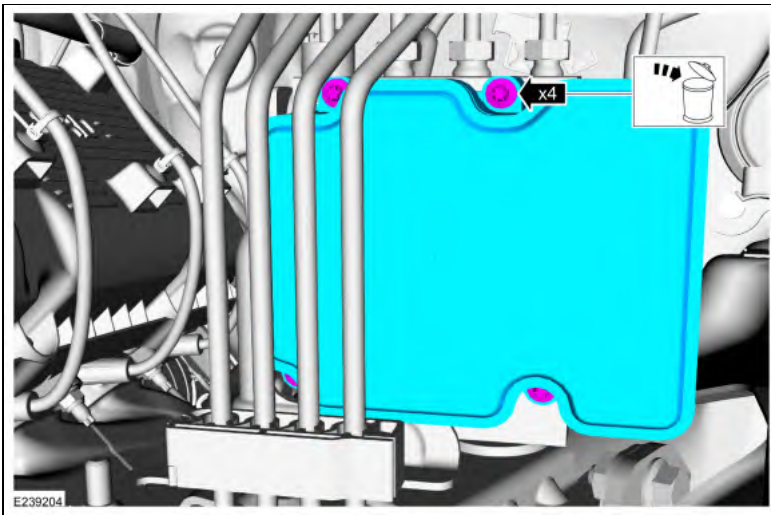

Installation

1. To install, reverse the removal procedure.
 2. Using a diagnostic scan tool, complete the PMI process for the ABS module following the on-screen instructions.
 3. Carry out the Brake System Pressure Bleeding, the Accelerometer Configuration and the ABS Module Bleed Configuration service functions using the scan tool and following the diagnostic scan tool on-screen instructions.
-