


Rear Wheel Speed Sensor - Vehicles With: Single Rear Wheels

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: Typical RH wheel speed sensor shown.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the electrical connector and detach the harness retainers.

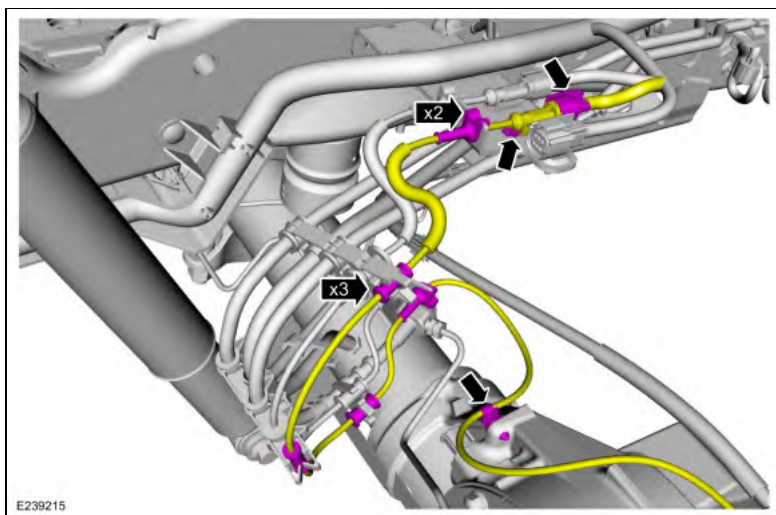


3. Detach the harness retainers from the axle.

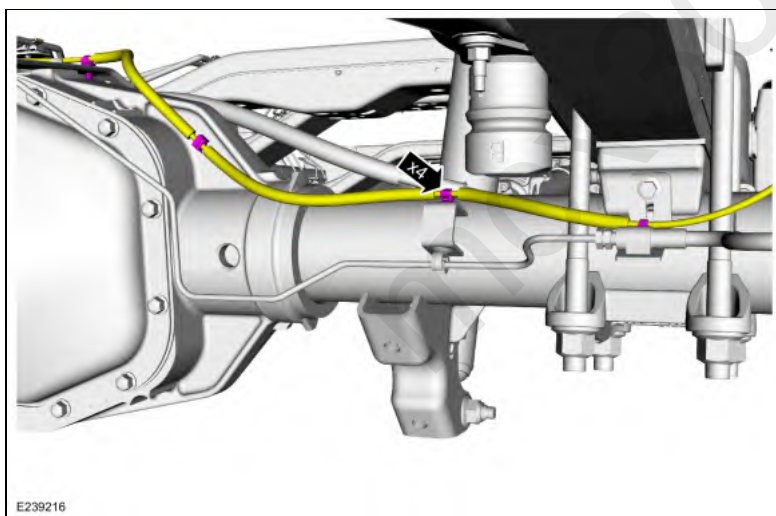

4. Using compressed air, clean the area surrounding the wheel speed sensor.

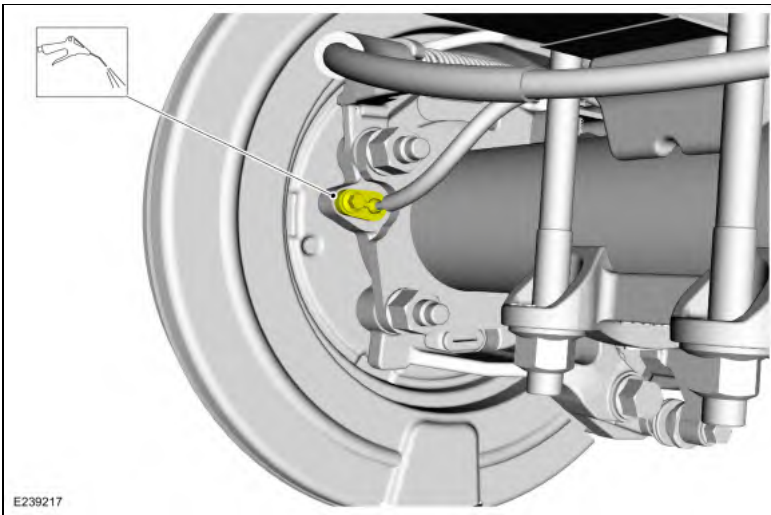


5. Detach the harness retainer, remove the bolt and the wheel speed sensor.
Torque: 177 lb.in (20 Nm)

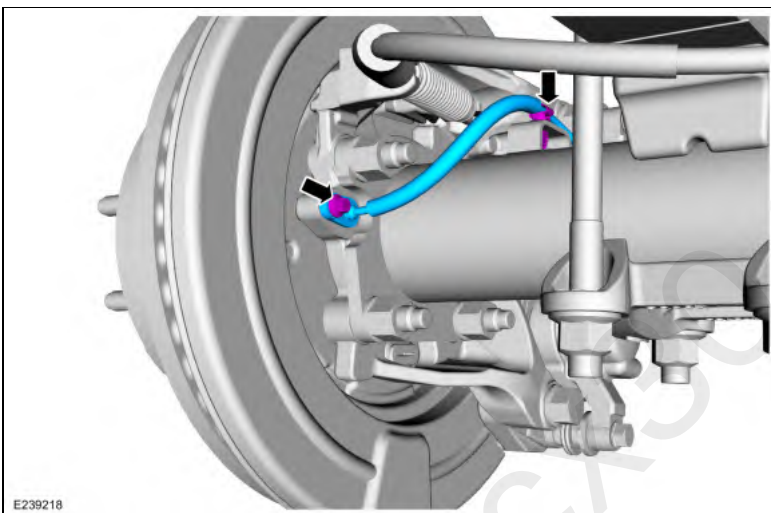

Installation

1. To install, reverse the removal procedure.
2. Before installing a new sensor, inspect the sensor housing to make sure the sensor cavity is clean and free of foreign material.

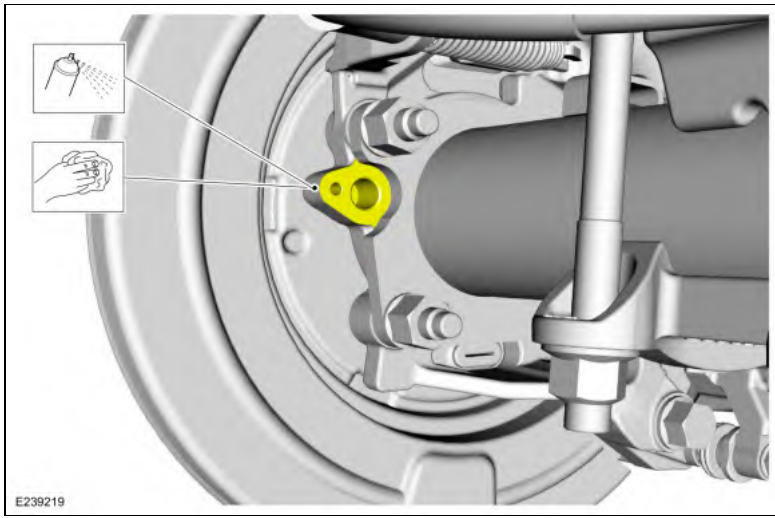

mcx30.com