

Rear Wheel Speed Sensor - Vehicles With: Dual Rear Wheels

Materials


Name	Specification
Motorcraft® Metal Brake Parts Cleaner - PM-4-A, PM-4-B	-

Removal



NOTE: Removal steps in this procedure may contain installation details.

NOTE: Typical RH wheel speed sensor shown.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the electrical connector and detach the harness retainers

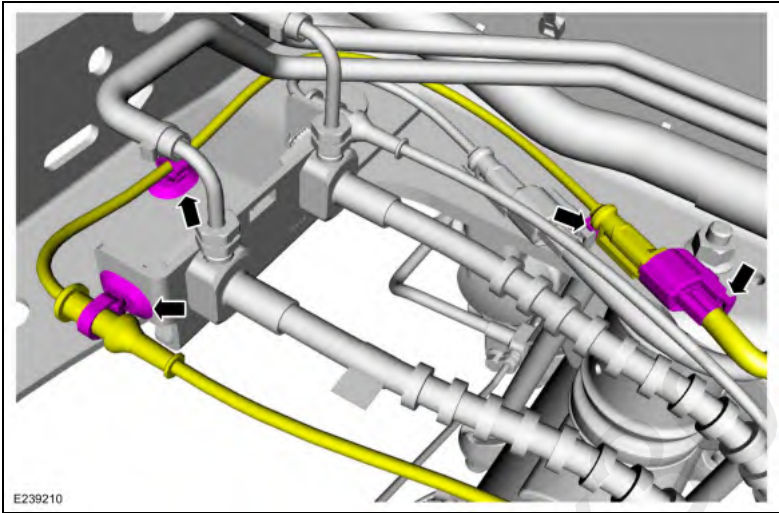

 3. Using compressed air, clean the area surrounding the wheel speed sensor.

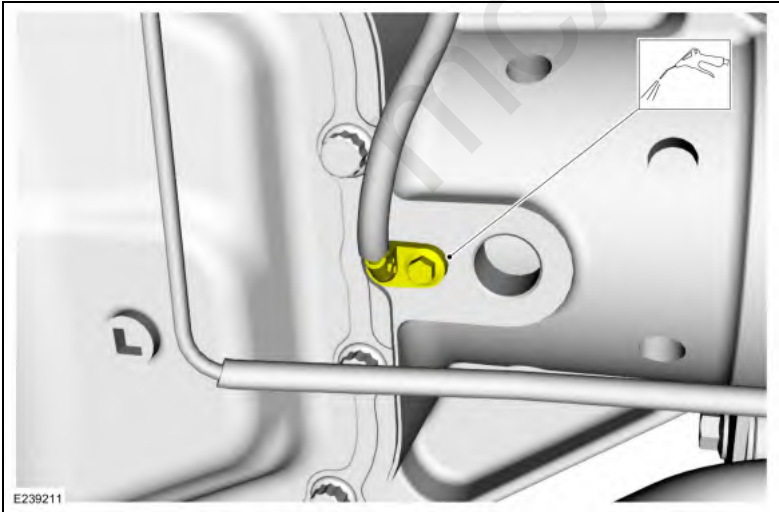

4. Detach the harness retainers, remove the bolt and the wheel speed sensor.
Torque: 80 lb.in (9 Nm)

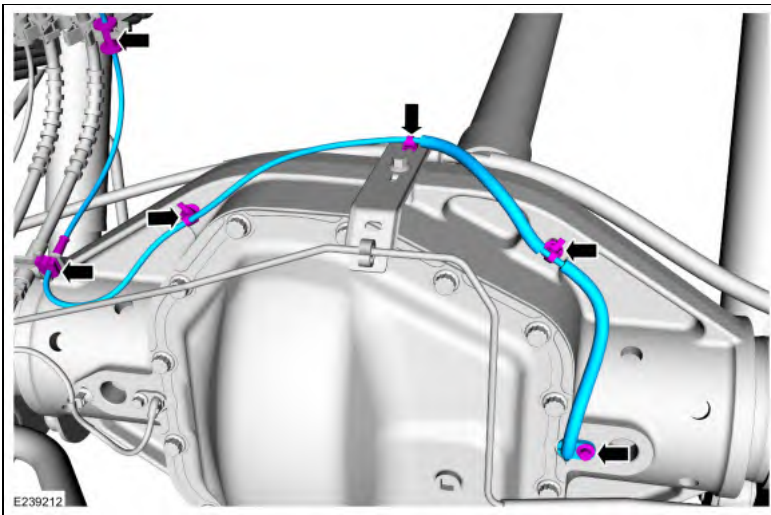

Installation

1. To install, reverse the removal procedure.
2. Before installing a new sensor, inspect the sensor housing to make sure the sensor cavity is clean and free of foreign material.
Material: Motorcraft® Metal Brake Parts Cleaner / PM-4-A, PM-4-B

