


Stability Assist/Traction Control Switch

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the FCIM.
Refer to: Front Controls Interface Module (FCIM) (415-00 Information and Entertainment System - General Information, Removal and Installation).
Refer to: Front Controls Interface Module (FCIM) (415-00 Information and Entertainment System - General Information, Removal and Installation).
Refer to: Front Controls Interface Module (FCIM) (415-00 Information and Entertainment System - General Information, Removal and Installation).
2. Press the 2 tabs and remove the stability assist/traction control switch.

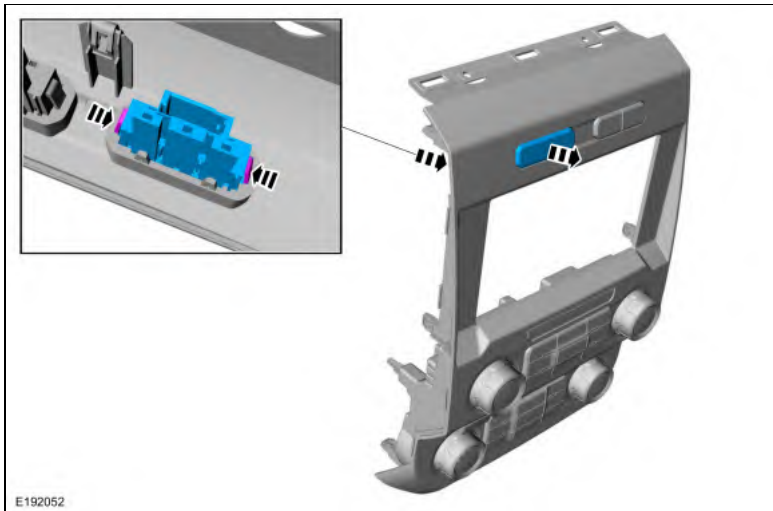

Installation

1. To install, reverse the removal procedure.