


Wheel Speed Sensor Ring - Vehicles With: Single Rear Wheels

Special Tool(s) / General Equipment

Plastic Mallet
Three Leg Puller
Wooden Block


Removal

1. Remove the wheel hub.
Refer to: Wheel Hub (205-02C Wheel Hubs and Bearings - Full Floating Axle - Vehicles With: Dana M275/Dana M300, Removal and Installation).
Refer to: Wheel Hub (205-02E Wheel Hubs and Bearings - Full Floating Axle - Vehicles With: Ford 10.5 Inch Ring Gear, Removal and Installation).
2. Using a suitable step plate and 3-leg puller, remove the wheel speed sensor ring.
Use the General Equipment: Three Leg Puller

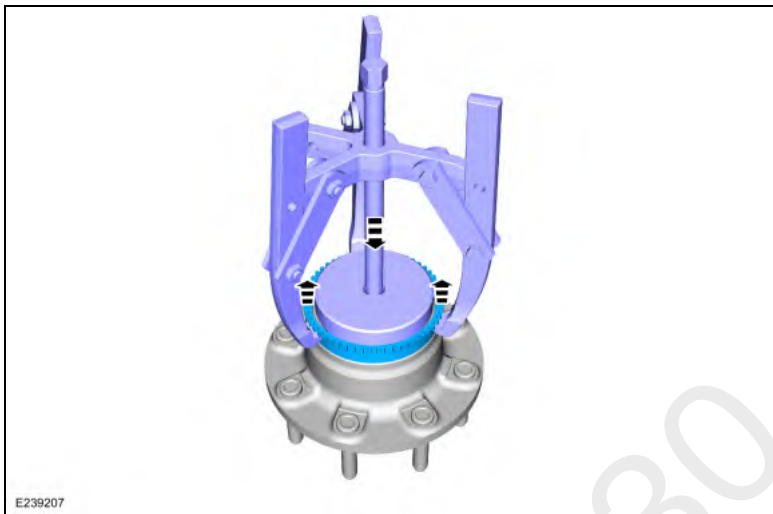

Installation

1. Using a mallet and a wooden block, install the ring by gently and evenly tapping the wood block.
Use the General Equipment: Plastic Mallet
Use the General Equipment: Wooden Block

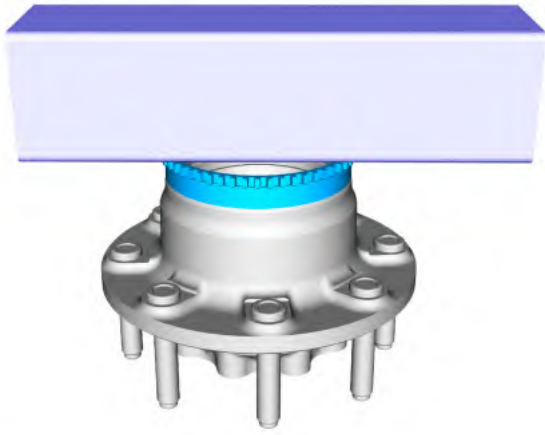

E239208



2. Install the wheel hub.

Refer to: Wheel Hub (205-02C Wheel Hubs and Bearings - Full Floating Axle - Vehicles With: Dana M275/Dana M300, Removal and Installation).

Refer to: Wheel Hub (205-02E Wheel Hubs and Bearings - Full Floating Axle - Vehicles With: Ford 10.5 Inch Ring Gear, Removal and Installation).