

Power Steering Fluid Cooler

Removal


NOTICE: While repairing the power steering system, care should be taken to prevent the entry of foreign material or failure of the power steering components may result.

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the radiator grille.
Refer to: Radiator Grille (501-08 Exterior Trim and Ornamentation, Removal and Installation).
2. **NOTICE:** Make sure the area is clean and free of foreign material before disconnecting the power steering hoses.

NOTICE: Make sure that all openings are sealed.

Release the clamps and disconnect the hoses. Discard the clamps.

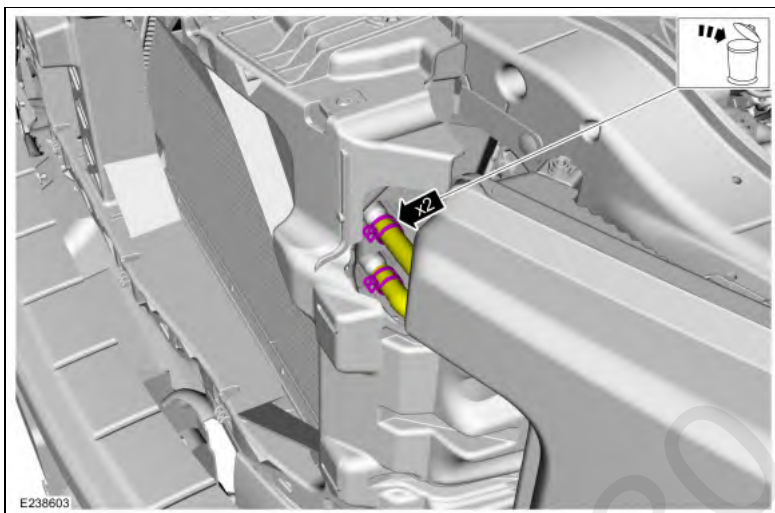

3. Remove the bolts and the power steering fluid cooler.
Torque: 26 lb.ft (35 Nm)

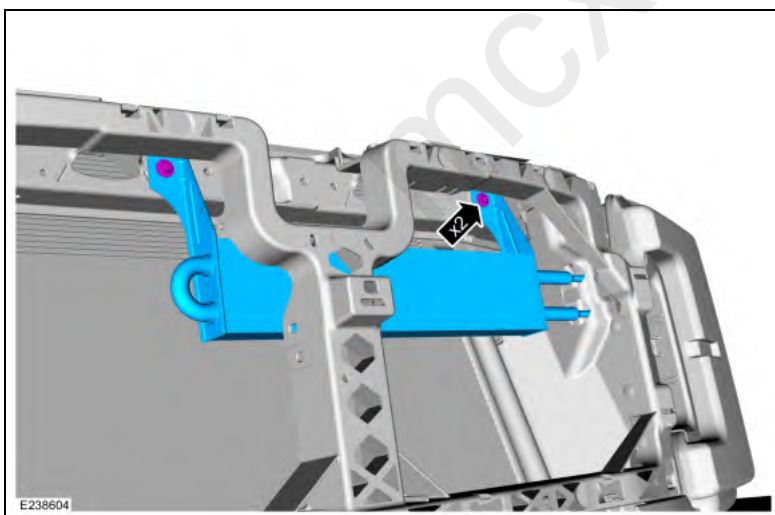

Installation

1. To install, reverse the removal procedure.
2. Fill the power steering system.
Refer to: Power Steering System Filling (211-02 Power Steering, General Procedures).

