


Power Steering Fluid Reservoir

Removal


NOTICE: While repairing the power steering system, care should be taken to prevent the entry of foreign material or failure of the power steering components may result.

NOTE: Removal steps in this procedure may contain installation details.

1.
 1. Clean the area around the power steering fluid reservoir cap.
 2. Remove the power steering fluid reservoir cap.

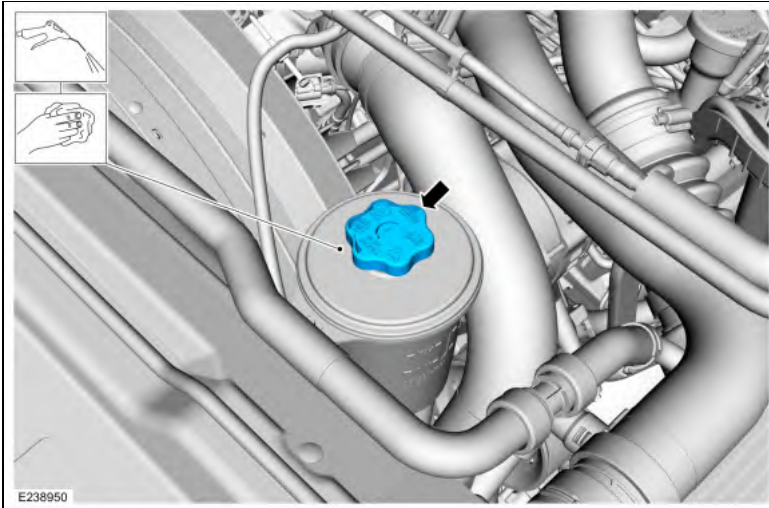

2. Using a suction gun remove the power steering fluid.

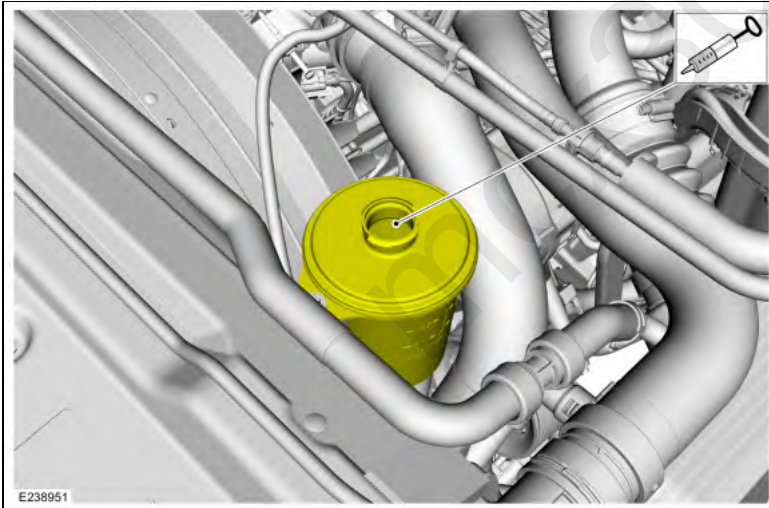


3. **NOTE:** All vehicles except vehicles equipped with Hydro-Boost[®] Brakes.

NOTE: Make sure that all openings are sealed.

NOTE: Note the position of the components before removal.

1. Release the clamp and disconnect the power steering fluid pump hose from the power steering fluid reservoir.
2. Release the clamp and disconnect the power steering fluid cooler hose from the power steering fluid reservoir.

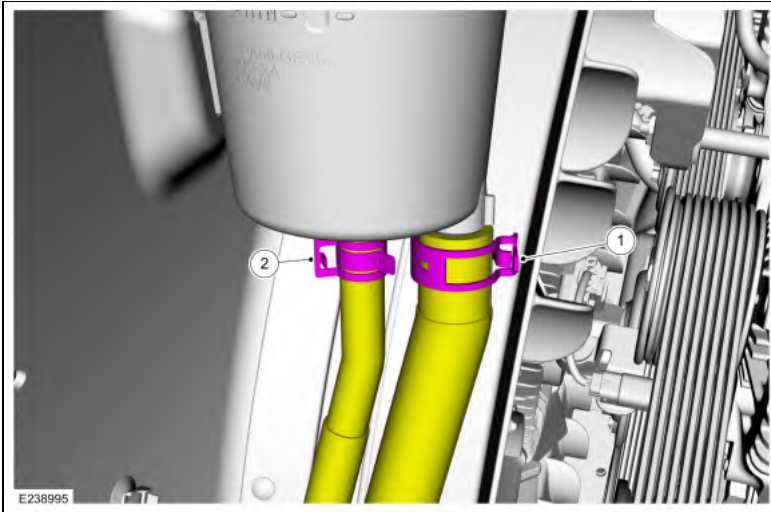


4. **NOTE:** Vehicles equipped with Hydro-Boost[®] Brakes.



NOTE: Make sure that all openings are sealed.

NOTE: Note the position of the components before removal.

1. Release the clamp and disconnect the power steering fluid pump hose from the power steering fluid reservoir.
2. Release the clamp and disconnect the power steering fluid cooler hose from the power steering fluid reservoir.
3. Release the clamp and disconnect the power steering fluid Hydro-Boost[®] hose from the power steering fluid reservoir.

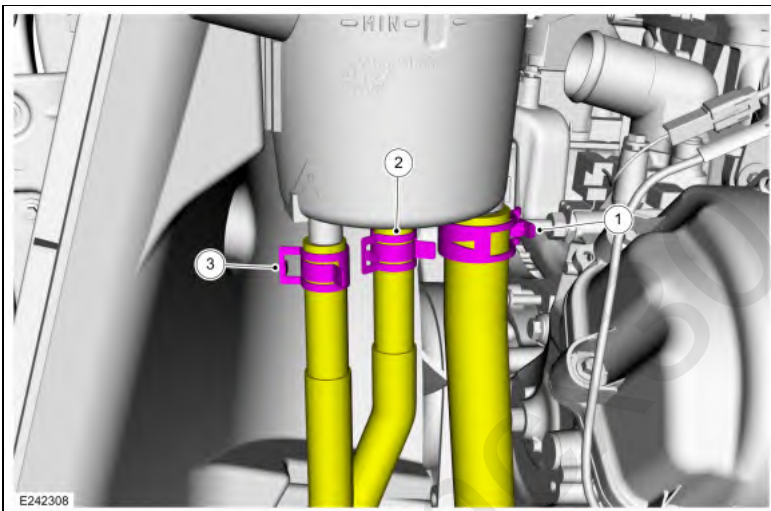

 5. Remove the bolt and the power steering fluid reservoir.
Torque: 62 lb.in (7 Nm)

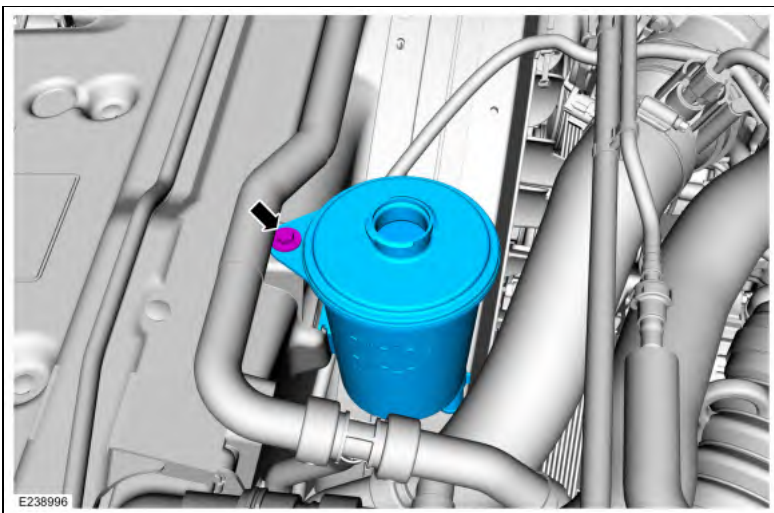

Installation

1. To install, reverse the removal procedure.
2. Fill the power steering system.
Refer to: Power Steering System Filling (211-02 Power Steering, General Procedures).

mcx30.com