


Steering Linkage Damper - F-250/F-350, RWD

Removal


NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

NOTE: Removal steps in this procedure may contain installation details.

1. Position the vehicle on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the steering linkage damper-to-frame bracket bolt.
Torque: 59 lb.ft (80 Nm)

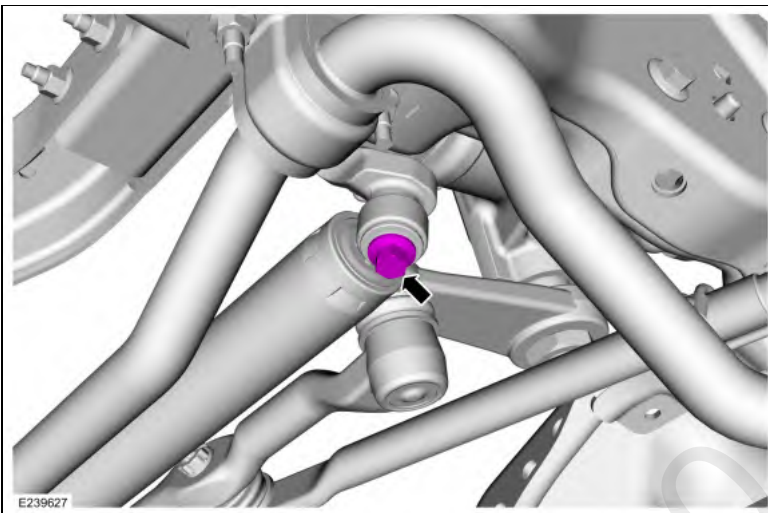

3. Remove the steering linkage damper-to-center link bracket bolt and nut and remove the steering linkage damper.
Torque: 66 lb.ft (90 Nm)

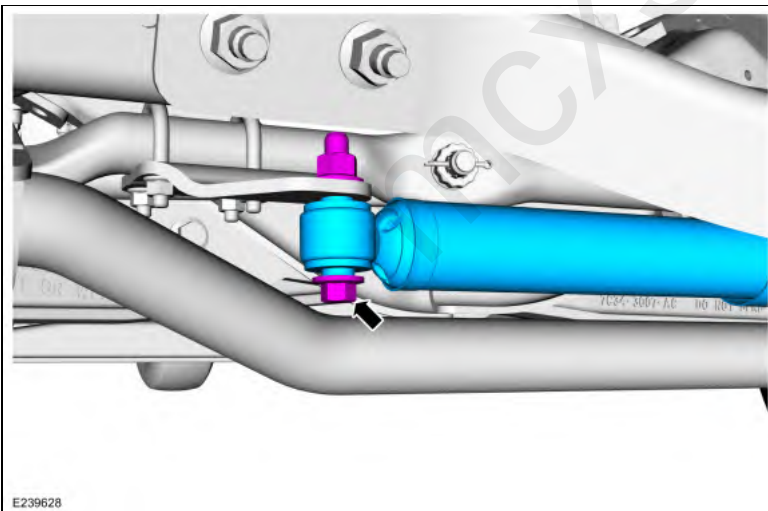

Installation

1. To install, reverse the removal procedure.

