


Steering Column Upper Shaft

Removal

1. **NOTE:** Do not allow the steering column to rotate while the steering column shaft is disconnected or damage to the steering column internal sensor may result.


NOTE: Use a steering wheel holding device (such as Hunter[®] 28-75-1 or equivalent).

Keep the steering wheel in the straight-ahead position.

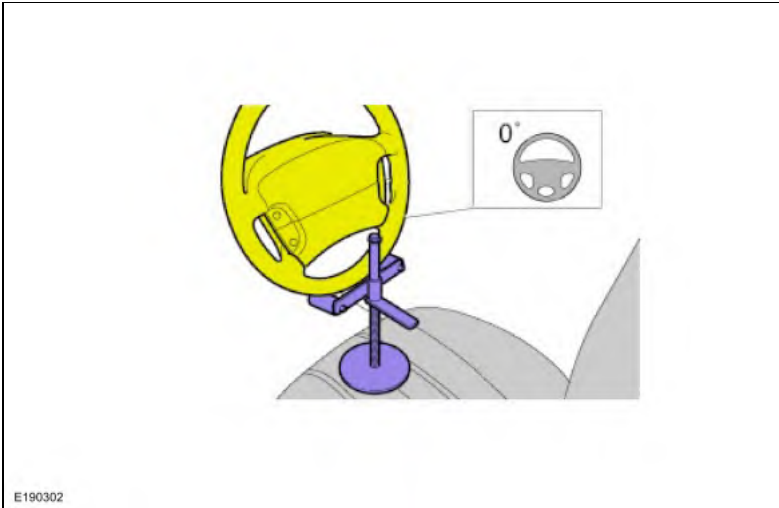

2. **NOTICE:** Install a new steering column shaft bolt. Reuse could result in bolt failure and loss of vehicle control. Failure to follow this instruction may result in serious injury to vehicle occupant(s).

Remove and discard the bolt and disconnect the upper shaft from the steering column.

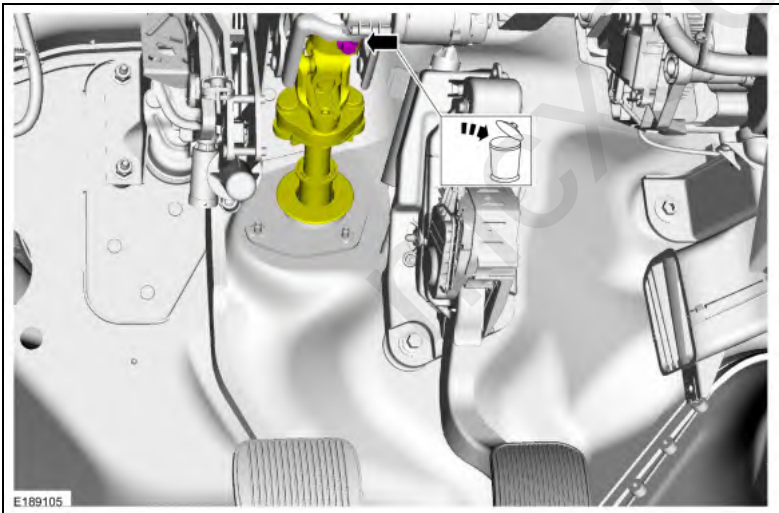


3. **NOTICE:** Install a new steering column shaft bolt. Reuse could result in bolt failure and loss of vehicle control. Failure to follow this instruction may result in serious injury to vehicle occupant(s).

Remove and discard the bolt and disconnect the upper shaft from the lower shaft.



1. Connect the upper shaft to the steering column and install the new bolt.
Torque: 21 lb.ft (28 Nm)

1. Connect the upper shaft to the steering column and install the new bolt.
Torque: 21 lb.ft (28 Nm)

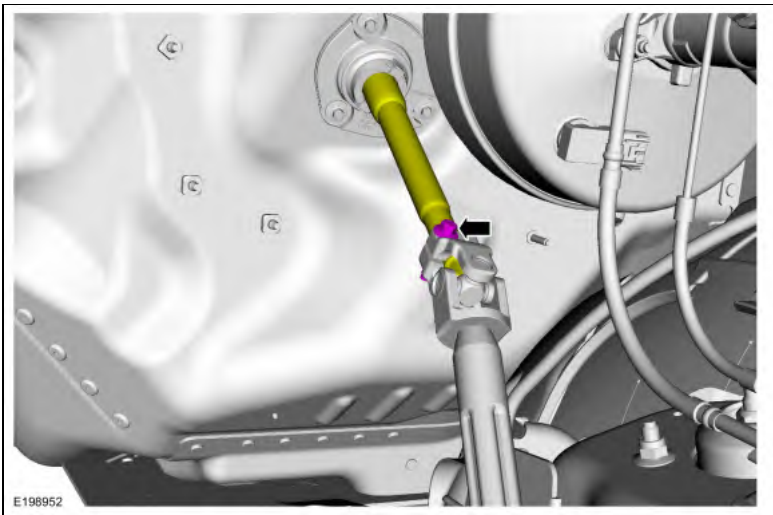

mcx30.com