

Steering Wheel


Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: High series heated steering wheel shown, all others similar.


NOTE: Make sure the wheels are in the straight ahead position.

1. Remove the driver airbag module.
Refer to: Driver Airbag (501-20B Supplemental Restraint System, Removal and Installation).
2. Disconnect the steering wheel electrical connector(s).


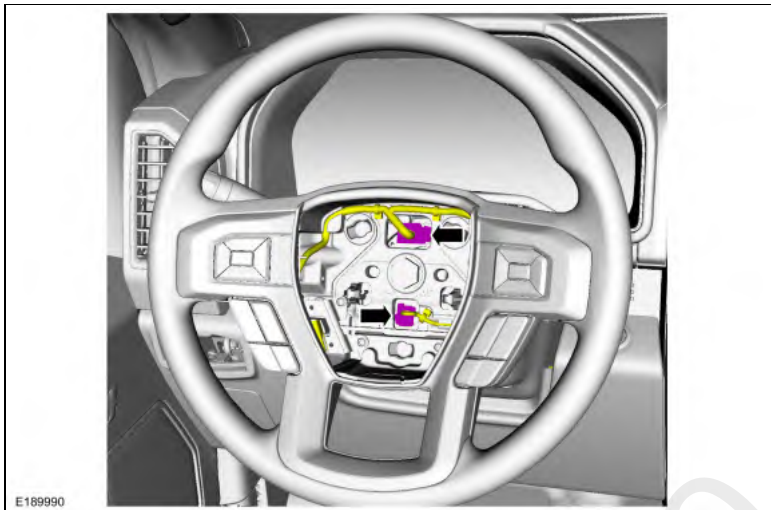


3. **NOTE:** Make sure the tick-mark on the end of the steering column shaft is on the top position.

Remove the steering wheel bolt and the steering wheel.
Torque: 52 lb.ft (70 Nm)

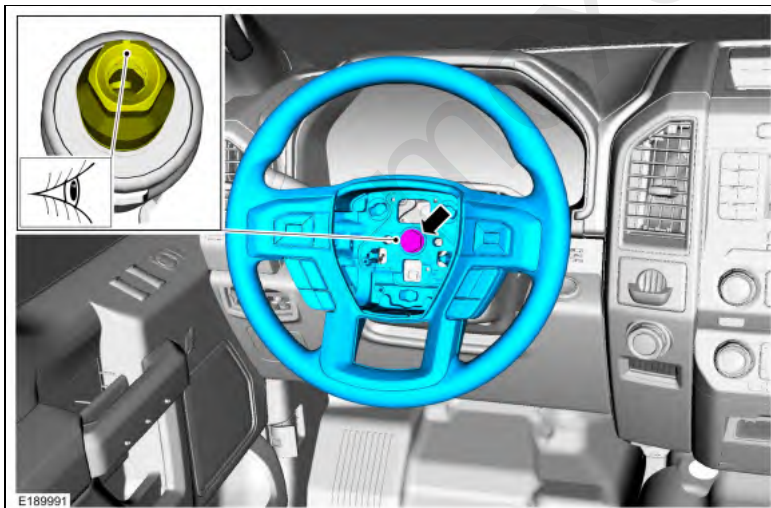

 4. Tape the clockspring rotor to the outer housing to keep it from rotating.

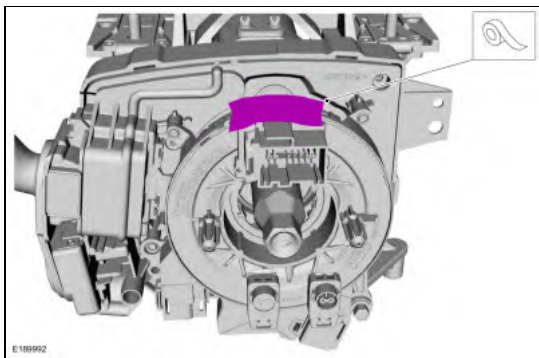

Installation

1. To install, reverse the removal procedure.

mcx30.com