

Heated Steering Wheel Module (HSWM)

Removal

1. **NOTE:** This step is only necessary when installing a new component.


NOTE: The PMI process must begin with the current HSWM installed. If the current HSWM does not respond to the diagnostic scan tool, the tool may prompt for As-Built Data as part of the repair.

Using a diagnostic scan tool, begin the PMI process for the HSWM following the on-screen instructions.


2. Lower the steering column opening trim panel.




3. Remove the retainers and the steering column opening trim panel and reinforcement.
Torque: 80 lb.in (9 Nm)

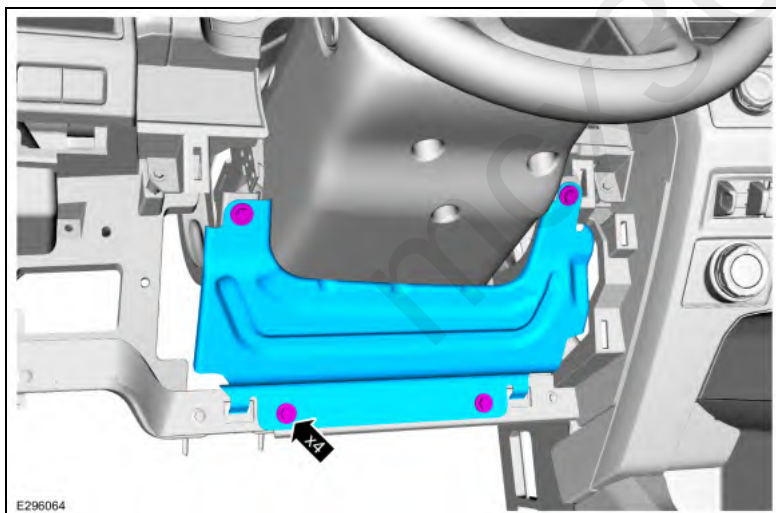

4. Disconnect the HSWM electrical connector.

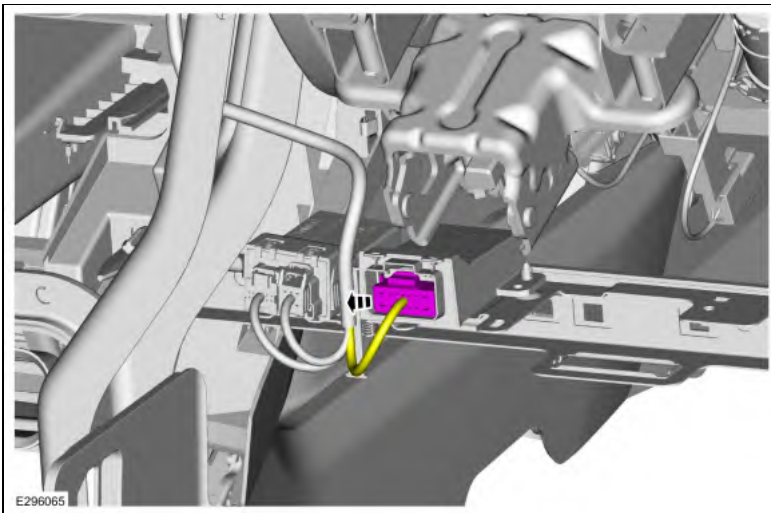

5. Remove the HSWM.

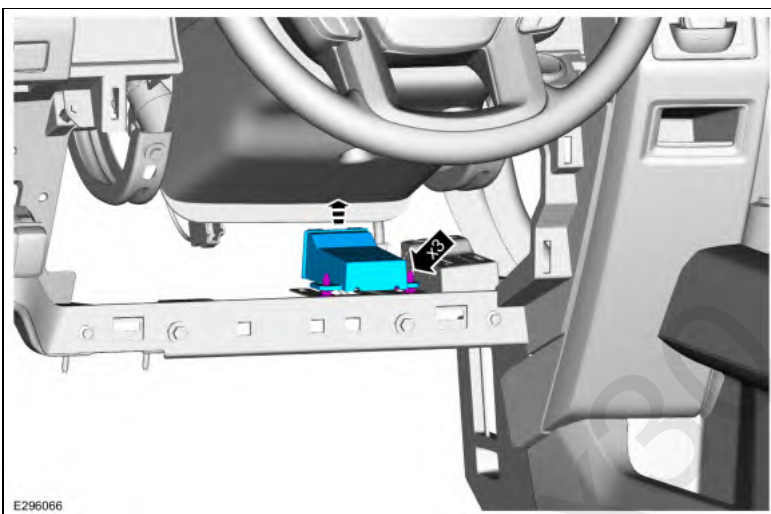

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

Using a diagnostic scan tool, complete the PMI process for the HSWM following the on-screen instructions.