


Ignition Switch - Vehicles With: Keyless Vehicle System

Removal

1. Lower the steering column opening trim panel.



2. Remove the start/stop switch.
 1. Disconnect the start/stop switch electrical connector.
 2. Release the start/stop switch tabs.
 3. Push the start/stop switch out of the steering column opening trim panel.

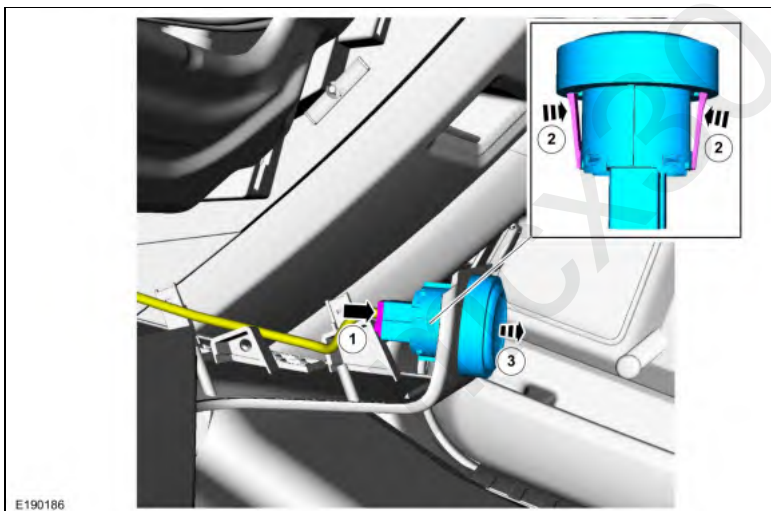

Installation

1. To install, reverse the removal procedure.

