


Steering Wheel Rotation Sensor

Removal

1. Remove the clockspring.
Refer to: Clockspring (501-20B Supplemental Restraint System, Removal and Installation).
2. Remove the steering wheel rotation sensor.

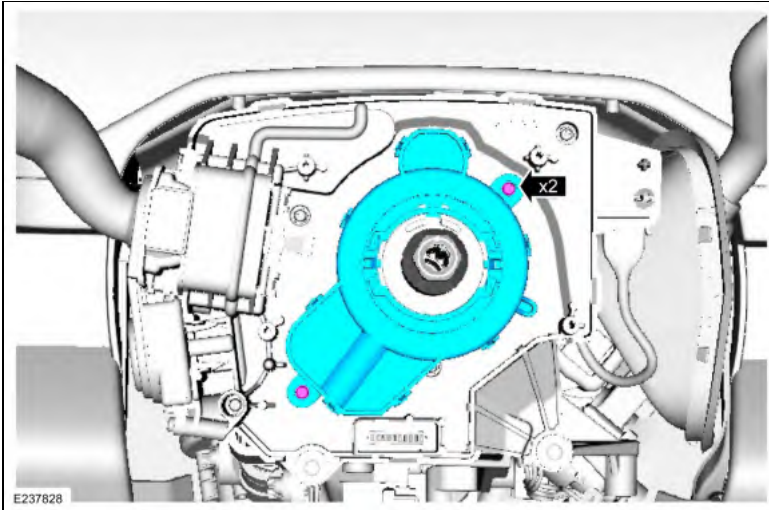

Installation

1. To install reverse the removal procedure.