


Crankshaft End Play


General Equipment

Dial indicator
Dial indicator fixture


1. Install the dial indicator and holding tool.

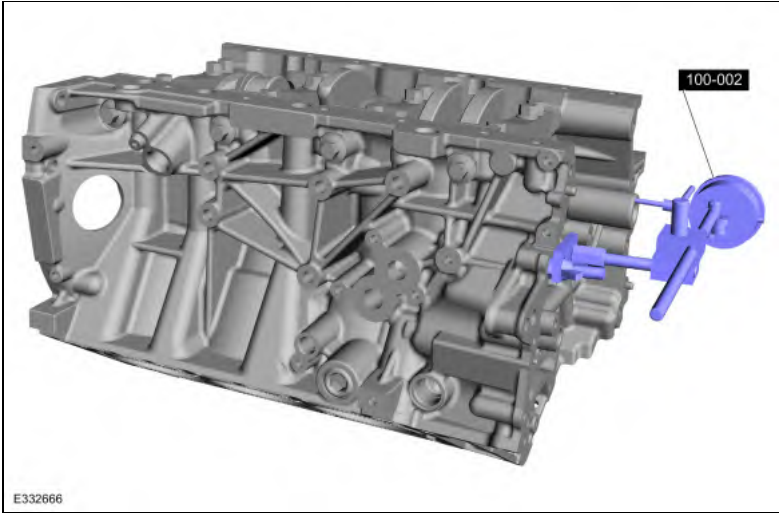

- 2.
1. Position the crankshaft to the rear of the cylinder block.
 2. Zero the dial indicator.

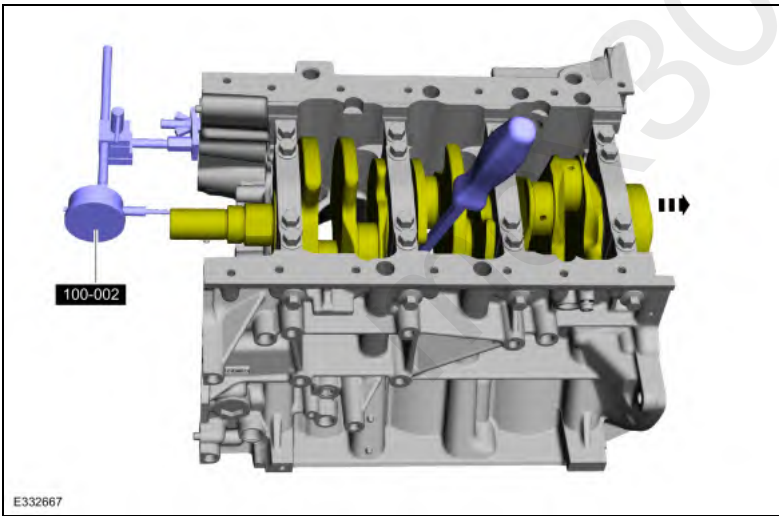

- 3.
1. Position the crankshaft to the front of the cylinder block.
 2. Record the crankshaft end play. If the crankshaft end play exceeds the specified range, install new parts as necessary.
For additional information, refer to: Specifications (303-01A Engine - 6.2L V8, Specifications).
For additional information, refer to: Specifications (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Specifications).

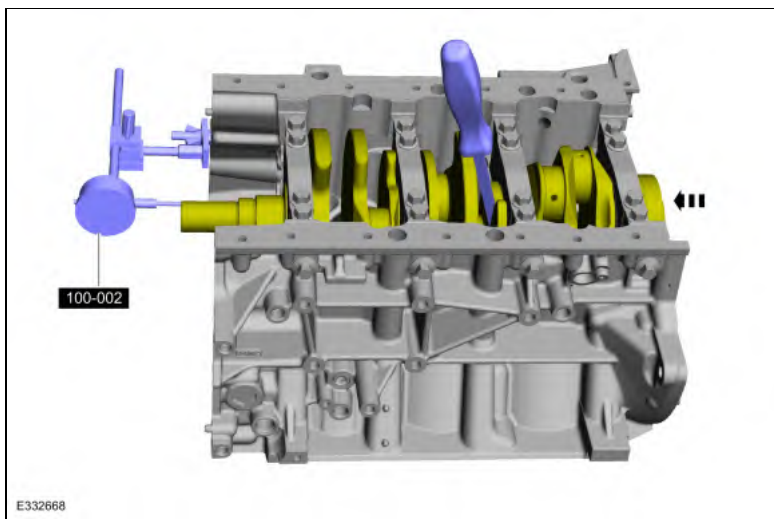

4. Remove the dial indicator and holding tool.

