

Piston Diameter

Check

1.
 - Measure the piston diameter 90 degrees from the piston pin and piston diameter (DN) height down from the top of the piston at the point indicated.
 - Refer to specifications for the piston diameter (DN) height.
Refer to: Specifications (303-01A Engine - 6.2L V8, Specifications).
Refer to: Specifications (303-01B Engine - 6.7L Power Stroke Diesel, Specifications).
Refer to: Specifications (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Specifications).

