


Hydraulic Lash Adjuster

Removal

1. Remove the rocker arm.
Refer to: Rocker Arm (303-01B Engine - 6.7L Power Stroke Diesel, Removal and Installation).
2. **NOTE:** The hydraulic lash adjusters can be removed with the cylinder heads installed on the engine.
Using a magnetic telescopic pick-up tool, remove the hydraulic lash adjuster from the valve tappet assembly.

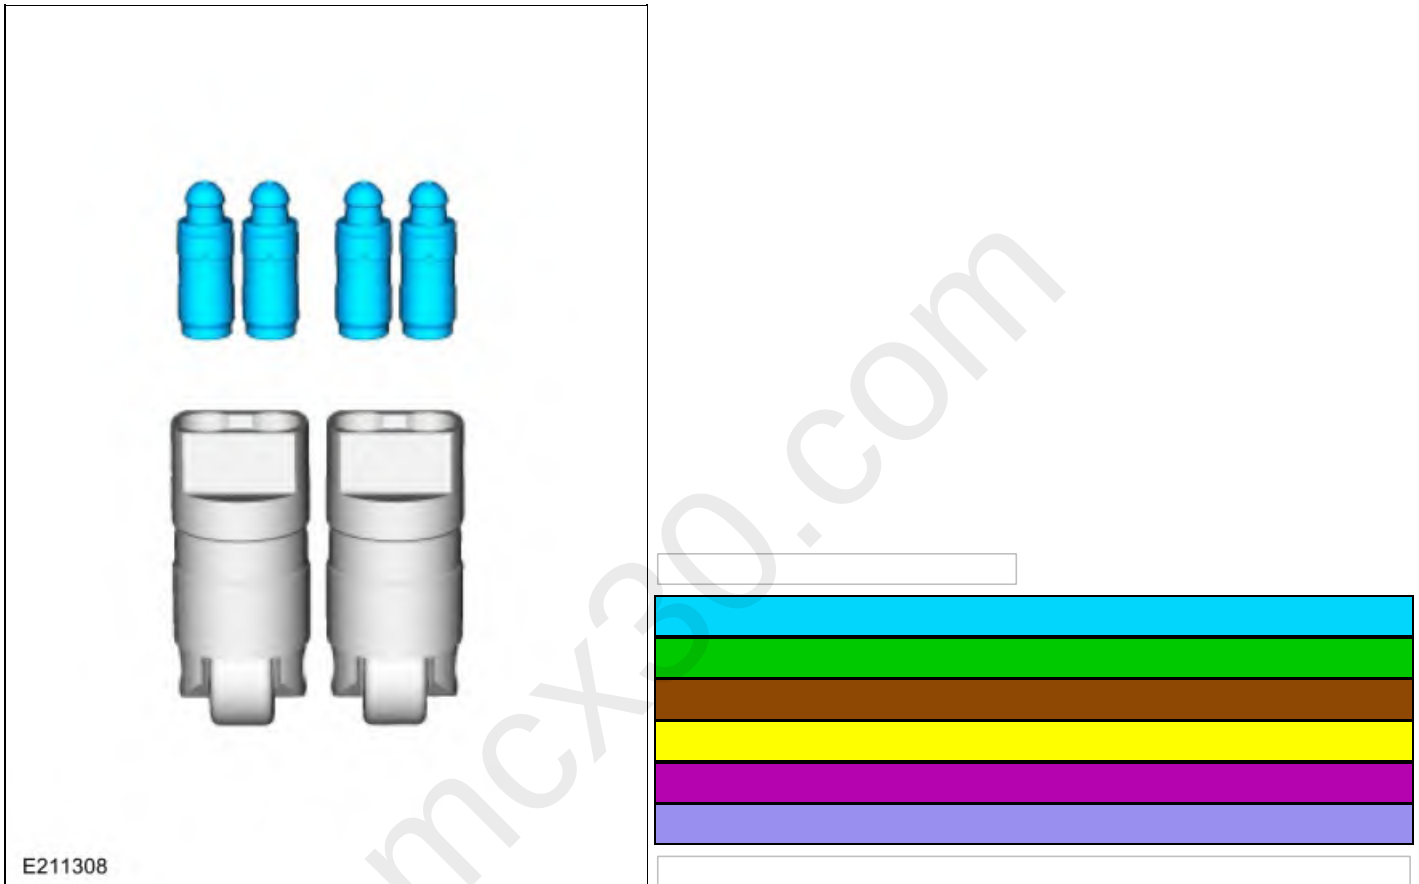

Installation

1.
 - Apply clean engine oil to the hydraulic lash adjuster.
Refer to: Specifications (303-01B Engine - 6.7L Power Stroke Diesel, Specifications).
 - Using a magnetic telescopic pick-up tool, install the hydraulic lash adjuster into the valve tappet assembly.
 - Verify that the hydraulic lash adjuster is properly installed.



2. Install the rocker arm.
Refer to: Rocker Arm (303-01B Engine - 6.7L Power Stroke Diesel, Removal and Installation).