



Oil Pump Screen and Pickup Tube

Removal


1. Remove the upper oil pan.
Refer to: Upper Oil Pan (303-01B Engine - 6.7L Power Stroke Diesel, Removal and Installation).
2. Remove the bolts and the oil pan baffle.

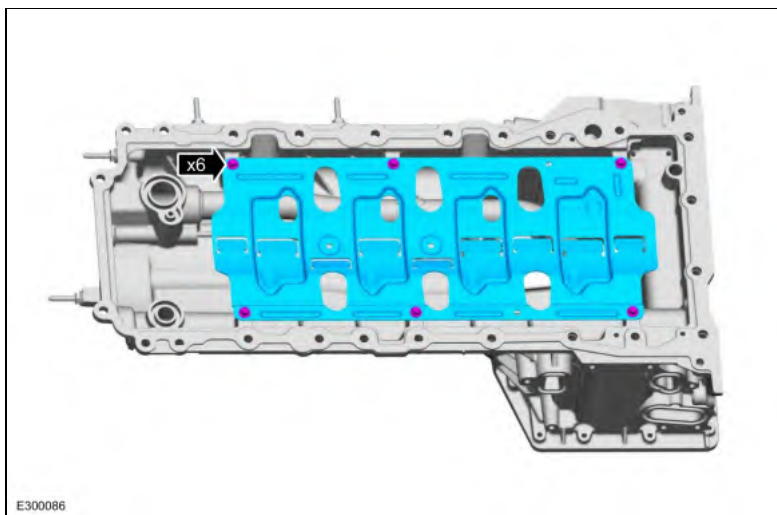

3. Remove the bolts and the oil pump screen and pickup tube.

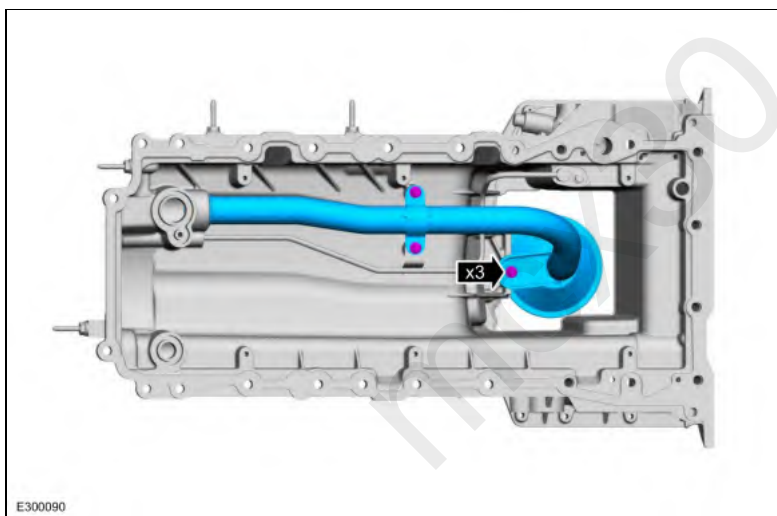


4. Remove and discard the O-ring seal.


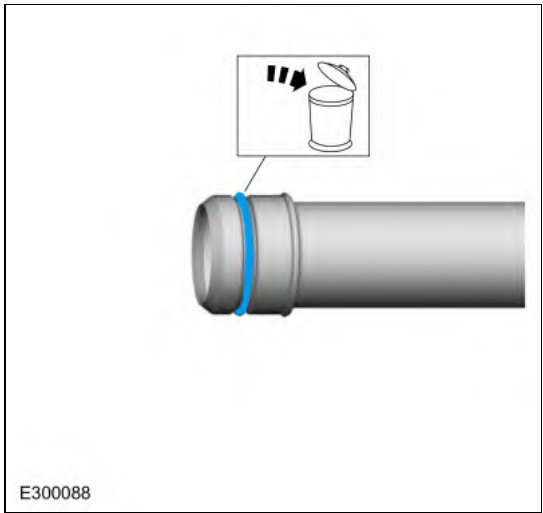


Installation



1. Install a new O-ring seal and lubricate with clean engine oil.
Refer to: Specifications (303-01B Engine - 6.7L Power Stroke Diesel, Specifications).

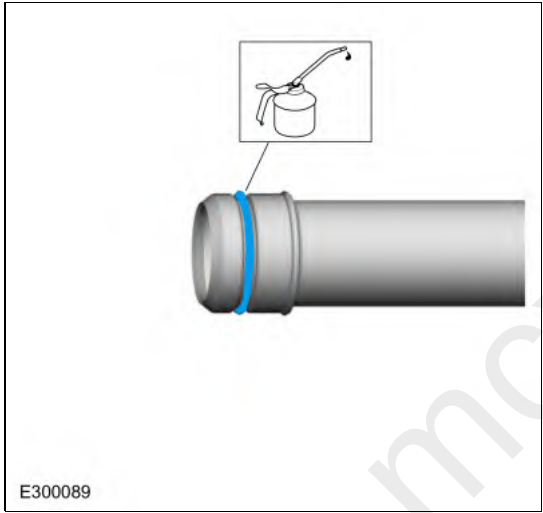

 2. Install the oil pump screen and pickup tube and the bolts.
Torque: 89 lb.in (10 Nm)

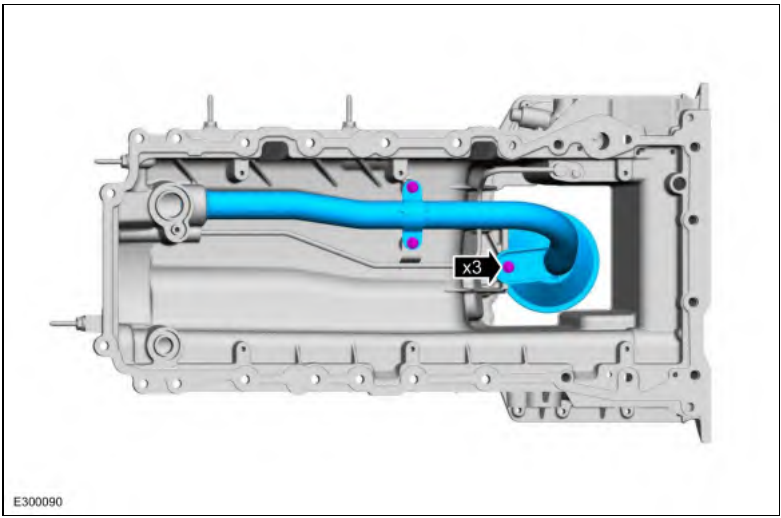

 3. Install the oil pan baffle and the bolts.
Torque: 89 lb.in (10 Nm)

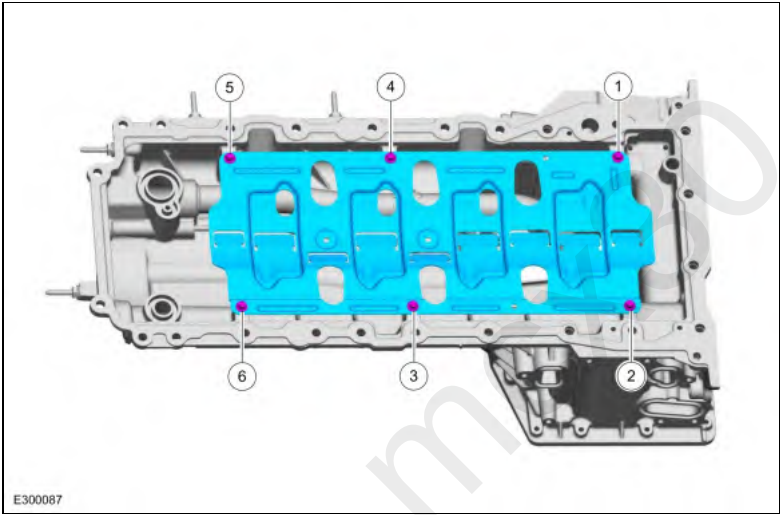

4. Install the upper oil pan.
Refer to: Upper Oil Pan (303-01B Engine - 6.7L Power Stroke Diesel, Removal and Installation).