


Engine Oil Draining and Filling

Special Tool(s) / General Equipment


Oil Drain Equipment

Draining

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2.
 - Remove the drain plug and drain the engine oil.
Use the General Equipment: Oil Drain Equipment
 - Install the drain plug.
Torque: 19 lb.ft (26 Nm)

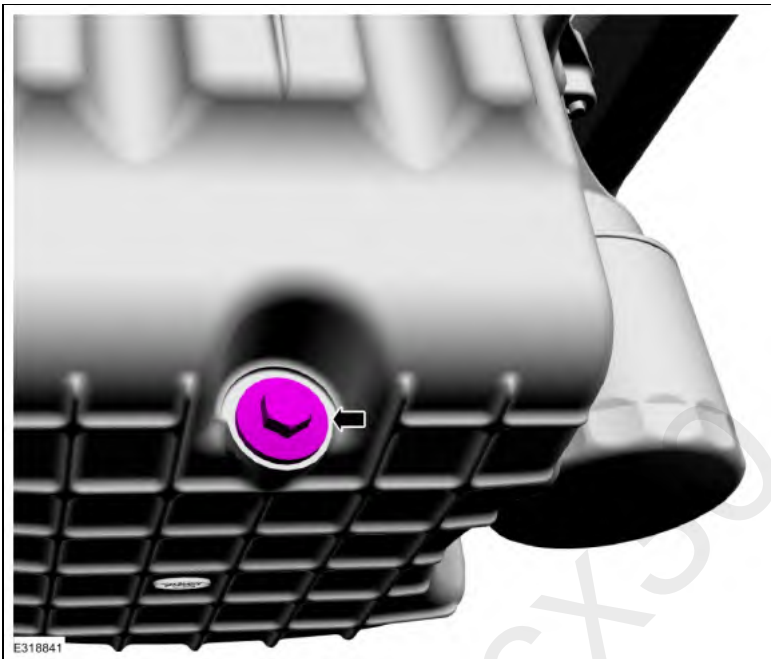


3. Remove and discard the engine oil filter.
Use the General Equipment: Oil Drain Equipment

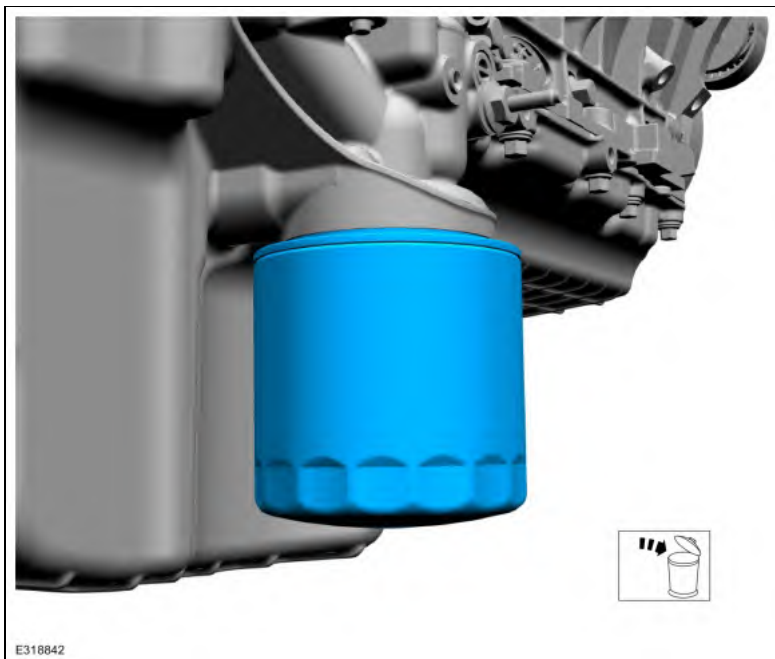

Filling

1.
 - Lubricate the oil filter gasket with clean engine oil.
 - Install a new engine oil filter.

Torque:
Stage 1: 44 lb.in (5 Nm)
Stage 2: 180°

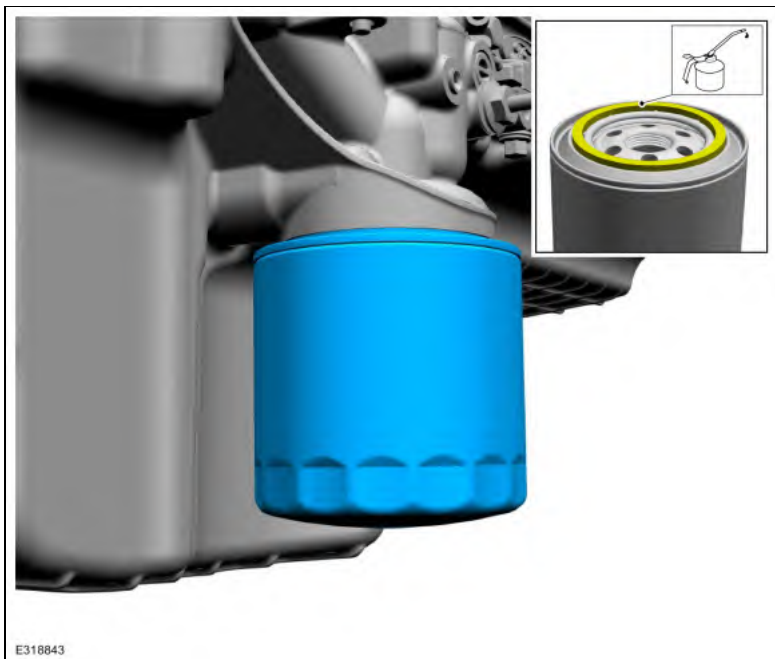

2. Fill the engine with clean engine oil.
Refer to: Specifications (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Specifications).

