


Rocker Arm

Removal

- 1. Remove the valve cover for the side(s) of the engine being serviced.
Refer to: Valve Cover RH (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
Refer to: Valve Cover LH (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
- 2. **NOTE:** If the components are to be reinstalled, they must be installed in the same positions or engine damage may occur. Mark the components for installation into their original locations.

NOTE: LH shown, RH similar.

Remove the bolt and the rocker arm.

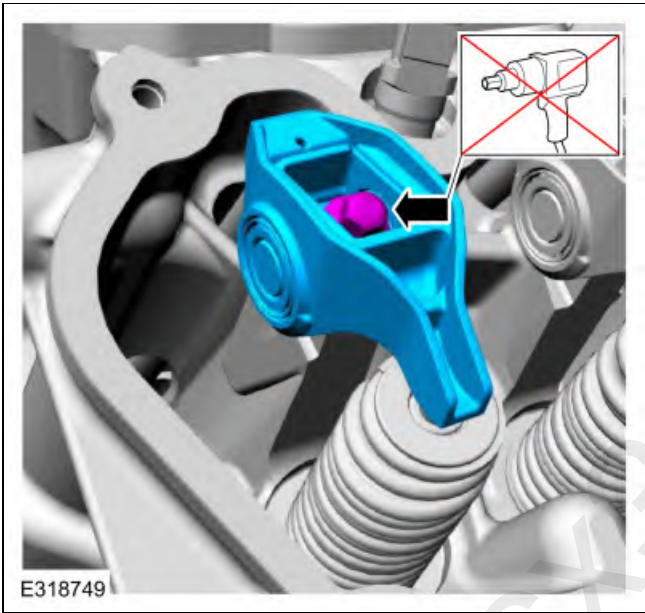


Installation

- 1. Lubricate the rocker arm with clean engine oil.



- 2. Install the rocker arm and the bolt.
Torque:

Stage 1: 177 lb.in (20 Nm)
Stage 2: 30°

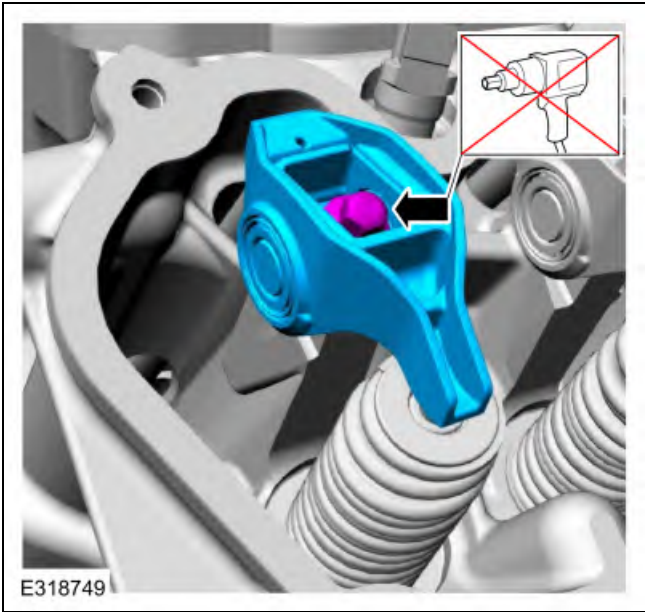

3. Install the valve cover for the side(s) of the engine being serviced.
Refer to: Valve Cover RH (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
Refer to: Valve Cover LH (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).