



Timing Chain Tensioner

Removal

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the engine front cover.
Refer to: Engine Front Cover (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
3.
 1. Depress the timing chain tensioner plunger.
 2. Insert a locking pin to secure the timing chain tensioner plunger in the retracted position.

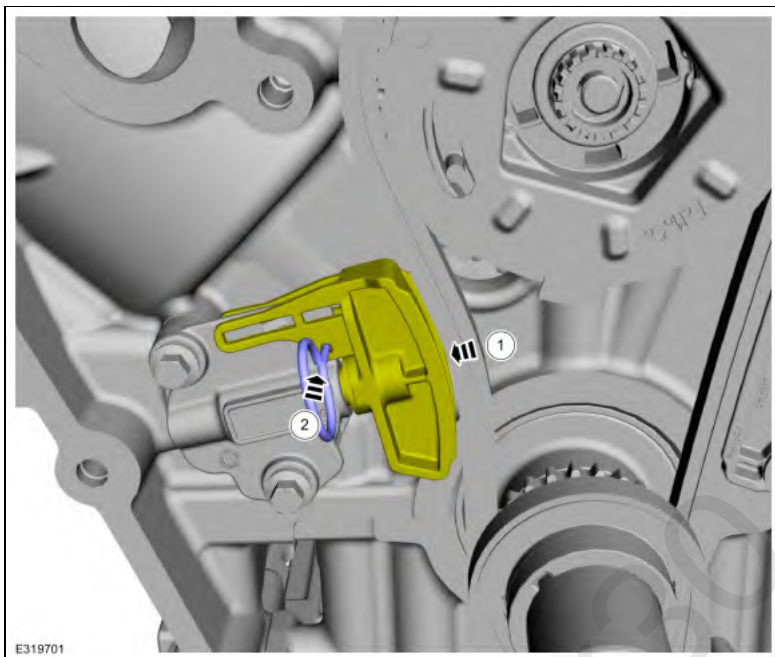

4. Remove the bolts and the timing chain tensioner.

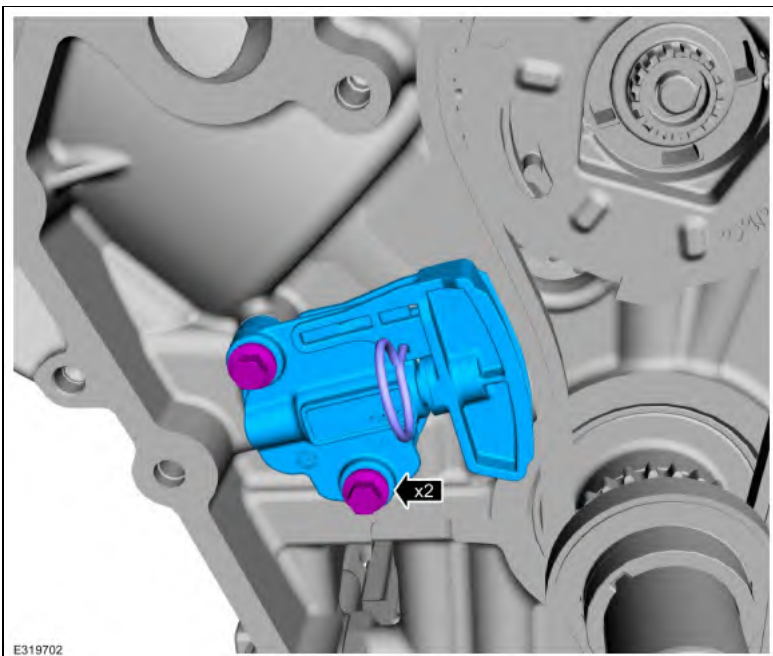


Installation

1. Install the timing chain tensioner and the bolts.


Torque:

Stage 1: 89 lb.in (10 Nm)

Stage 2: 45Â°

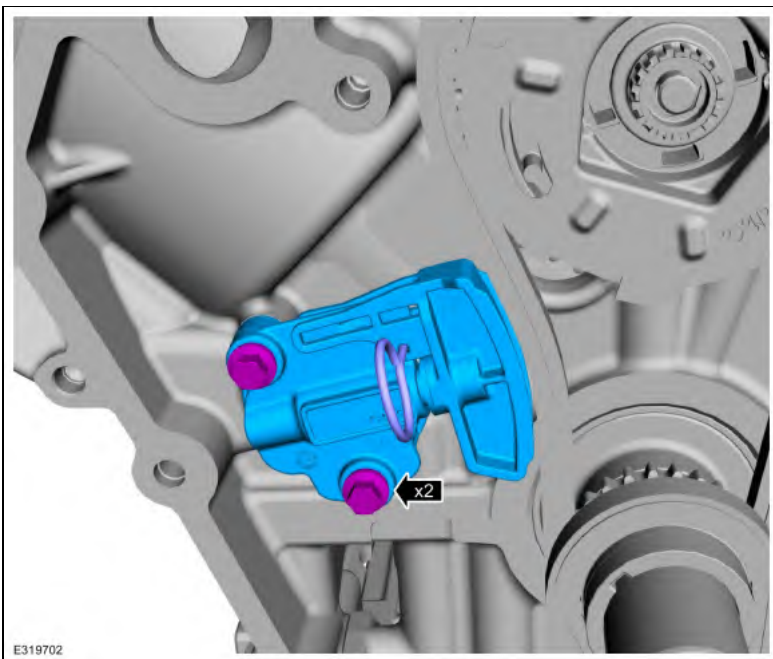

2. Remove the locking pin to release the timing chain tensioner plunger.

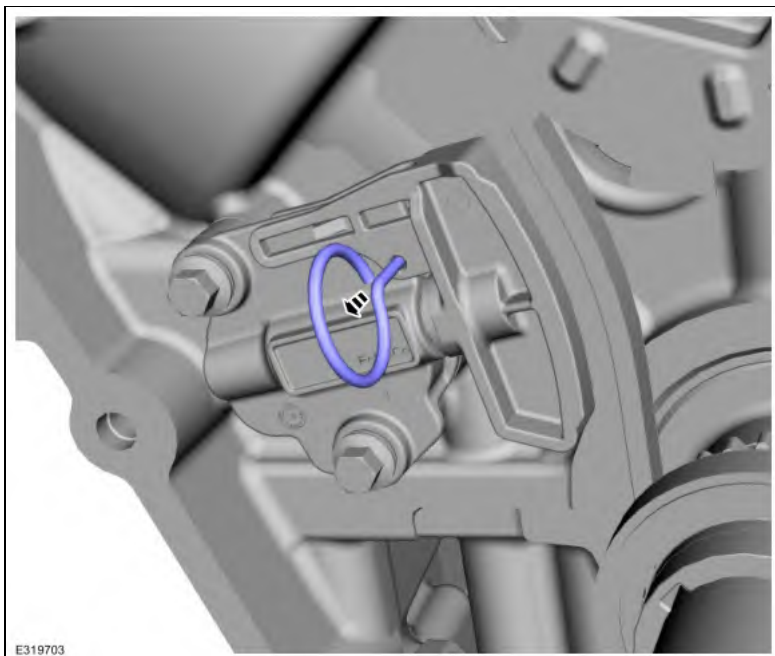

3. Install the engine front cover.

Refer to: Engine Front Cover (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).