





Valve Cover LH

Removal


1. Follow directions to release quick release couplings type 3. Disconnect and remove the crankcase vent tube.
Refer to: Quick Release Coupling (310-00D) .

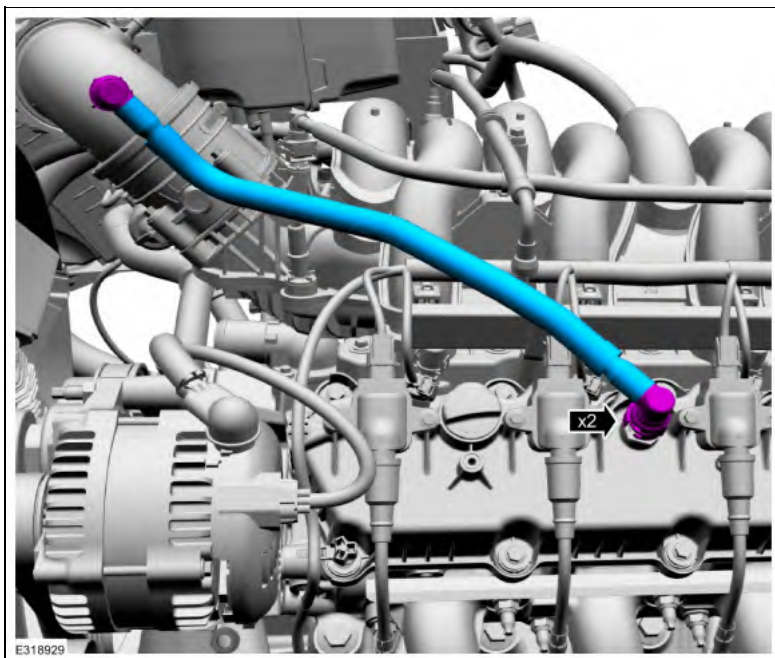

  
2.
 1. Disconnect the ignition coil electrical connectors.
 2. Detach the wiring harness retainers and position the harness aside.

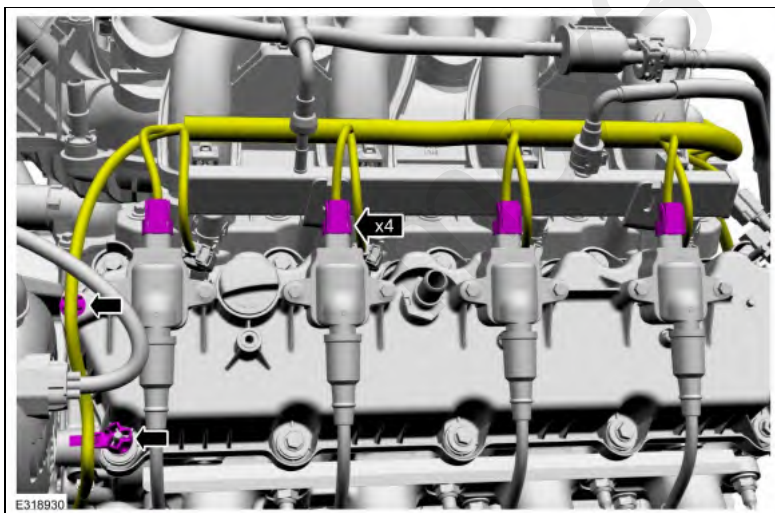

3. Remove the nut and position the RFI capacitor aside.

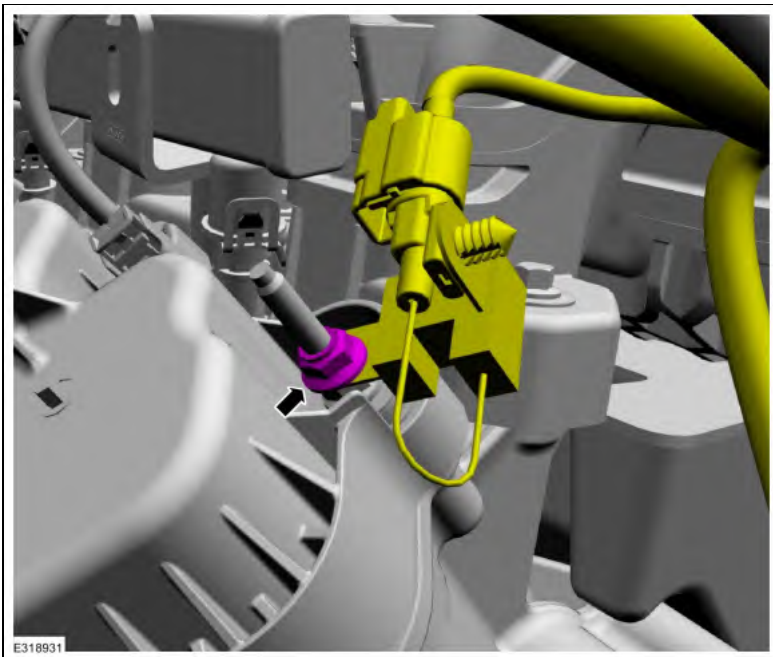


4. Disconnect the spark plug wires from the ignition coils.

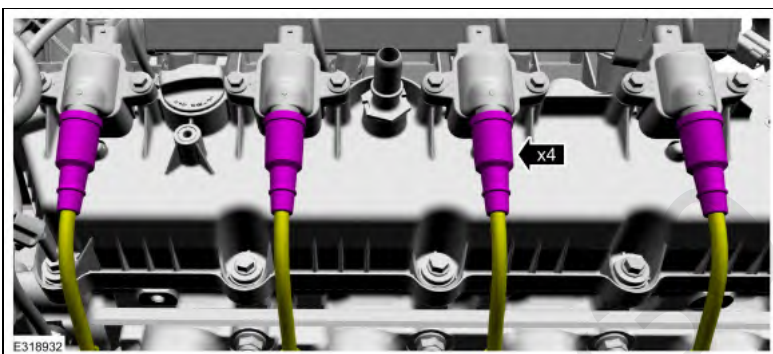


5. **NOTE:** Wiring harness removed from view for clarity.

Loosen the fasteners and remove the valve cover.

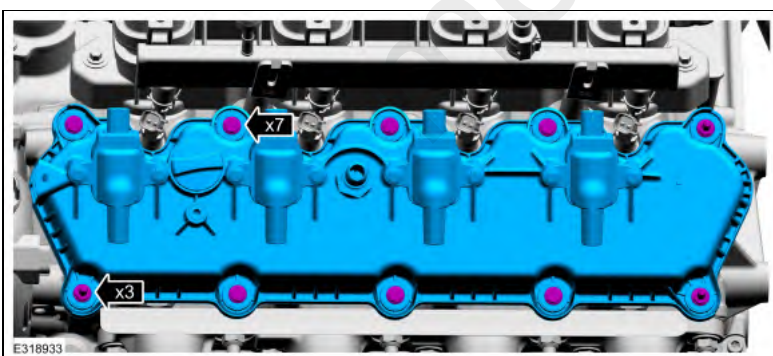


6. Remove and discard the gasket.

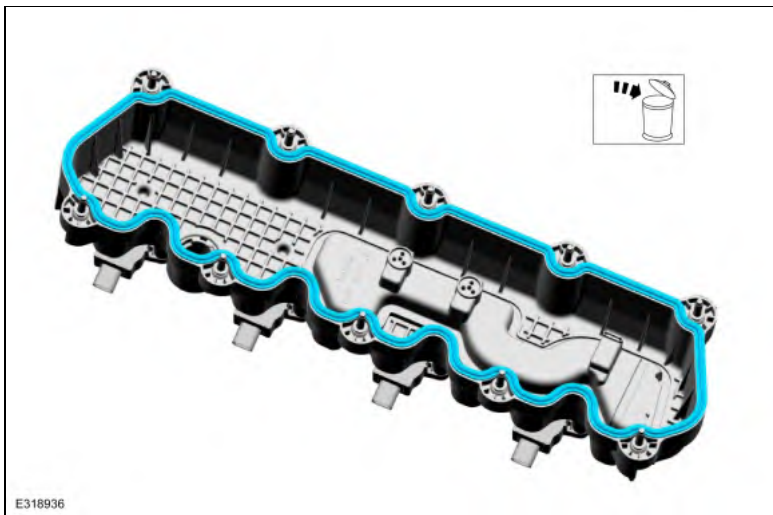


Installation


- 1. Install a new gasket.

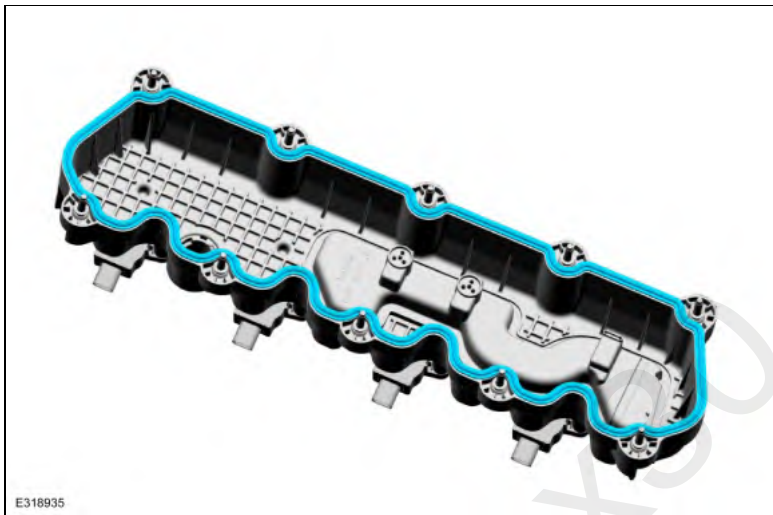



- 2. Install the valve cover and finger tighten the bolts.
Torque: 89 lb.in (10 Nm)

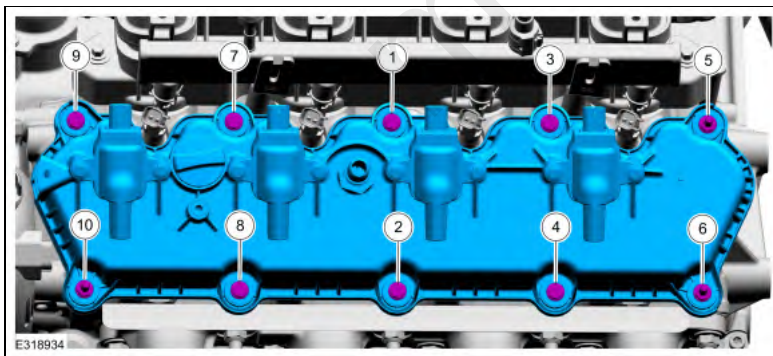


- 3. Connect the spark plug wires to the ignition coils.

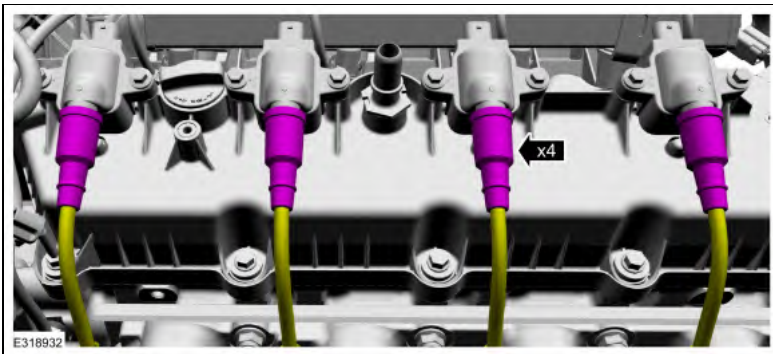

4. Position the RFI capacitor and install the nut.
Torque: 53 lb.in (6 Nm)

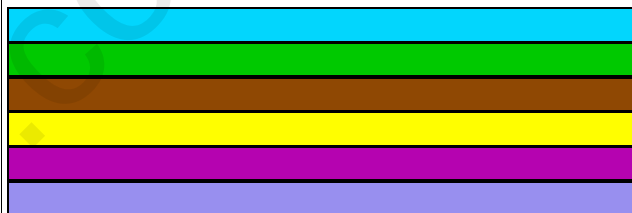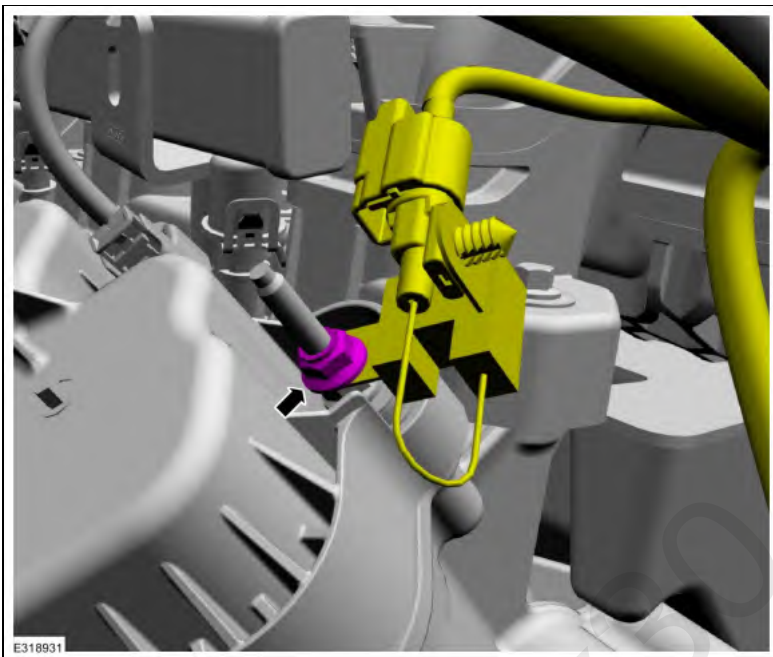

5.
 1. Position the wiring harness and attach the retainers.
 2. Connect the ignition coil electrical connectors.

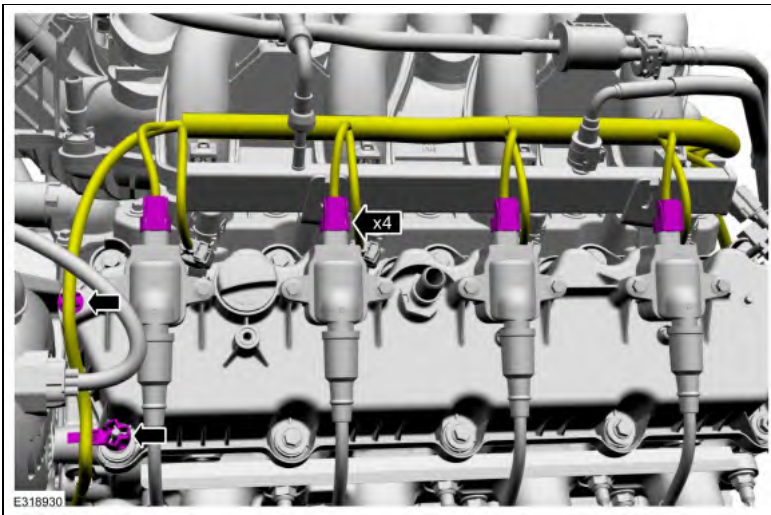

6. Follow directions to connect quick release couplings type 3. Install and connect the crankcase vent tube.
Refer to: Quick Release Coupling (310-00D) .

