


Valve Tappets

Removal

1. Remove the cylinder head for the side(s) of the engine being serviced.
Refer to: Cylinder Head RH (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
Refer to: Cylinder Head LH (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
2. **NOTE:** If the components are to be reinstalled, they must be installed in the same positions or engine damage may occur. Mark the components for installation into their original locations.


NOTE: LH shown, RH similar.

Remove the bolt, the guide plate and the valve tappet.

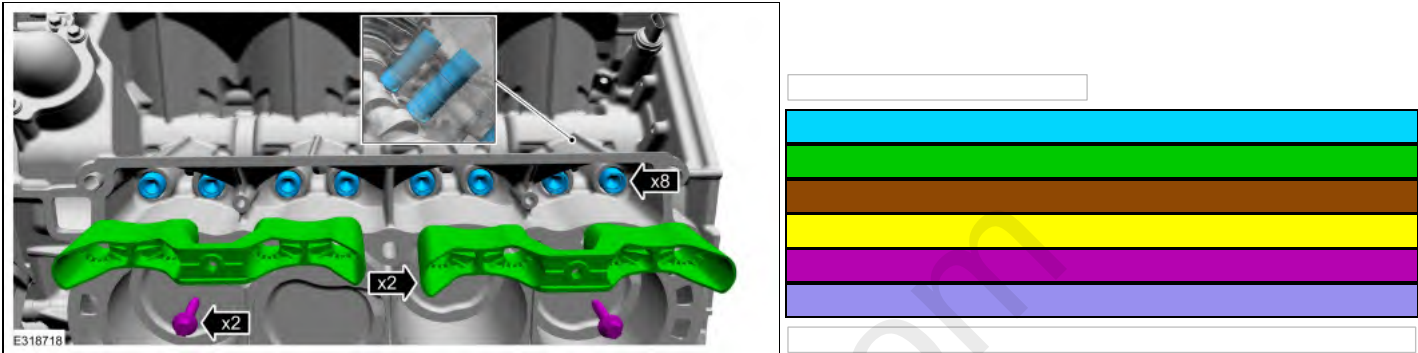


Installation

1. Lubricate the valve tappet with clean engine oil.

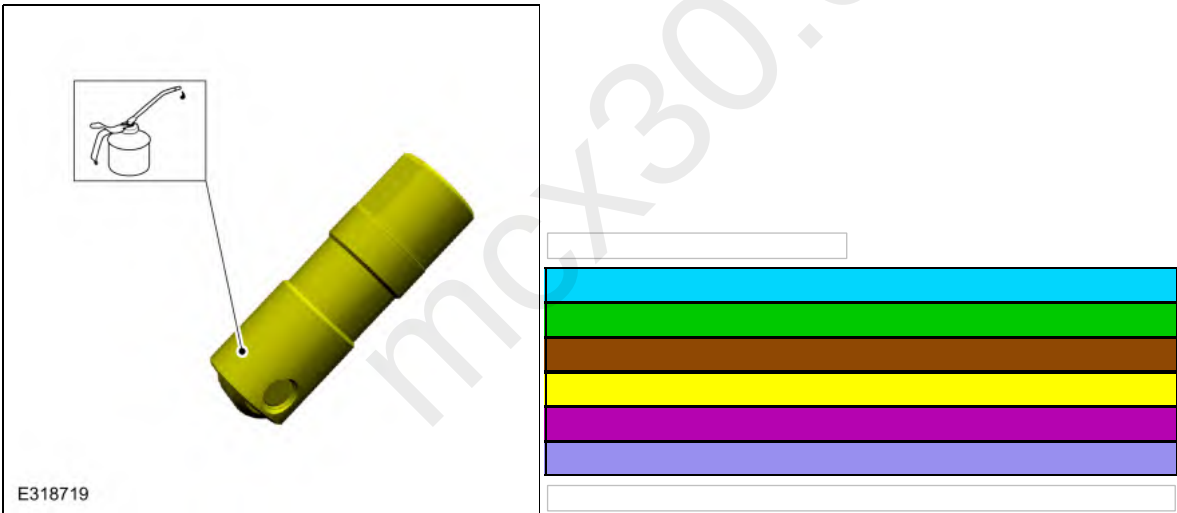

2. Install the valve tappet, the guide plate and the bolt.
Torque: 89 lb.in (10 Nm)

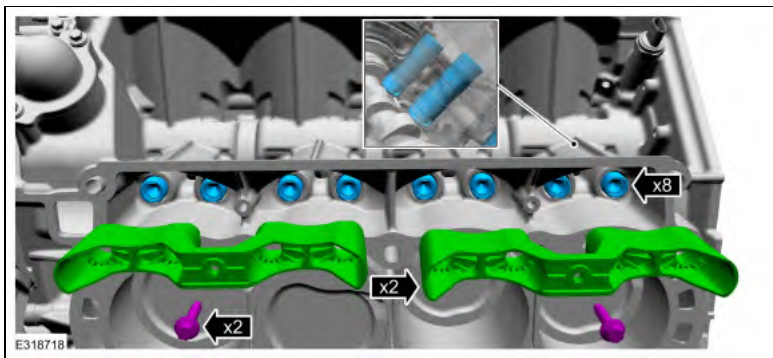

3. Install the cylinder head for the side(s) of the engine being serviced.
Refer to: Cylinder Head RH (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).
Refer to: Cylinder Head LH (303-01C Engine - 7.3L 2V DEVCT V8 (239kW/320PS) (J0), Removal and Installation).

mcx30.com