


Engine Cooling - Component Location

NOTE: Coolant temperature will vary with ambient temperature and load. Temperatures shown are for ambient temperature of 38°C (100°F). Red arrows indicate a temperature over 90°C (194°F), Orange arrows indicate a temperature of approximately 90°C (194°F), Blue arrows indicate a temperature below 90°C (194°F).

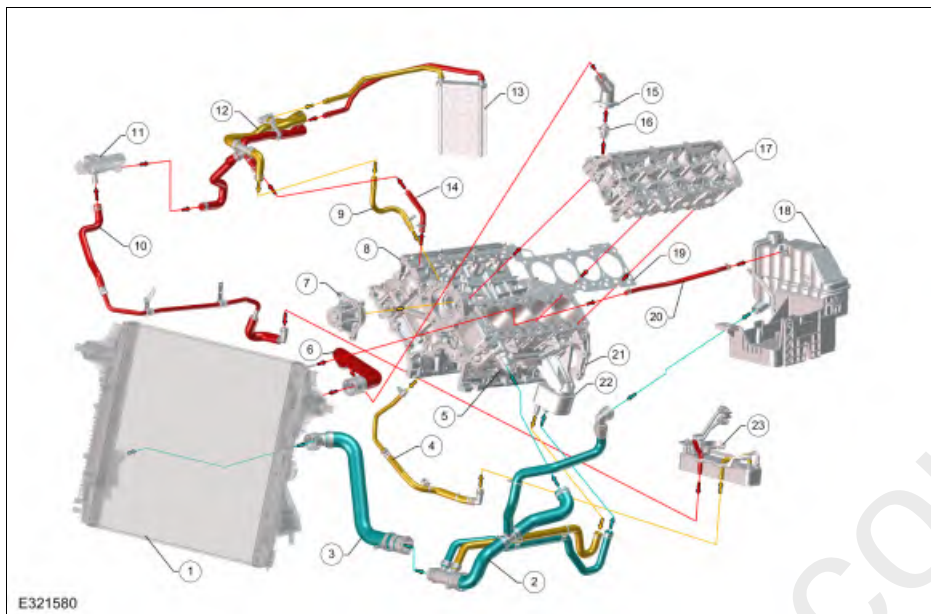

Item	Description
1	Radiator
2	Degas bottle hose assembly
3	Lower radiator hose
4	Transmission oil cooler inlet hose
5	Oil filter adapter
6	Upper radiator hose
7	Coolant pump
8	Cylinder head RH
9	Heater outlet hose
10	Transmission oil cooler outlet hose
11	Transmission fluid heater coolant control valve
12	Heater hose assembly
13	Heater core
14	Heater inlet hose
15	Coolant outlet connector
16	Thermostat
17	Cylinder head LH
18	Degas bottle and battery tray assembly
19	Cylinder head gasket LH
20	Radiator overflow hose
21	Cylinder block
22	Engine oil cooler
23	Transmission oil cooler