

Cooling Fan


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. The cooling fan is removed in the cooling fan shroud procedure.
Refer to: Cooling Fan Shroud (303-03A Engine Cooling - 6.2L V8, Removal and Installation).

NOTE: This step is only necessary when installing a new component.

2. Remove the bolts and separate the cooling fan from the cooling fan clutch.
Torque: 93 lb.in (10.5 Nm)

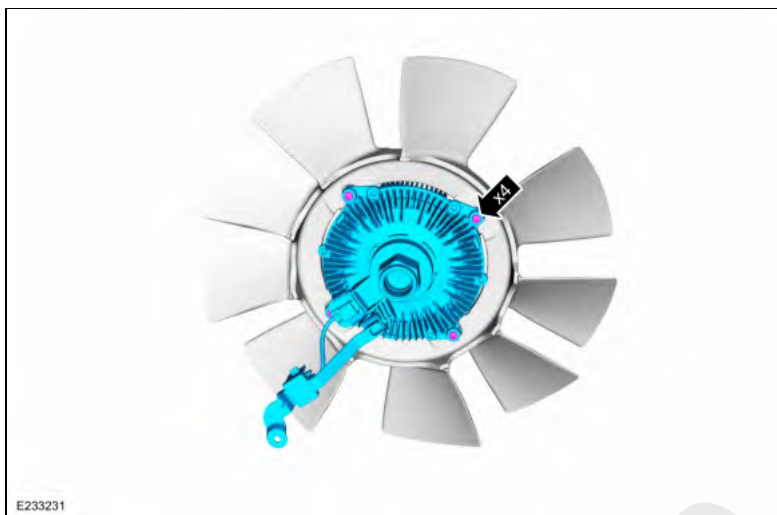

Installation

1. To install, reverse the removal procedure.