


Thermostat


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Drain the cooling system.
Refer to: Engine Cooling System Draining, Vacuum Filling and Bleeding (303-03A Engine Cooling - 6.2L V8, General Procedures).
2. Remove the air cleaner outlet pipe.
Refer to: Air Cleaner Outlet Pipe (303-12A Intake Air Distribution and Filtering - 6.2L V8, Removal and Installation).
3. Remove the bolts and position the coolant outlet connection aside.
Torque: 89 lb.in (10 Nm)

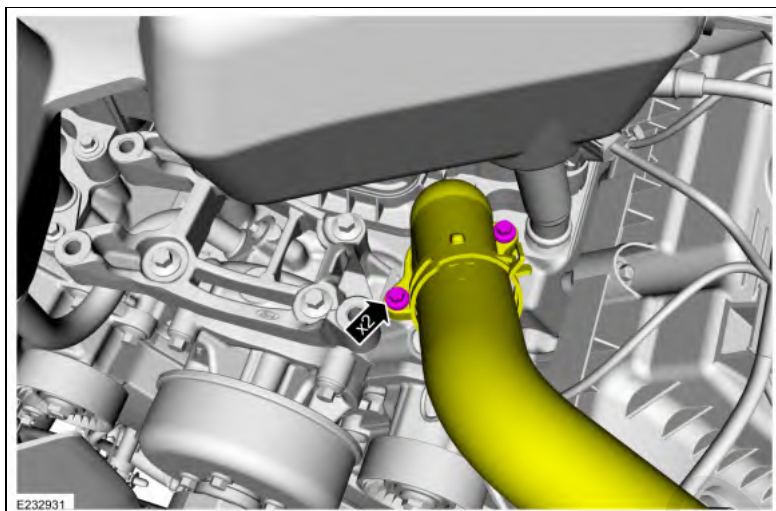

4. Remove the thermostat and discard the O-ring seal.

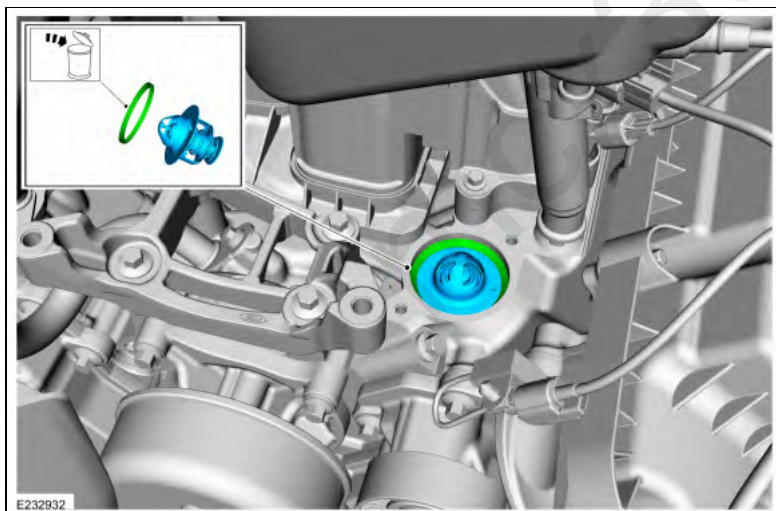

Installation

1. To install, reverse the removal procedure.
2. Fill and bleed the cooling system.
Refer to: Engine Cooling System Draining, Vacuum Filling and Bleeding (303-03A Engine Cooling - 6.2L V8, General Procedures).