


Thermostat


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Drain the cooling system.
Refer to: Engine Cooling System Draining, Vacuum Filling and Bleeding (303-03B Engine Cooling - 6.7L Power Stroke Diesel, General Procedures).
2. Pull the upper radiator hose spring clip until the end of the clip is in the detent on the quick connect coupling and disconnect the upper radiator hose.


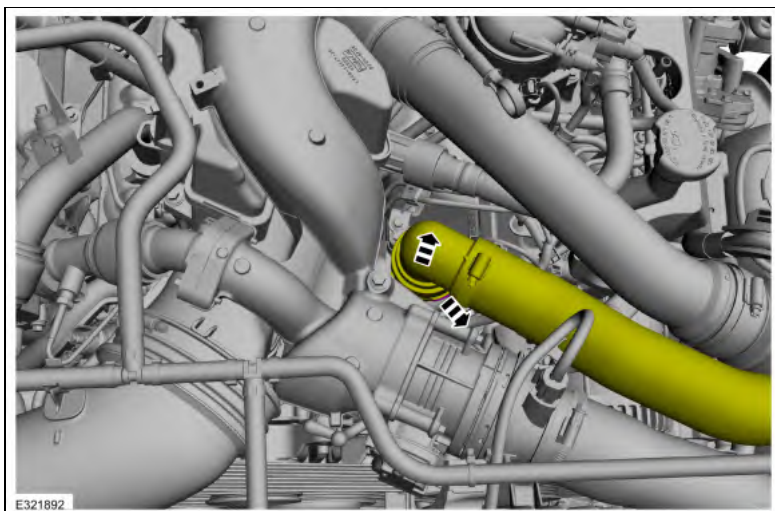


3. Remove the bolts and the coolant outlet connection.
Torque: 89 lb.in (10 Nm)

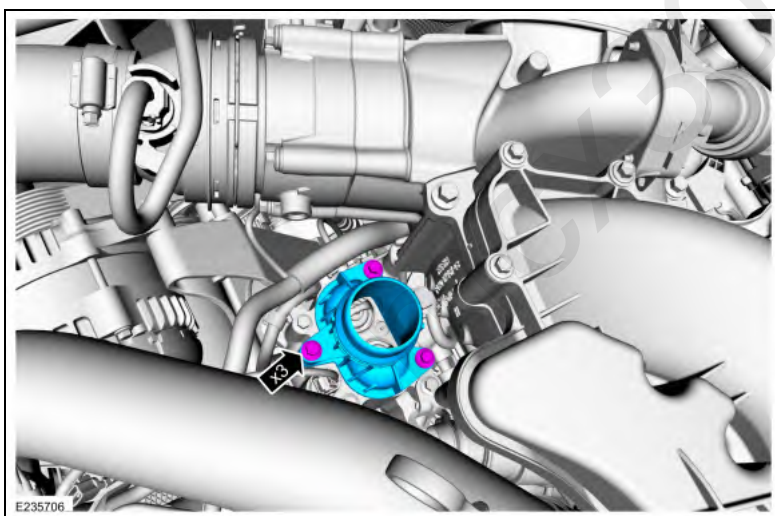

4. **NOTE:** During installation verify the thermostat vent hole is at the 12 o'clock position.

 - Remove the thermostat assembly
- Inspect the thermostat gasket and replace it if necessary.

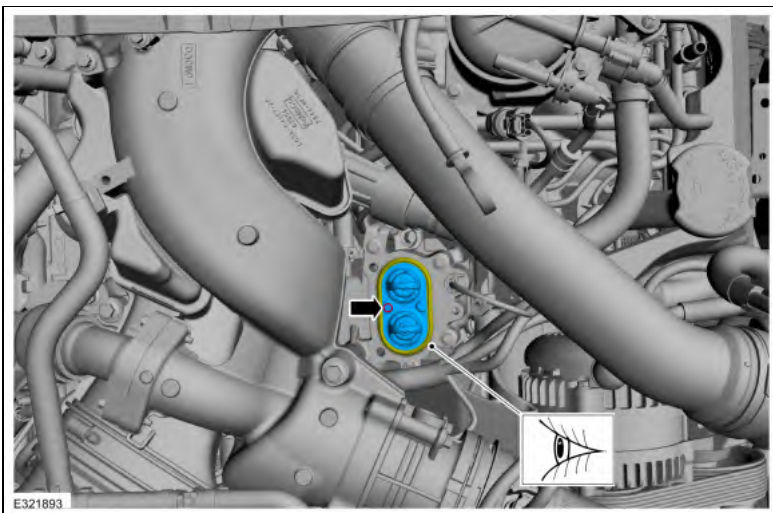

Installation

1. To install, reverse the removal procedure.

NOTICE: Evaluate the cooling system condition before filling the cooling system. Failure to follow these instructions can damage the engine.

2. Evaluate the cooling system condition.
Refer to: Engine Cooling System Condition Evaluation (303-03B Engine Cooling - 6.7L Power Stroke Diesel, General Procedures).

mcx30.com